# PEERLESS® PINNACLE® HIGH ALTITUDE SUPPLEMENT

The following information is intended to supplement the Installation, Operation, and Maintenance Manual (PI8008) by providing information for Pinnacle Models which are designed for LP installations at greater than 7000 feet above mean sea level. This information is to be used in conjunction with the Installation, Operation, and Maintenance Manual.


#### **↑** WARNING

Liquefied Petroleum (LP) Gas or Propane is heavier than air and, in the event of a leak, may collect in low areas such as basements or floor drains. The gas may then ignite resulting in a fire or explosion.

The following requirements for liquefied petroleum (LP) gas from the Uniform Mechanical Code, Section 304.6, may be in effect by local codes in your area:

"Liquefied petroleum gas-burning appliances shall not be installed in a pit, basement, or similar location where heavier-than-air gas might collect. Appliances so fueled shall not be installed in an above-grade under-floor space or basement unless such location is provided with an approved means for removal of unburned gas."


The following Boiler Control Board Wiring Schematic is to be used in lieu of Figure 6.3 in the Electrical Section of the Pinnacle Installation, Operation, and Maintenance Manual (Pl8008). This shows the wiring of the Hot Surface Igniter. Note that there are changes to the programming of the P125 board that allow this igniter to operate.

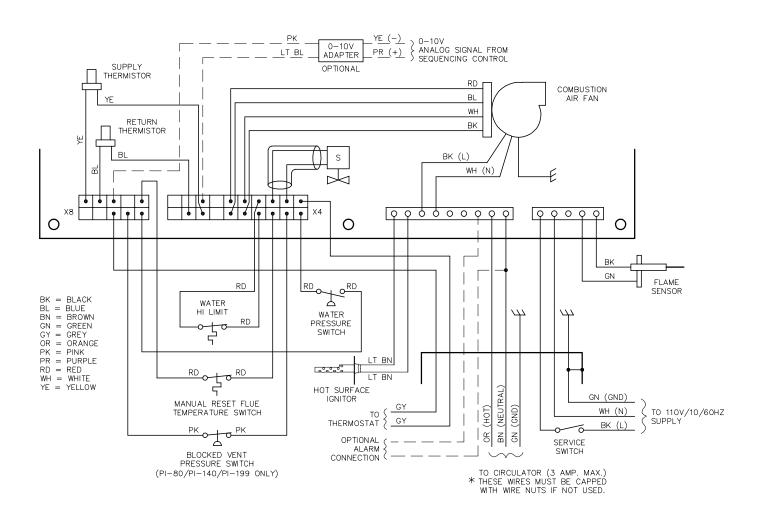


## **⚠ WARNING**

Do not make these wiring changes to boilers with control boards that are configured for spark ignition. Doing so may result in serious injury or death.

The following Repair Parts listings replace those in the Repair Parts Section of the Installation, Operation, and Maintenance Manual (PI8008).

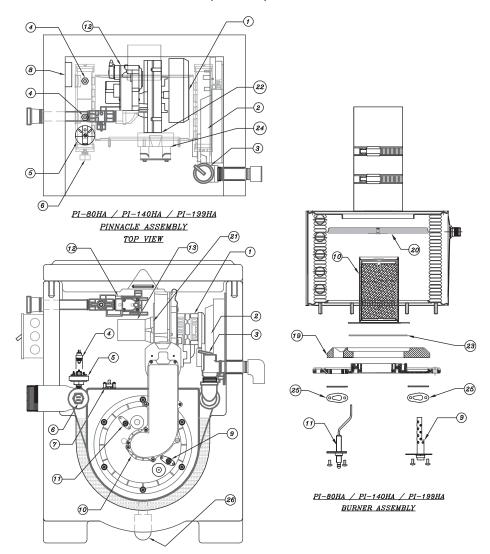


PI-80HA / PI-140HA / PI-199HA
PINNACLE ASSEMBLY
FRONT VIEW

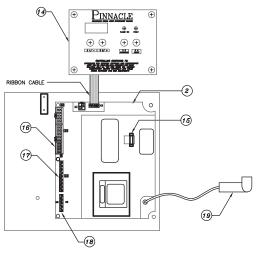


P125 CONTROL BOARD ASSEMBLY

#### BOILER COMPONENTS

ITEM NO.	DESCRIPTION	STOCK CODE		
		PI-80HA	PI-140HA	PI-199H
1	COMBUSTION AIR BLOWER (INCLUDES OUTLET GASKET)	91423	91424	91425
2	P125 CONTROL BOARD (INCLUDES TRANSFORMER)	91501	91502	91503
3	RELIEF VALVE - 30 PSI	91430		
4	SUPPLY/RETURN THERMISTOR	91435		
5	MINIMUM WATER PRESSURE LIMIT SWITCH	91427		
6	HIGH WATER TEMPERATURE LIMIT SWITCH	91410		
7	HIGH VENT TEMPERATURE LIMIT SWITCH (210°F)	91429		
8	BLOCKED VENT PRESSURE SWITCH	91480		
9	HOT SURFACE IGNITOR	91485		
10	BURNER (INCLUDES GASKET)	91407	91408	91409
11	FLAME SENSOR (INCLUDES GASKET)	91412		
12	GAS VALVE	91426		
13	VENTURI	91481 91482		
14	P125 DISPLAY MODULE (INCLUDES RIBBON CABLE)	91461		
15	CONTROL BOARD FUSE	91471		
16	WIRING HARNESS - 10/20 PIN LOW VOLTAGE	91463 91462		
17	WIRING HARNESS - 9 PIN, 120 VOLT	91487 91486		
18	WIRING HARNESS - 5 PIN, 120 VOLT	91473		
19	MOLDED CERAMIC REFRACTORY	91433		
20	CERAMIC TARGET WALL	91432		
21	COMBUSTION AIR BLOWER INLET GASKET	91492		
22	COMBUSTION AIR BLOWER OUTLET GASKET	91443 91441		
23	BURNER GASKET	91440		
24	SPACER BLOCK OUTLET GASKET	91442		
25	IGNITOR ELECTRODE/FLAME SENSOR GASKET	91491		
26	CONDENSATE DRAIN TRAP	91494	91493	91494

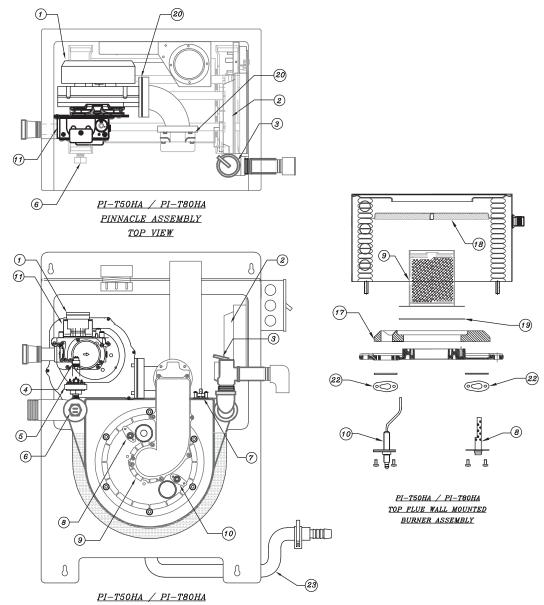

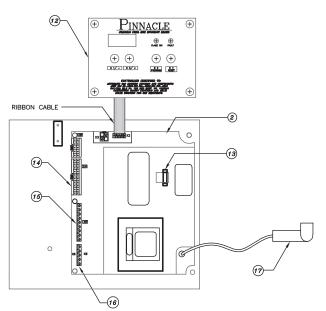

### BOILER COMPONENTS

ITEM	DESCRIPTION		STOCK CODE		
NO.	DESCRIPTION	PI-T50HA	PI-T80HA		
1	COMBUSTION AIR BLOWER (INCLUDES OUTLET GASKET)	91423	91423		
2	P125 CONTROL BOARD (INCLUDES TRANSFORMER)	91506	91507		
3	RELIEF VALVE - 30 PSI	91430			
4	SUPPLY/RETURN THERMISTOR	91435			
5	MINIMUM WATER PRESSURE LIMIT SWITCH	91427			
6	HIGH WATER TEMPERATURE LIMIT SWITCH	91410			
7	HIGH VENT TEMPERATURE LIMIT SWITCH (210'F)	91429			
8	HOT SURFACE IGNITOR (INCLUDES GASKET)	91485			
9	BURNER (INCLUDES GASKET)	91472	91407		
10	FLAME SENSOR (INCLUDES GASKET)	91412			
11	GAS VALVE	91478	91479		
12	P125 DISPLAY MODULE (INCLUDES RIBBON CABLE)	91461			
13	CONTROL BOARD FUSE	91471			
14	WIRING HARNESS - 10/20 PIN LOW VOLTAGE	91464			
15	WIRING HARNESS - 9 PIN, 120 VOLT	91486			
16	WIRING HARNESS - 5 PIN, 120 VOLT	91473			
17	MOLDED CERAMIC REFRACTORY	91433			
18	CERAMIC TARGET WALL	91432			
19	BURNER GASKET	91440			
20	ELBOW INLET/OUTLET GASKET	91500			
21	IGNITOR/FLAME SENSOR GASKET	91491			
22	CONDENSATE DRAIN TRAP	91497			

P125 CONTROL BOARD ASSEMBLY



## PB HEAT, LLC P.O. BOX 447 • NEW BERLINVILLE, PA 19545-0447