

PEERLESS® PINNACLE® BOILERS

STAINLESS STEEL VENT TERMINATION KIT Installation Instructions

CAUTION

The Stainless Steel Vent Termination Kits are for use as sidewall termination kits only.

1. Locate vent termination by referring to Section 5, "Venting," of the Peerless® Pinnacle® Installation, Operation & Maintenance Manual.
2. Separate the vent terminal backing plate from the face by removing the four (4) screws. Refer to Figure 1.
3. Fasten the backing plate to face of the building by using the pre-drilled mounting holes on the backing plate.
4. Using a core drill or hole saw, cut two holes, sized as indicated in Table 1, through the building wall. Use the back plate as a template for the location of the holes.

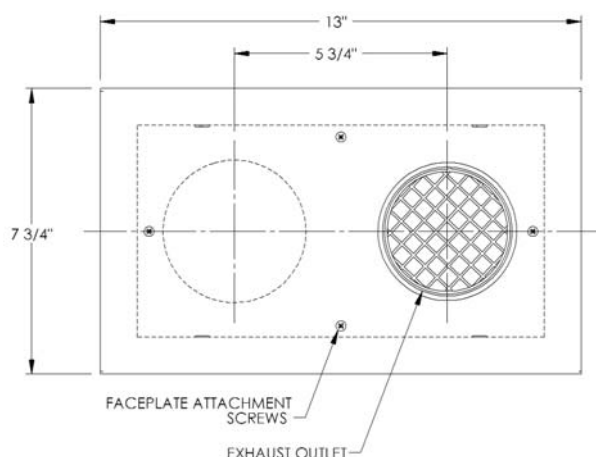


Figure 1

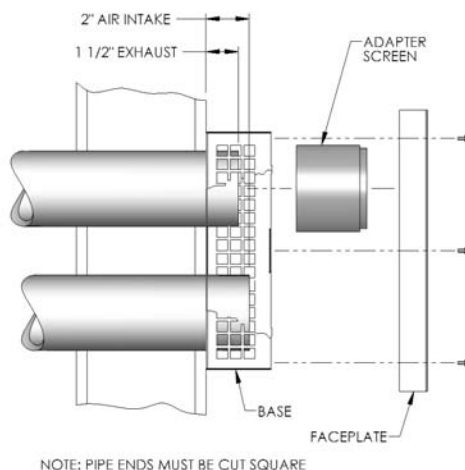


Figure 2

Table 1

Stock Code	Vent Size	Hole Diameter Through Wall
91465	2"	2-1/2"
91402	3"	3-1/2"
91401	4"	4-1/2"

5. Install air intake and exhaust vent pipes through the holes making sure there is 2" of pipe protruding on the intake, and 1 1/2" of exhaust pipe protruding beyond the face of the backing plate. Pipes must be cut perfectly square. Refer to Figure 2.
6. Assemble face of vent terminal to vent terminal backing plate. Use the four (4) screws removed in step #2.

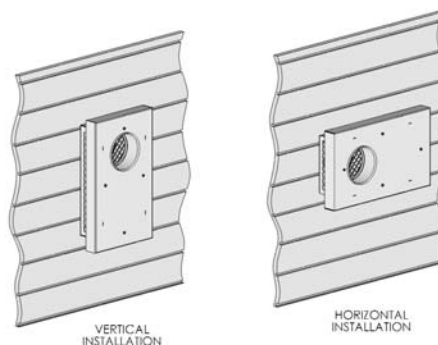


Figure 3

NOTE:

TERMINATION KIT CAN BE MOUNTED EITHER HORIZONTALLY OR VERTICALLY AS SHOWN IN FIGURE 3. REFER TO FIGURES 4 & 5 FOR MULTIPLE VENT KIT INSTALLATIONS.

STAINLESS STEEL VENT TERMINATION KIT

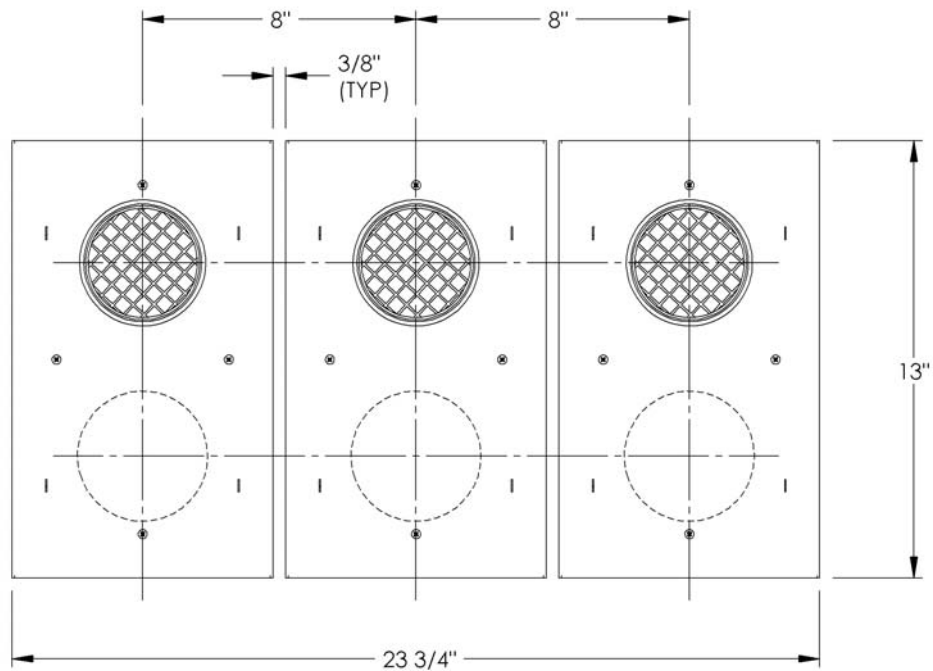


Figure 4: Multiple Stainless Steel Vertical Vent Kit Installation – Front View

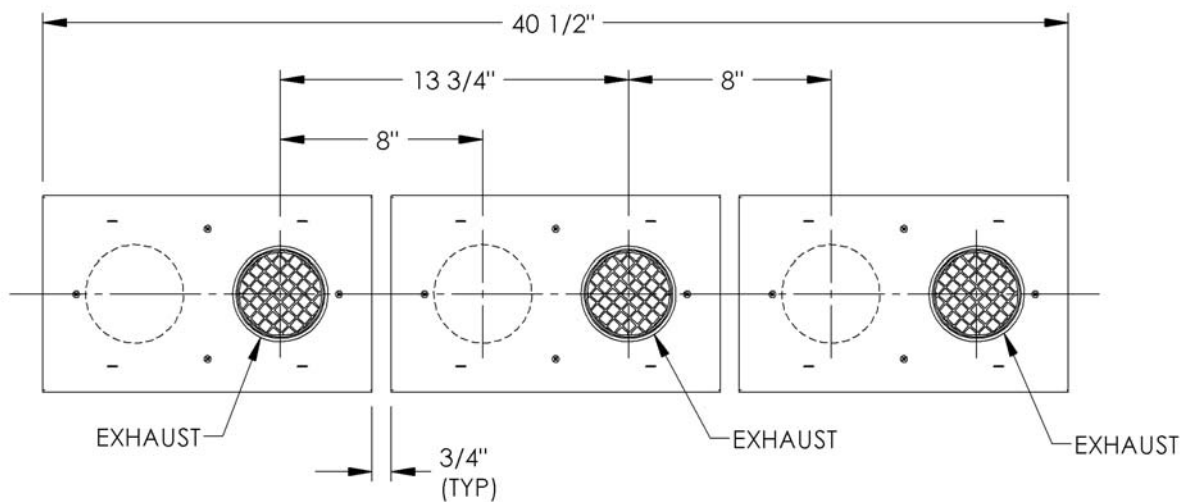


Figure 5: Multiple Stainless Steel Horizontal Vent Kit Installation – Front View



PB HEAT, LLC

P.O. BOX 447 • NEW BERLINVILLE, PA 19545-0447
PeerlessBoilers.com