



PEERLESS PINNACLE™ BOILERS

BOILER STAND Assembly Instructions

Assemble stand as shown in the figures below. Position stand and boiler to allow for attachment of exhaust and air inlet pipes at rear of boiler jacket. Alternate wall-mount position is not recommended for PI-140 or PI-199 due to the space required for the vent and air inlet pipes.

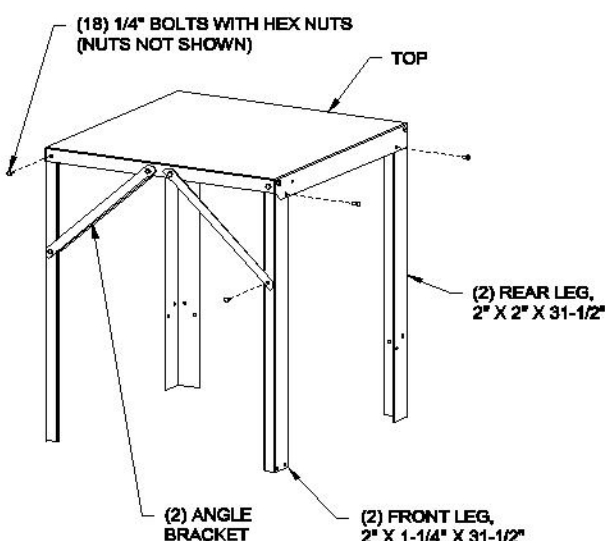

Standard Position

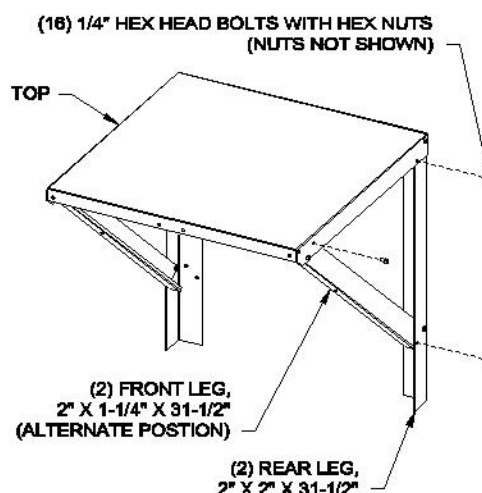

Alternate Wall-mounted Position
(PI-80 only)



PB HEAT, LLC

P.O. Box 447 · 9th & Rothermal Dr. · New Berlinville, PA 19545
www.peerlessboilers.com