

Peerless® Pinnacle®

Stainless Steel Gas Boilers Rev 2

WARNING

If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- **WHAT TO DO IF YOU SMELL GAS**
 - Do not try to light any appliance.
 - Do not touch any electrical switch; do not use any phone in your building.
 - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
 - If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency or the gas supplier.



As an ENERGY STAR® Partner, PB Heat, LLC has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

Installation, Operation & Maintenance Manual



TABLE OF CONTENTS

USING THIS MANUAL	1	E. EXHAUST VENT AND AIR INLET PIPE INSTALLATION	20
A. INSTALLATION SEQUENCE	1	F. EXHAUST TAPPING FOR VENT SAMPLE	24
B. SPECIAL ATTENTION BOXES	1	G. CONDENSATE DRAIN INSTALLATION . . .	24
1. PREINSTALLATION	2	H. BOILER REMOVAL FROM COMMON VENTING SYSTEM	24
A. GENERAL	2	6. ELECTRICAL	25
B. CODES & REGULATIONS	2	A. WIRING	25
C. ACCESSIBILITY CLEARANCES	3	B. SEQUENCE OF OPERATION	26
D. COMBUSTION AND VENTILATION AIR . . .	3	C. SAFETY INTERLOCKS	28
E. PLANNING THE LAYOUT	3	D. CONTROL FUNCTIONS	29
2. BOILER SET-UP	4	E. HEATING CURVE	31
A. GENERAL	4	7. START-UP PROCEDURES	33
B. WALL HUNG BOILERS	4	A. COMPLETING THE INSTALLATION	33
C. FLOOR MOUNTED BOILERS	4	B. LIGHTING/OPERATING PROCEDURES . . .	34
3. WATER PIPING AND CONTROLS	5	C. CHECK-OUT PROCEDURE	35
A. GENERAL	5	8. TROUBLESHOOTING	37
B. OPERATING PARAMETERS	5	A. BOILER ERROR CODES	37
C. SYSTEM COMPONENTS	5	B. BOILER FAULT CODES	37
D. SYSTEM PIPING	7	9. MAINTENANCE	39
E. FREEZE PROTECTION	8	A. GENERAL (WITH BOILER IN USE)	40
F. SPECIAL APPLICATIONS	8	B. WEEKLY (WITH BOILER IN USE)	40
4. GAS PIPING	15	C. ANNUALLY (BEFORE START OF HEATING SEASON)	40
A. GENERAL	15	D. CONDENSATE CLEANING INSTRUCTIONS	40
B. FUEL LINE SIZING	15	E. COMBUSTION CHAMBER COIL CLEANING INSTRUCTIONS	41
C. GAS SUPPLY PIPING INSTALLATION . . .	15	10. BOILER DIMENSIONS & RATINGS	42
D. GAS SUPPLY PIPING – OPERATION . . .	16	A. BOILER DIMENSIONS	42
E. MAIN GAS VALVE – OPERATION	17	11. REPAIR PARTS	46
5. VENTING, INTAKE AIR & CONDENSATE	18	APPENDIX A. STARTUP COMBUSTION RECORD	50
A. GENERAL	18		
B. APPROVED MATERIALS FOR EXHAUST VENT AND INTAKE AIR PIPE	18		
C. EXHAUST VENT / AIR INTAKE PIPE LOCATION	18		
D. EXHAUST VENT AND INTAKE AIR PIPE SIZING	19		

USING THIS MANUAL

A. INSTALLATION SEQUENCE

Follow the installation instructions provided in this manual in the order shown. The order of these instructions has been set in order to provide the installer with a logical sequence of steps that will minimize potential interferences and maximize safety during boiler installation.

B. SPECIAL ATTENTION BOXES

Throughout this manual you will see special attention boxes intended to supplement the instructions and make special notice of potential hazards. These categories mean, in the judgment of PB Heat, LLC:



DANGER

Indicates a condition or hazard which will cause severe personal injury, death or major property damage.



WARNING

Indicates a condition or hazard which may cause severe personal injury, death or major property damage.



CAUTION

Indicates a condition or hazard which will or can cause minor personal injury or property damage.



NOTICE

Indicates special attention is needed, but not directly related to potential personal injury or property damage.

1. PREINSTALLATION

A. GENERAL

1. Pinnacle boilers are supplied completely assembled as packaged boilers. The package should be inspected for damage upon receipt and any damage to the unit should be reported to the shipping company and wholesaler. This boiler should be stored in a clean, dry area.
2. Carefully read these instructions and be sure to understand the function of all connections prior to beginning installation. Contact your PB Heat, LLC Representative for help in answering questions.
3. This boiler must be installed by a qualified contractor. The boiler warranty may be voided if the boiler is not installed correctly.
4. A hot water boiler installed above radiation or as required by the Authority having jurisdiction, must be provided with a low water fuel cut-off device either as part of the boiler or at the time of installation.
5. This boiler can be installed at high altitudes above 5,000 feet with no burner adjustments. This applies to boilers equipped for firing natural gas or liquefied petroleum (LP) gas.

B. CODES & REGULATIONS

1. Installation and repairs are to be performed in strict accordance with the requirements of state and local regulating agencies and codes dealing with boiler and gas appliance installation.
2. In the absence of local requirements the following should be followed.
 - a. ASME Boiler and Pressure Vessel Code, Section IV - "Heating Boilers"
 - b. ASME Boiler and Pressure Vessel Code, Section VI - Recommended Rules for the Care and Operation of Heating Boilers"



WARNING

Liquefied Petroleum (LP) Gas or Propane is heavier than air and, in the event of a leak, may collect in low areas such as basements or floor drains. The gas may then ignite resulting in a fire or explosion.

- c. ANSI Z223.1/NFPA 54 - "National Fuel Gas Code"
- d. ANSI/NFPA 70 - "National Electrical Code"
- e. ANSI/NFPA 211 - "Chimneys, Fireplaces, Vents and Solid Fuel Burning Appliances"

3. Where required by the authority having jurisdiction, the installation must conform to the Standard for Controls and Safety Devices for Automatically Fired Boilers, ANSI/ASME CSD-1.

****Please read if installing in Massachusetts****

Massachusetts requires manufacturers of Side Wall Vented boilers to provide the following information from the Massachusetts code:

- A hard wired carbon monoxide detector with an alarm and battery back-up must be installed on the floor level where the gas equipment is to be installed AND on each additional level of the dwelling, building or structure served by the side wall horizontal vented gas fueled equipment.
- In the event that the side wall horizontally vented gas fueled equipment is installed in a crawl space or an attic, the hard wired carbon monoxide detector with alarm and battery back-up may be installed on the next adjacent floor level.
- Detector(s) must be installed by qualified licensed professionals.
- **APPROVED CARBON MONOXIDE DETECTORS:** Each carbon monoxide detector shall comply with NFPA 720 and be ANSI/UL 2034 listed and IAS certified.
- **SIGNAGE:** A metal or plastic identification plate shall be permanently mounted to the exterior of the building at a minimum height of eight (8) feet above grade directly in line with the exhaust vent terminal for the horizontally vented gas fueled heating appliance or equipment. The sign shall read, in print size no less than one-half (1/2) inch in size, **"GAS VENT DIRECTLY BELOW. KEEP CLEAR OF ALL OBSTRUCTIONS"**.
- **EXEMPTIONS** to the requirements listed above:
 - The above requirements do not apply if the exhaust vent termination is seven (7) feet or more above finished grade in the area of the venting, including but not limited to decks and porches.
 - The above requirements do not apply to a boiler installed in a room or structure separate from the dwelling, building or structure used in whole or in part for residential purposes.
- The boiler installation manual, vent manufacturer's installation manual, and this supplement shall remain with the boiler at the completion of the installation.

See latest edition of Massachusetts Code 248 CMR for complete verbage and also for additional (non-vent related) requirements (248 CMR is available online).

If your installation is NOT in Massachusetts, please see your authority of jurisdiction for requirements that may be in effect in your area. In the absence of such requirements, follow the *National Fuel Gas Code*, ANSI Z223.1/NFPA 54 and/or CAN/CSA B149.1, *Natural Gas and Propane Installation Code*.

C. ACCESSIBILITY CLEARANCES

1. The Pinnacle boiler is certified for closet installations with zero clearance to combustible construction. In addition, it is design certified for use on combustible floors.
2. Refer to Figure 1.1 for the recommended clearance to allow for reasonable access to the boiler. Local codes or special conditions may require greater clearances.

D. COMBUSTION AND VENTILATION AIR

1. The Pinnacle boiler is designed only for operation with combustion air piped from outside (sealed combustion). PVC pipe must be supplied between the air intake connection at the rear of the boiler and an outside wall or roof.
2. No additional combustion or ventilation air is required for this appliance.

⚠ DANGER

Do not install this boiler on carpeting.

3. Refer to Section 5 of this manual, Venting, for specific instructions for piping combustion air.

E. PLANNING THE LAYOUT

1. Prepare sketches and notes showing the layout of the boiler installation to minimize the possibility of interferences with new or existing equipment, piping, venting and wiring.
2. The following sections of this manual should be reviewed for consideration of limitations with respect to:
 - a. Water Piping: Section 3
 - b. Fuel Piping: Section 4
 - c. Venting: Section 5
 - d. Air Intake Piping: Section 5
 - e. Condensate Removal: Section 5
 - f. Electrical Wiring: Section 6

⚠ WARNING

This boiler is certified as an indoor appliance. Do not install this boiler outdoors or locate where it will be exposed to freezing temperatures.

⚠ WARNING

Do not install this boiler where gasoline or other flammable liquids or vapors are stored or are in use.

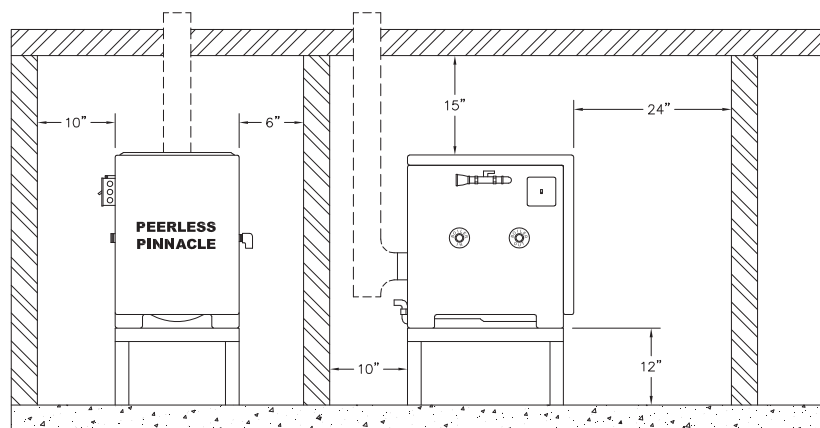


Figure 1.1: Accessibility Clearances – Floor Standing Units

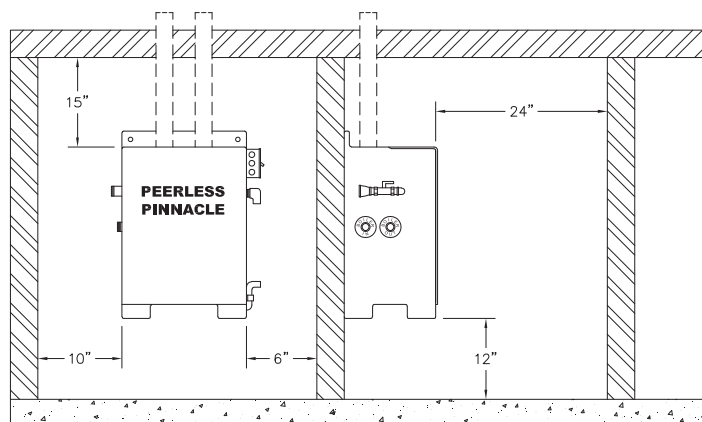


Figure 1.2: Accessibility Clearances – Wall Hung Units

2. BOILER SET-UP

A. GENERAL

1. Pinnacle boilers are to be installed in an area with a floor drain or in a suitable drain pan. Do not install any boiler where leaks or relief valve discharge will cause property damage.
2. This boiler is not intended to support external piping. All venting and other piping should be supported independently of the boiler.
3. Install this boiler level to prevent condensate from backing up inside the boiler.



CAUTION

This boiler is must be installed level to prevent condensate from backing up inside the boiler.

B. WALL HUNG BOILERS

1. The PI-T50 and PI-T80 Boilers are provided with slots for wall mounting and feet for floor mounting. Refer to Figure 10.1 in this manual for dimensions & locations.
2. If wall mounted, the boiler must be attached to a wall that provides adequate support for the boiler.

3. Use a minimum of 1/4" threaded fasteners for supporting the boiler. Do not mount the boiler to wall board only.



WARNING

Make sure the boiler is adequately supported. Do not install this boiler on drywall unless adequately supported by wall studs.

4. Be sure to adequately support the boiler while installing external piping. Be sure to pipe condensate to a suitable drain or condensate pump.

C. FLOOR MOUNTED BOILERS

1. PI-80, PI-140, and PI-199 boilers are designed for floor mounting. The PI-80 can be wall mounted using the optional boiler stand available through your PB Heat, LLC distributor (Part Number 91439).
2. The boiler stand may used for floor mounting of the PI-140 and PI-199 boilers.

3. WATER PIPING AND CONTROLS

A. GENERAL

1. The water supply and return piping of this appliance are to be sized according to system requirements. Do not use piping smaller than the boiler connections.
2. In hydronic systems where sediment may exist, install a strainer device in the boiler return piping to prevent large particles and pipe scale from entering the boiler heat exchanger coil. Use a large mesh screen in the strainer.
3. Install this boiler so that the gas ignition system components are protected from water (dripping, spraying, etc.) during appliance operation and service (circulator replacement, condensate trap cleaning, control replacement, etc.).

B. OPERATING PARAMETERS

1. The Pinnacle boiler is designed to operate in a closed loop hydronic system at approximately 15 psi. A pressure limit in the boiler header will prevent the unit from operating if the pressure drops below 10 psi. This is to keep the appliance from operating in the event of a system leak or other condition in which water is not flowing through the heat exchanger.
2. Table 3.1 shows minimum water flow rates for Pinnacle boilers. If a glycol solution is to be used, contact the factory for minimum flow rates.

Table 3.1 – Minimum Flow Rate and Water Volume

Boiler Model	Total Water Volume-Gallon (Liter)	Minimum Flow Rate-GPM (LPM)
PI-T50	0.50 (1.89)	2 (7.6)
PI-T80	0.63 (2.40)	4 (15.2)
PI-80	0.63 (2.40)	4 (15.2)
PI-140	0.93 (3.50)	6 (22.7)
PI-199	1.13 (4.26)	8 (30.3)

C. SYSTEM COMPONENTS

1. Figure 3.1 shows the symbol key for piping diagrams in this section. The following are brief descriptions of system components.
2. *Pressure/Temperature Gauge:* A combination pressure/temperature gauge is provided with each Pinnacle boiler to be mounted in the piping from the boiler supply to the system. Most local codes require this gauge.
3. *Air Elimination:* Any closed loop hydronic system in which the Pinnacle boiler is installed must have an air elimination device. As the system water is heated, dissolved oxygen and carbon dioxide will separate from the liquid. An air elimination device (such as a TACO 430 Series Air Scoop with automatic air vent) is required to remove the dissolved gasses from the system preventing corrosion in the piping system and eliminating system noise.

4. *Expansion Tank:* An expansion tank (such as a Bell & Gossett Series HFT) is required to provide room for expansion of the heating medium (water or glycol solution). Consult the expansion tank manufacturer's instructions for specific information regarding installation. The expansion tank is to be sized for the required system volume and capacity. In addition, be sure that the expansion tank is sized based on the proper heating medium. Glycol solutions may expand more than water for a similar temperature rise.

CAUTION




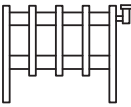

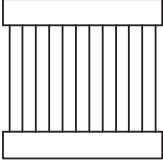



 






Use only inhibited propylene glycol solutions which are specifically formulated for hydronic systems. Unlike automotive antifreeze, solutions for hydronic applications contain corrosion inhibitors that will protect system components from premature failure due to corrosion.

WARNING

Use only inhibited propylene glycol solutions which are specifically formulated for hydronic systems. Ethylene glycol is toxic and may cause an environmental hazard if a leak or spill occurs.

5. *Y-Type Strainer:* In older systems where a significant amount of sediment may be present, it may be necessary to install a Y-type strainer. The strainer should be checked often and cleaned during the first few months of operation to assure that sediment does not reach the heat exchanger and clog the passages. Use a large mesh screen in the strainer.
6. *Flow Control Valve:* Flow control valves such as the TACO Flo-Chek or Bell & Gossett Flo-Control™ are used to prevent gravity circulation by incorporating a check valve with a weighted disc.
7. *Pressure Reducing Valve:* A pressure reducing valve, such as the Bell & Gossett B-38 or a TACO #329, is used in a hydronic system to automatically feed water to the system whenever pressure in the system drops below the pressure setting of the valve. These valves should not be used on glycol systems unless close supervision of the glycol solution is practiced.
8. *Back Flow Preventer:* A back flow preventer (check valve) is required by some jurisdictions to prevent the hydronic system water from backing up into the city water supply. This is especially important on systems in which glycol solution is used as the heating medium.

Figure 3.1: Piping Symbol Key

ISOLATION VALVE		BASEBOARD RADIATION	
BALANCING VALVE		RADIATOR	
PRESSURE REGULATOR		RADIANT PANEL	
THREE WAY MIXING VALVE		AIR VENT	
ZONE VALVE		AIR SEPARATOR	
DIFFERENTIAL PRESSURE BYPASS VALVE		EXPANSION TANK	
CHECK VALVE (BACKFLOW PREVENTER)			
CIRCULATOR			
DIVERTER TEE			
TEMPERATURE PRESSURE GAUGE			

9. *Pressure Relief Valve:* The boiler pressure relief valve is factory installed into the right side boiler manifold (inside the jacket). Pipe the discharge of the relief valve to within 12" of the floor and close to a floor drain. Provide piping that is the same size or larger than the relief valve outlet.



CAUTION

Pipe the discharge of the relief valve as close as possible to the floor and away from high traffic areas. Pipe the discharge to a floor drain. Failure to do so may result in personal injury and/or property damage.

10. *Circulator:* The boiler circulator is to be sized to overcome the pressure drop of the system while providing the flow required by the boiler.
- If the boiler is piped in a secondary loop of a primary/secondary heating system, the circulator will need only to overcome the resistance of the boiler and any fittings in that loop.
 - The circulator should be sized based on the net output of the boiler. The Table 3.2 shows the Boiler Output as reported to the Hydronics Institute division of GAMA. These values are based on a pickup factor of 1.15.

Table 3.2 – Boiler Inputs and Outputs

Boiler Model	Boiler Input (Btu/hr [kW])	Net I=B=R Output (Btu/hr [kW])
PI-T50	50,000 (14.7)	40,000 (11.7)
PI-T80	80,000 (23.4)	64,000 (18.8)
PI-80	80,000 (23.4)	64,000 (18.8)
PI-140	140,000 (41.0)	112,000 (32.8)
PI-199	199,000 (58.3)	159,000 (46.6)

- c. The required flow rate can be calculated based on the design temperature difference from the return to the supply of the boiler. For a PI-T80 with a design temperature difference of 20°F the calculation is as follows:

$$\text{Required Flow} = \frac{\text{Output}}{\Delta T \times 500} = \frac{64,000}{20 \times 500} = 6.4 \text{ GPM}$$

- d. Table 3.3 shows the pressure drop (in feet of water) for a flow rate which gives a 20°F temperature difference for each boiler model.

Table 3.3 – Flow Rate and Pressure Drop

Boiler Model	Flow Rate (GPM [LPM])	Pressure Drop (Feet [meters])
PI-T50	4.0 (15.1)	4.5 (1.22)
PI-T80	6.4 (24.2)	5.0 (1.52)
PI-80	6.4 (24.2)	5.0 (1.52)
PI-140	11.2 (42.4)	8.0 (2.44)
PI-199	15.9 (60.2)	13.0 (4.02)

- e. The boiler pressure drop for various flow rates can be determined by using Figure 3.2, the Pinnacle Circulator Sizing Graph.
- f. Table 3.4 gives the recommended circulators for a boiler on a secondary loop with water as the heating medium.

Table 3.4 – Recommended Circulators

Boiler Model	TACO Circulator	Grundfos Circulator
PI-T50	006	UPS 15-58FC SPD-1
PI-T80	007	UPS 15-58FC SPD-2
PI-80	007	UPS 15-58FC SPD-2
PI-140	0010	UPS 15-58FC SPD-3
PI-199	0011	UP 26-64F

⚠ NOTICE

The circulator sizing given is for primary/secondary installations only. The system circulators must be sized based on the flow and pressure drop requirements of the system.

- g. Special consideration must be given if anti-freeze is to be used as a heating medium. Propylene glycol has a higher viscosity than water; therefore the system pressure drop will be higher.

 
11. *Indirect Water Heater:* An indirect water heater should be piped in a dedicated zone. It consists of a water tank that is heated by boiler water passing through an internal coil. Examples of indirect water heating are shown in the System Piping subsection of this Section.

D. SYSTEM PIPING

⚠ NOTICE

When using the domestic hot water priority function, the domestic circulator must be piped directly to the boiler. Also, the circulator must be sized to exceed the minimum flow rate of the boiler. Failure to follow these instructions will cause the system to operate incorrectly and may cause premature failure of the appliance.

Figure 3.2: Pinnacle Circulator Sizing Graph

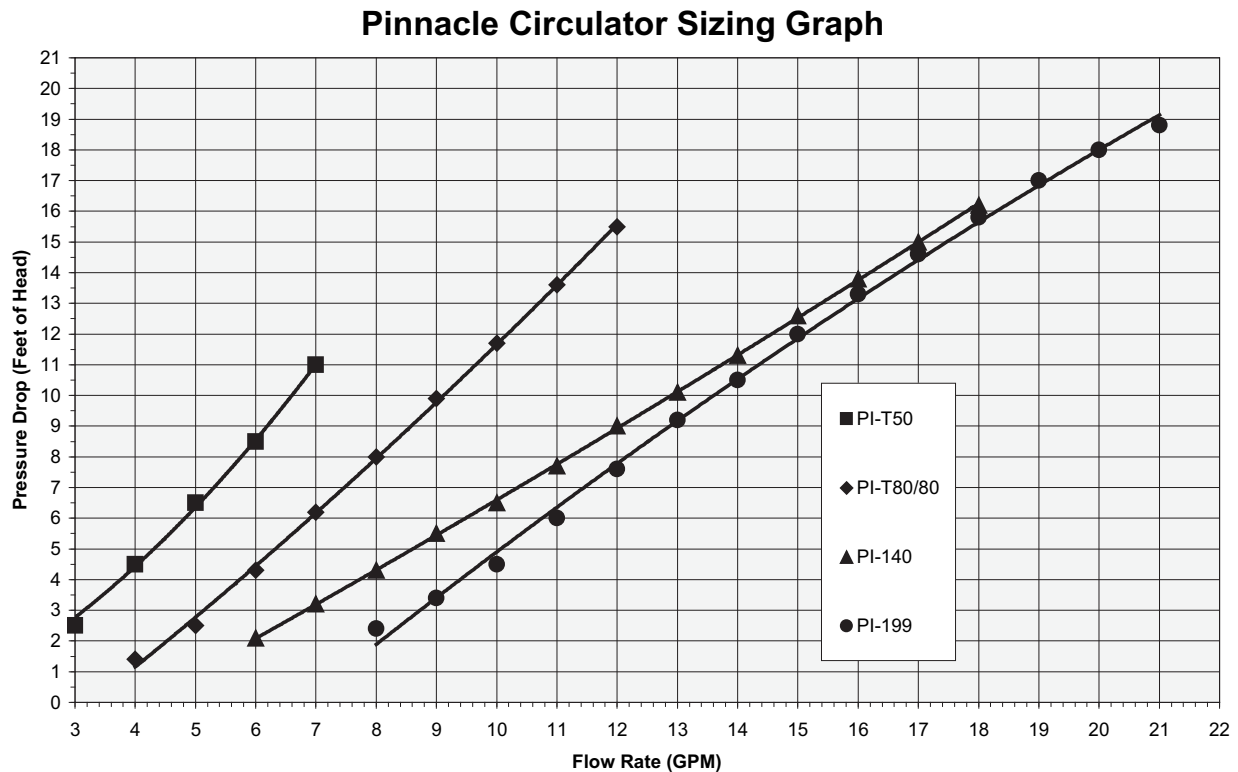

1. Figure 3.3 shows a single boiler with one heating zone and a Peerless Partner indirect water heater.
2. Figure 3.4 shows a single boiler with an additional zone in which baseboard radiation is the heat load.



NOTICE

When applying multiple boilers, a sequencing control such as the tekmar 265 or the Heat Timer Mini-Mod, should be used. These controls provide control for boiler temperature and domestic circulator operation.

3. Figure 3.5 shows diverter tees used in combination with conventional hydronic radiators on an additional zone. A second boiler is also added to the system. Notice that the boilers are piped in parallel on the secondary loop. It is important that the common headers are sized to match the system piping. Smaller headers may result in flow fluctuations through the boilers.
4. Figure 3.6 shows a system in which several different types of loads and multiple boilers are shown. This system illustrates how different temperature zones can be supplied from the same source by mixing down the temperature using a three way mixing valve. Radiant flooring typically requires much lower temperatures than baseboard radiation and indirect water heating. Notice that a third boiler is included in this system.
5. Figure 3.7 shows zone valves used in place of zone circulators. Notice that this system utilizes reverse return piping which makes it easier to balance the system. If the heating zones are very different in length, the balancing valves on the return side of each loop are required.

E. FREEZE PROTECTION

1. Glycol for hydronic applications is specially formulated for this purpose. It includes inhibitors which prevent the glycol from attacking metallic system components. Make certain that the system fluid is checked for the correct glycol concentration and inhibitor level.
2. Use only inhibited propylene glycol solutions of up to 50% by volume. Ethylene glycol is toxic and can chemically attack gaskets and seals used in hydronic systems.
3. The antifreeze solution should be tested at least once per year and as recommended by the antifreeze manufacturer.

Antifreeze solutions expand more than water. For example, a 50% by volume solution expands 4.8% for a 148°F temperature rise while water expands about 3% for the same temperature increase. Allowance for this expansion must be considered in sizing expansion tanks and related components.

4. The flow rate in systems utilizing glycol solution should be increased compared with a water system to compensate for increased heating capacity.
5. Due to increased flow rate and fluid viscosity the circulator head requirement will increase. Contact the pump manufacturer to correctly size the circulator for a particular application based on the glycol concentration and heating requirements.
6. A strainer, sediment trap, or some other means for cleaning the piping system must be provided. It should be located in the return line upstream of the boiler and must be cleaned frequently during the initial operation of the system. Glycol solution is likely to remove mill scale from new pipe in new installations.
7. Glycol solution is expensive and leaks should be avoided. Weld or solder joints should be used where possible and threaded joints should be avoided. Make up water should not be added to the system automatically when a glycol solution is used. Adding make-up water may significantly dilute the system.
8. Check local regulations to see if systems containing glycol solutions must include a back-flow preventer or require that the glycol system be isolated from the water supply.
9. Do not use galvanized pipe in glycol systems.
10. Use water that is low in mineral content and make sure there are no petroleum products in the solution.
11. Mix solution at room temperature.
12. Do not use a chromate treatment.
13. Do not use glycol solution in a system that may reach temperatures above 250°F.
14. Refer to Technical Topics, #2a published by the Hydronics Institute Division of GAMA for further glycol system considerations.

F. SPECIAL APPLICATIONS

1. If the boiler is used in conjunction with a chilled medium system, pipe the chiller in a separate secondary loop.
 - a. Assure that the boiler circulator is disabled during chiller operation so chilled water does not enter the boiler.
 - b. Install a flow control valve (spring check valve) to prevent gravity flow through the boiler.
 - c. See figure 3.8 for recommended system piping.
2. For boilers connected to heating coils in a forced air system where they may be exposed to chilled air circulation, install flow control valves or other automatic means to prevent gravity circulation of the boiler water during cooling cycles. See figure 3.9 for illustration.

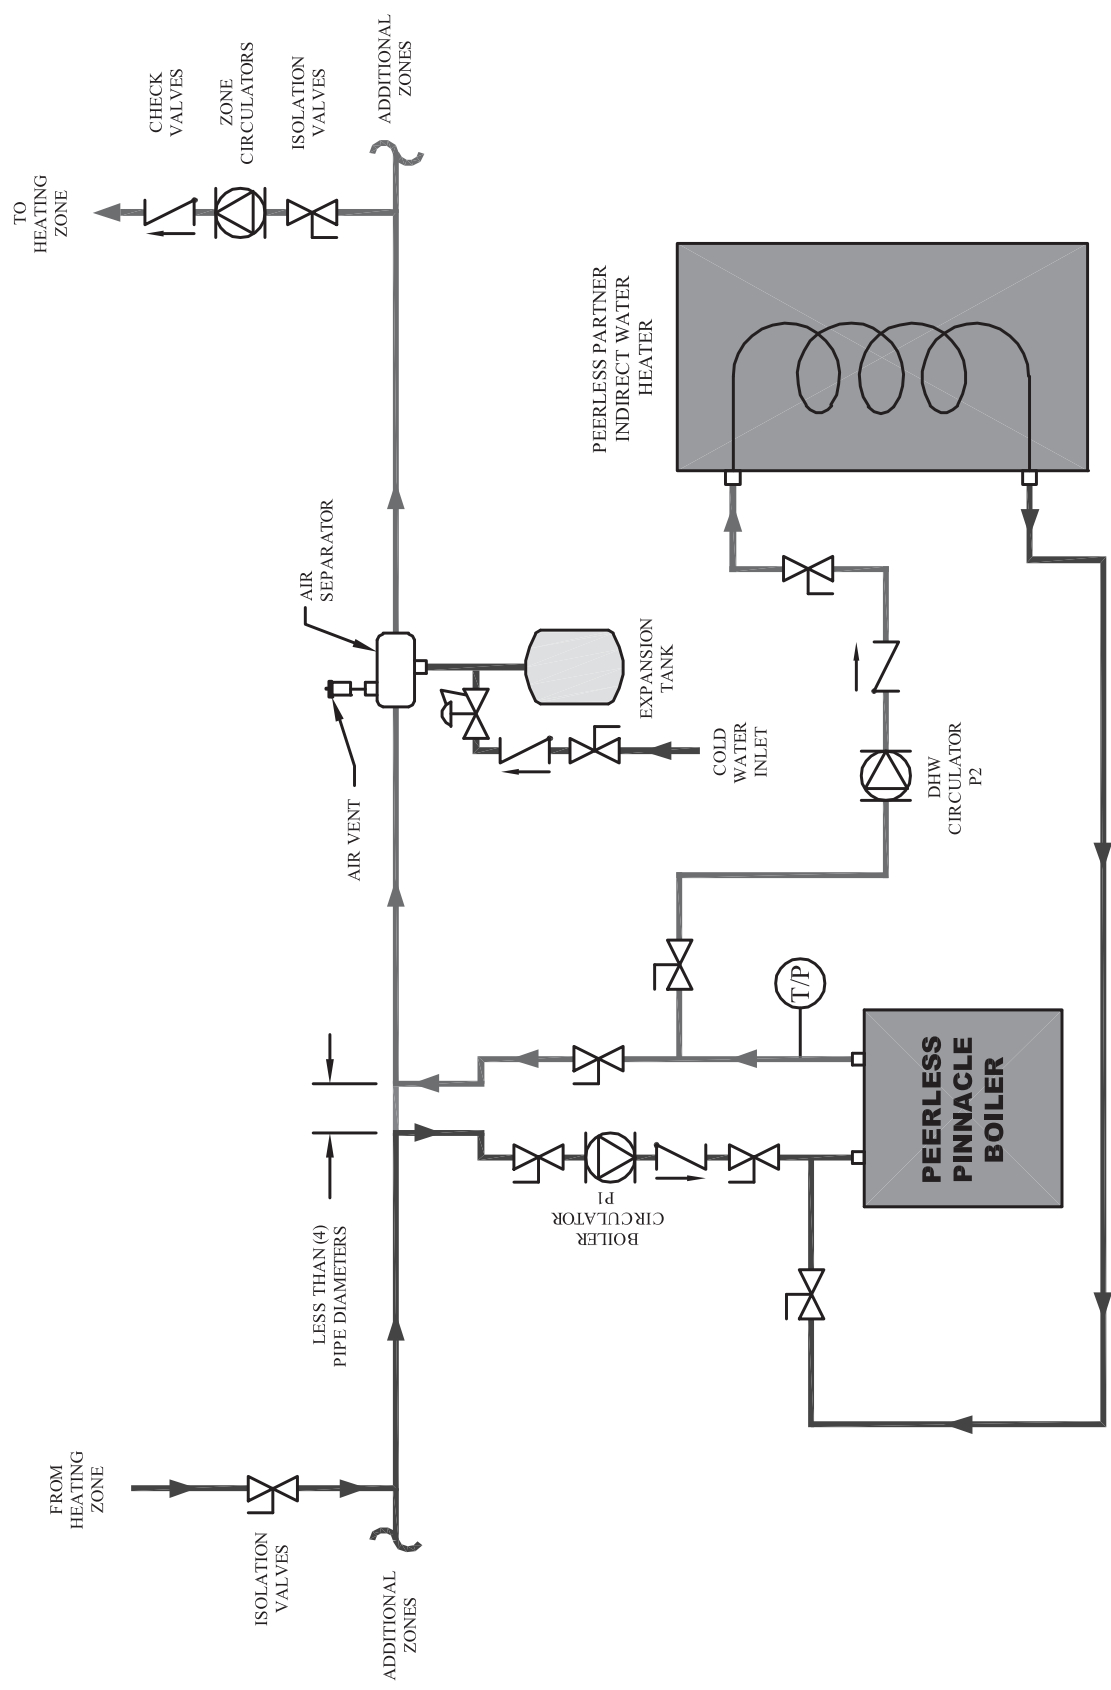


Figure 3.3: One Boiler, Primary/Secondary with one heating zone and a Peerless Partner (Zone Circulators)

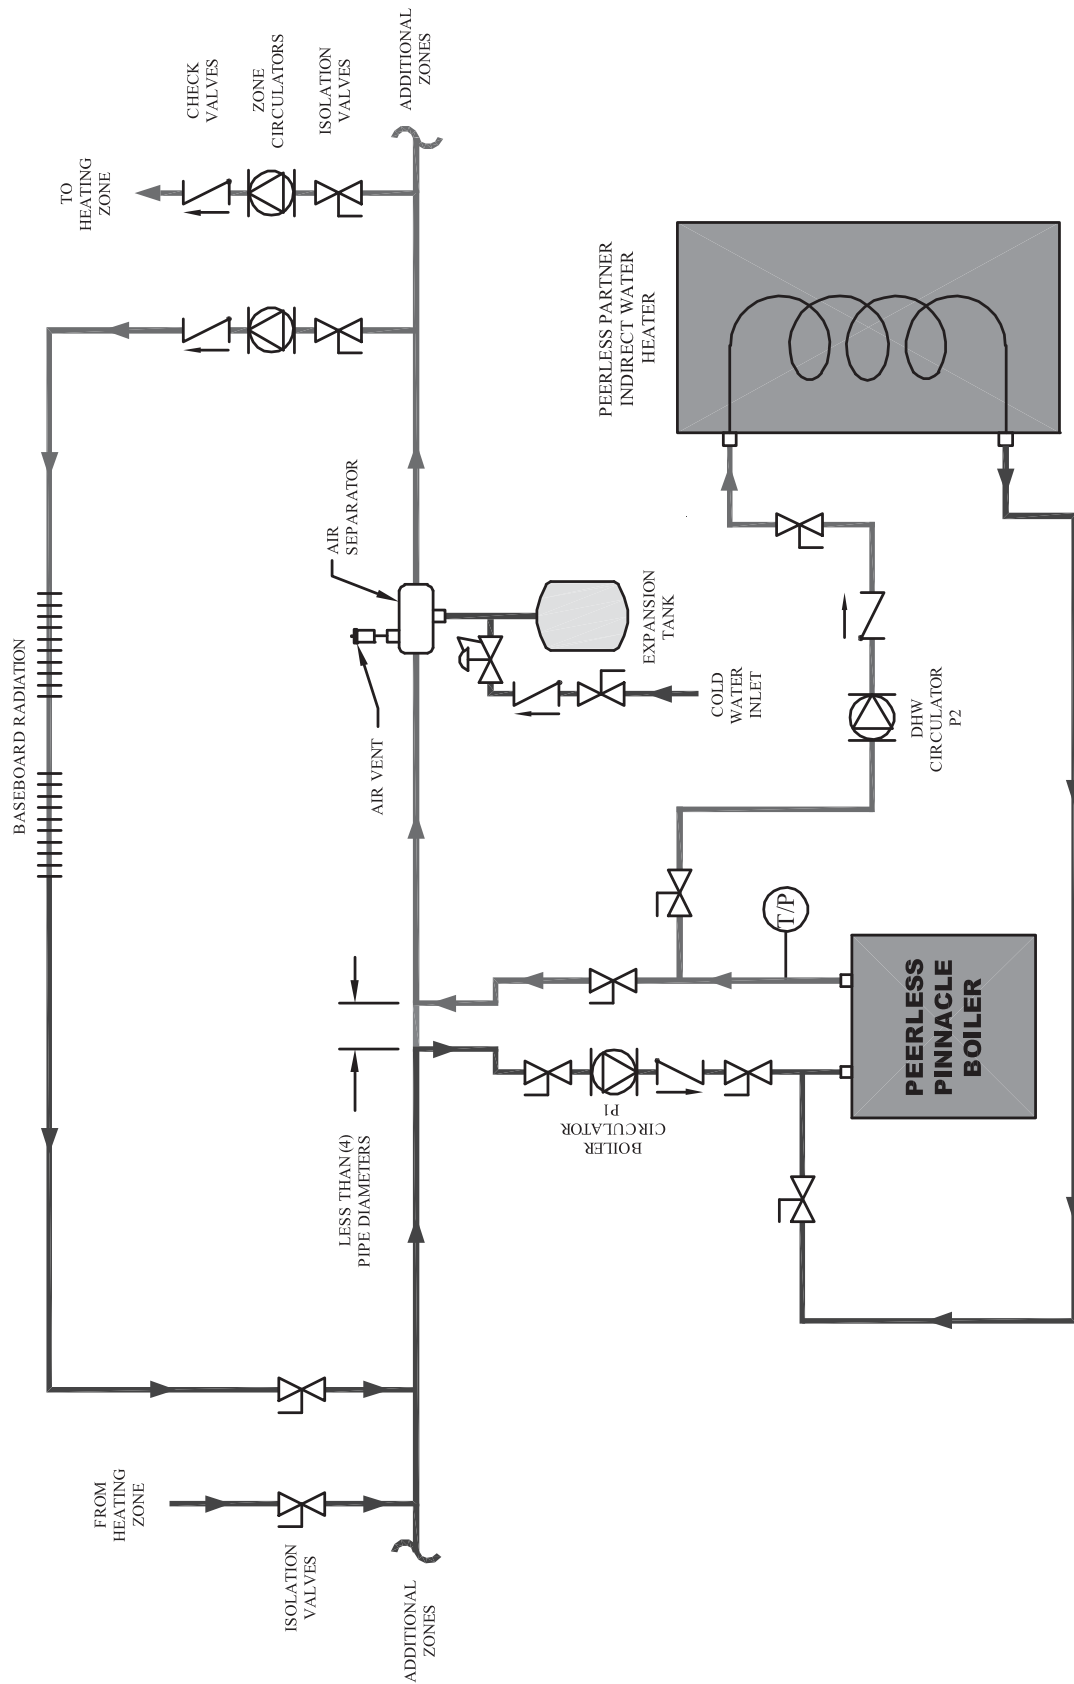


Figure 3.4: One Boiler, Primary/Secondary with two heating zones and a Peerless Partner (Zone Circulators)

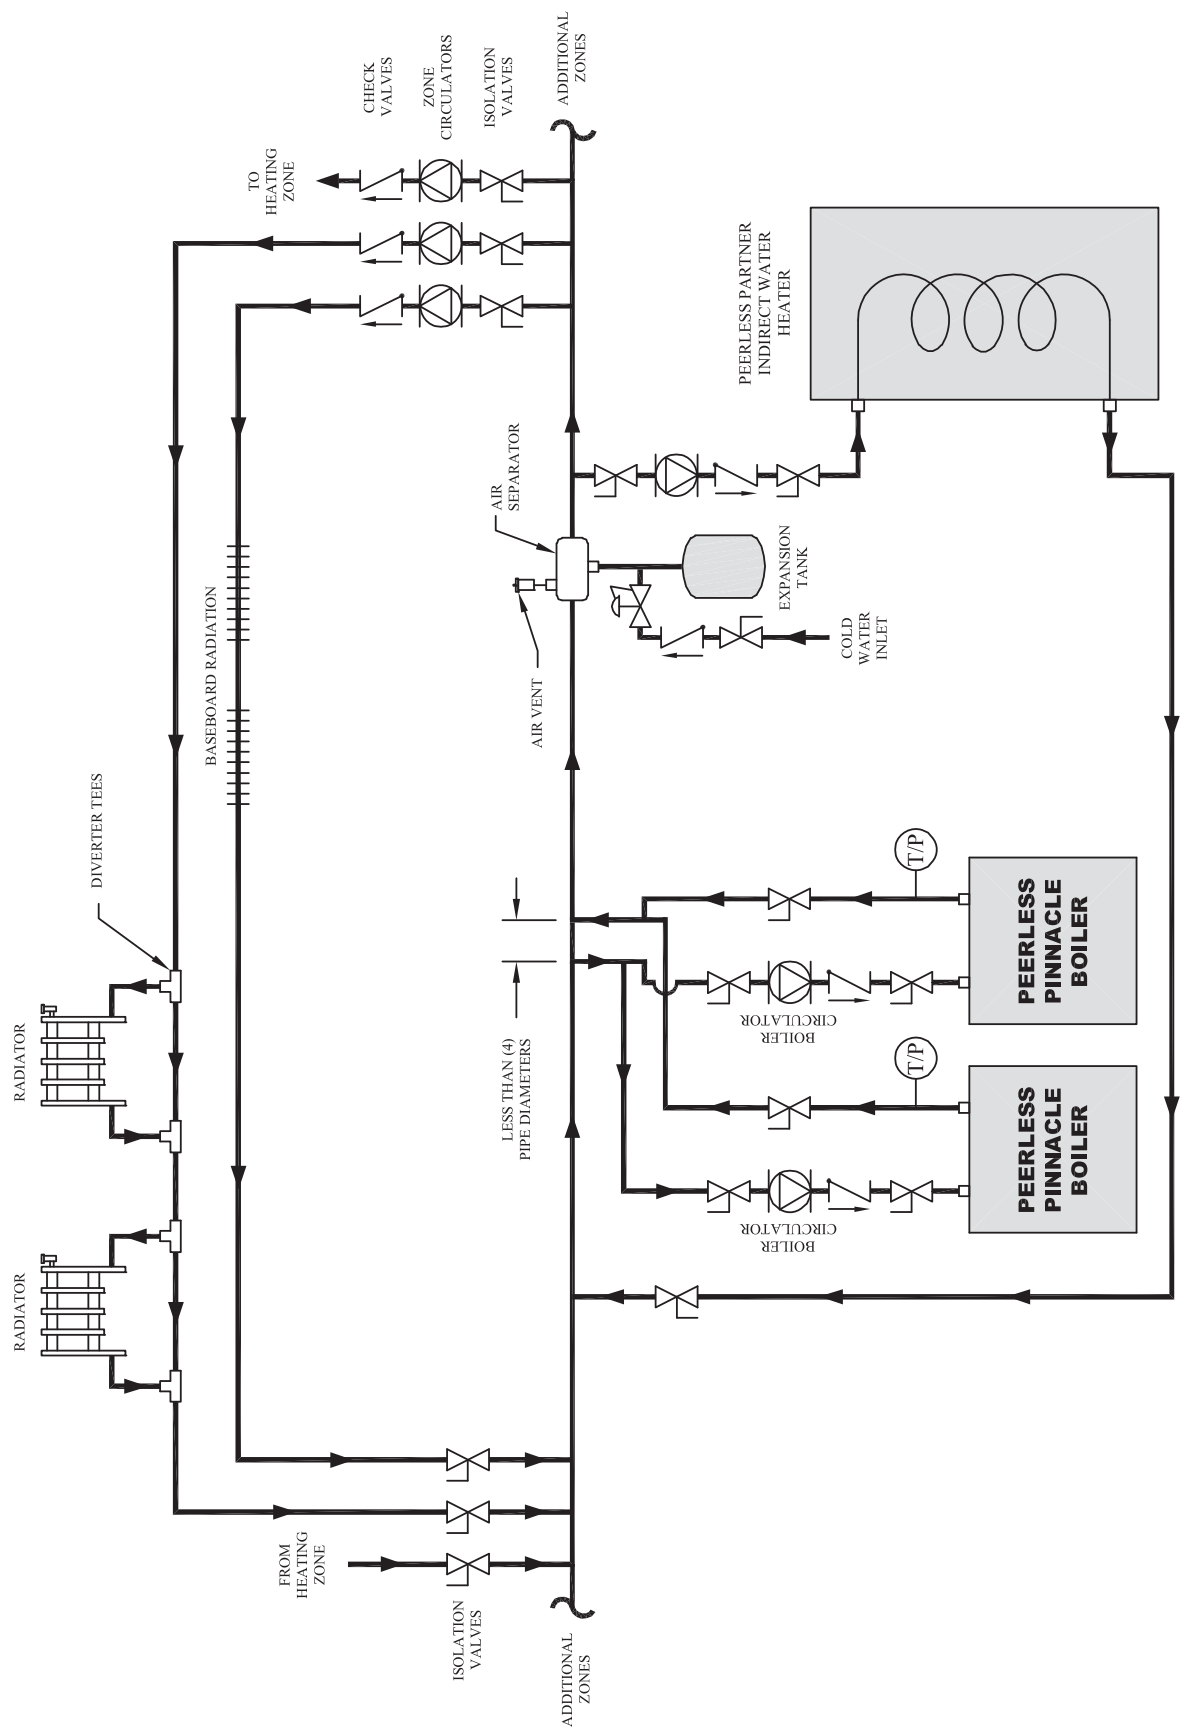


Figure 3.5: Two Boilers, Primary/Secondary with Four Zones (Zone Circulator)

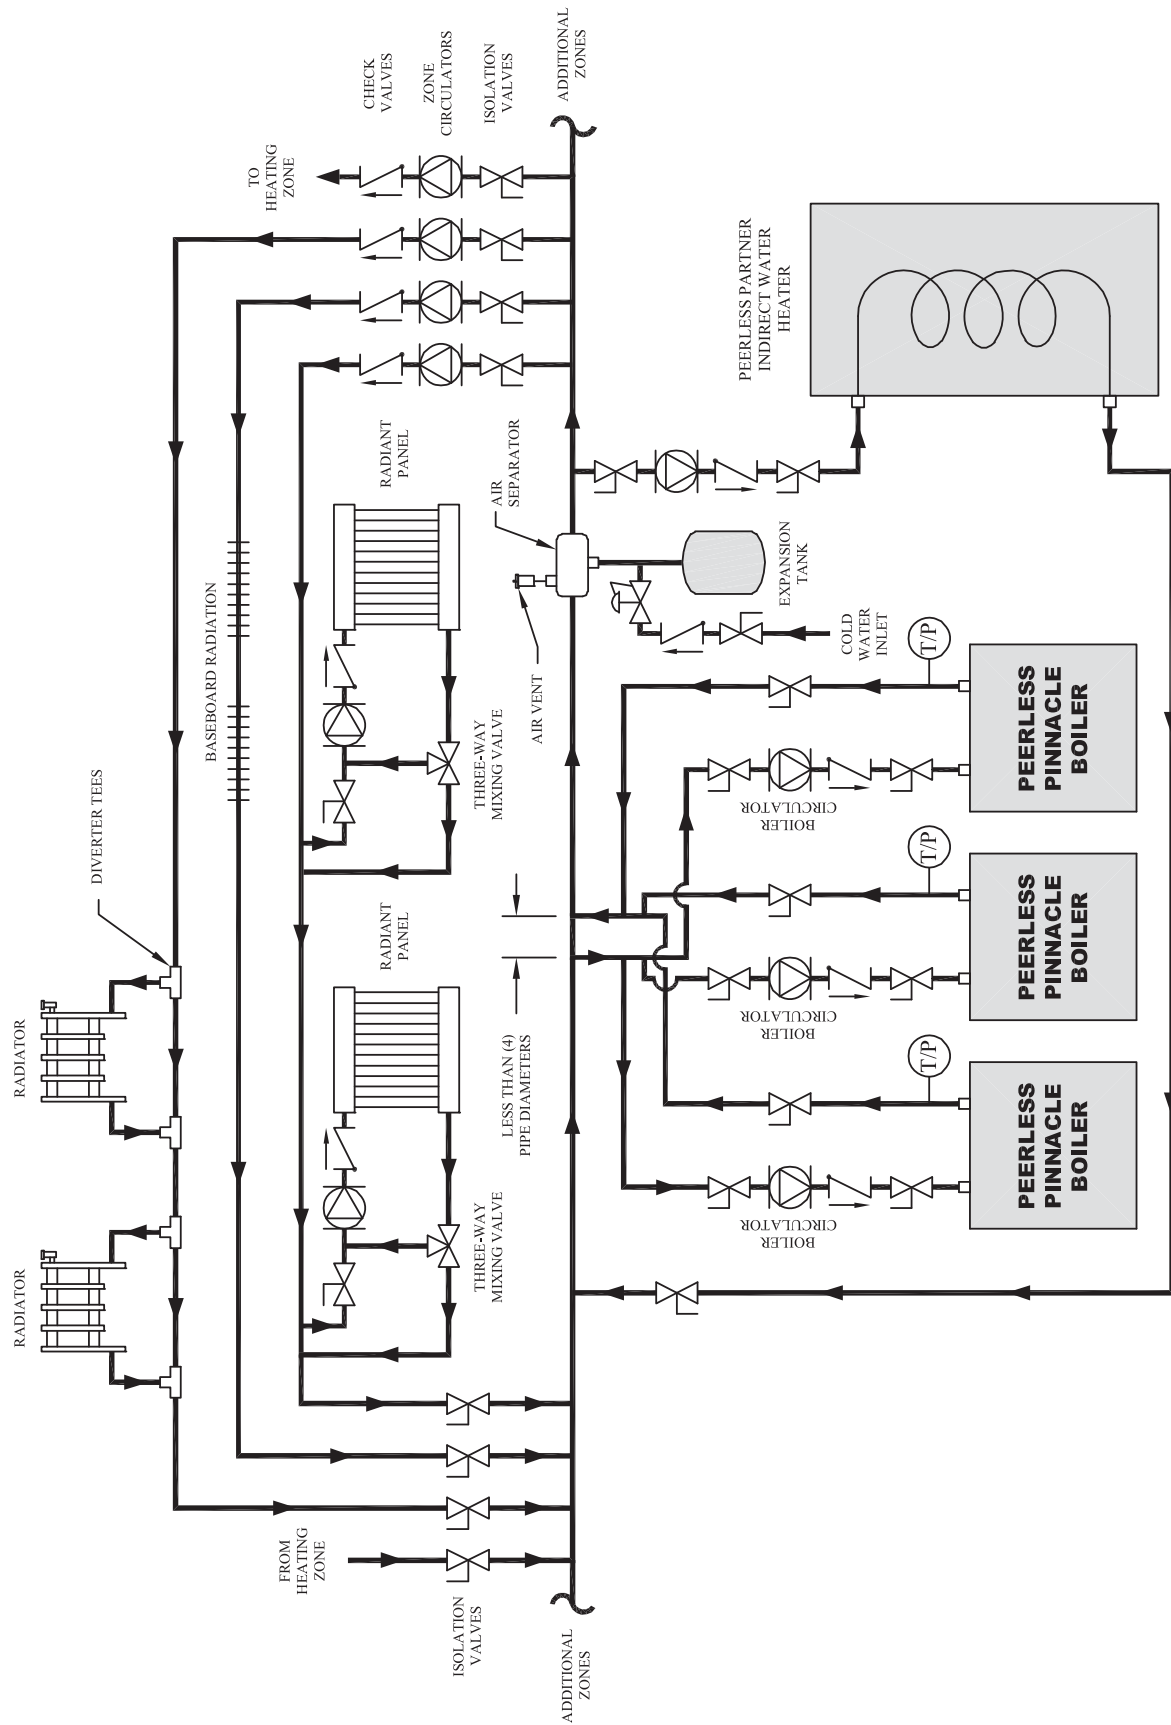


Figure 3.6: Three Boilers, Primary/Secondary with Five Zones (Zone Circulator)

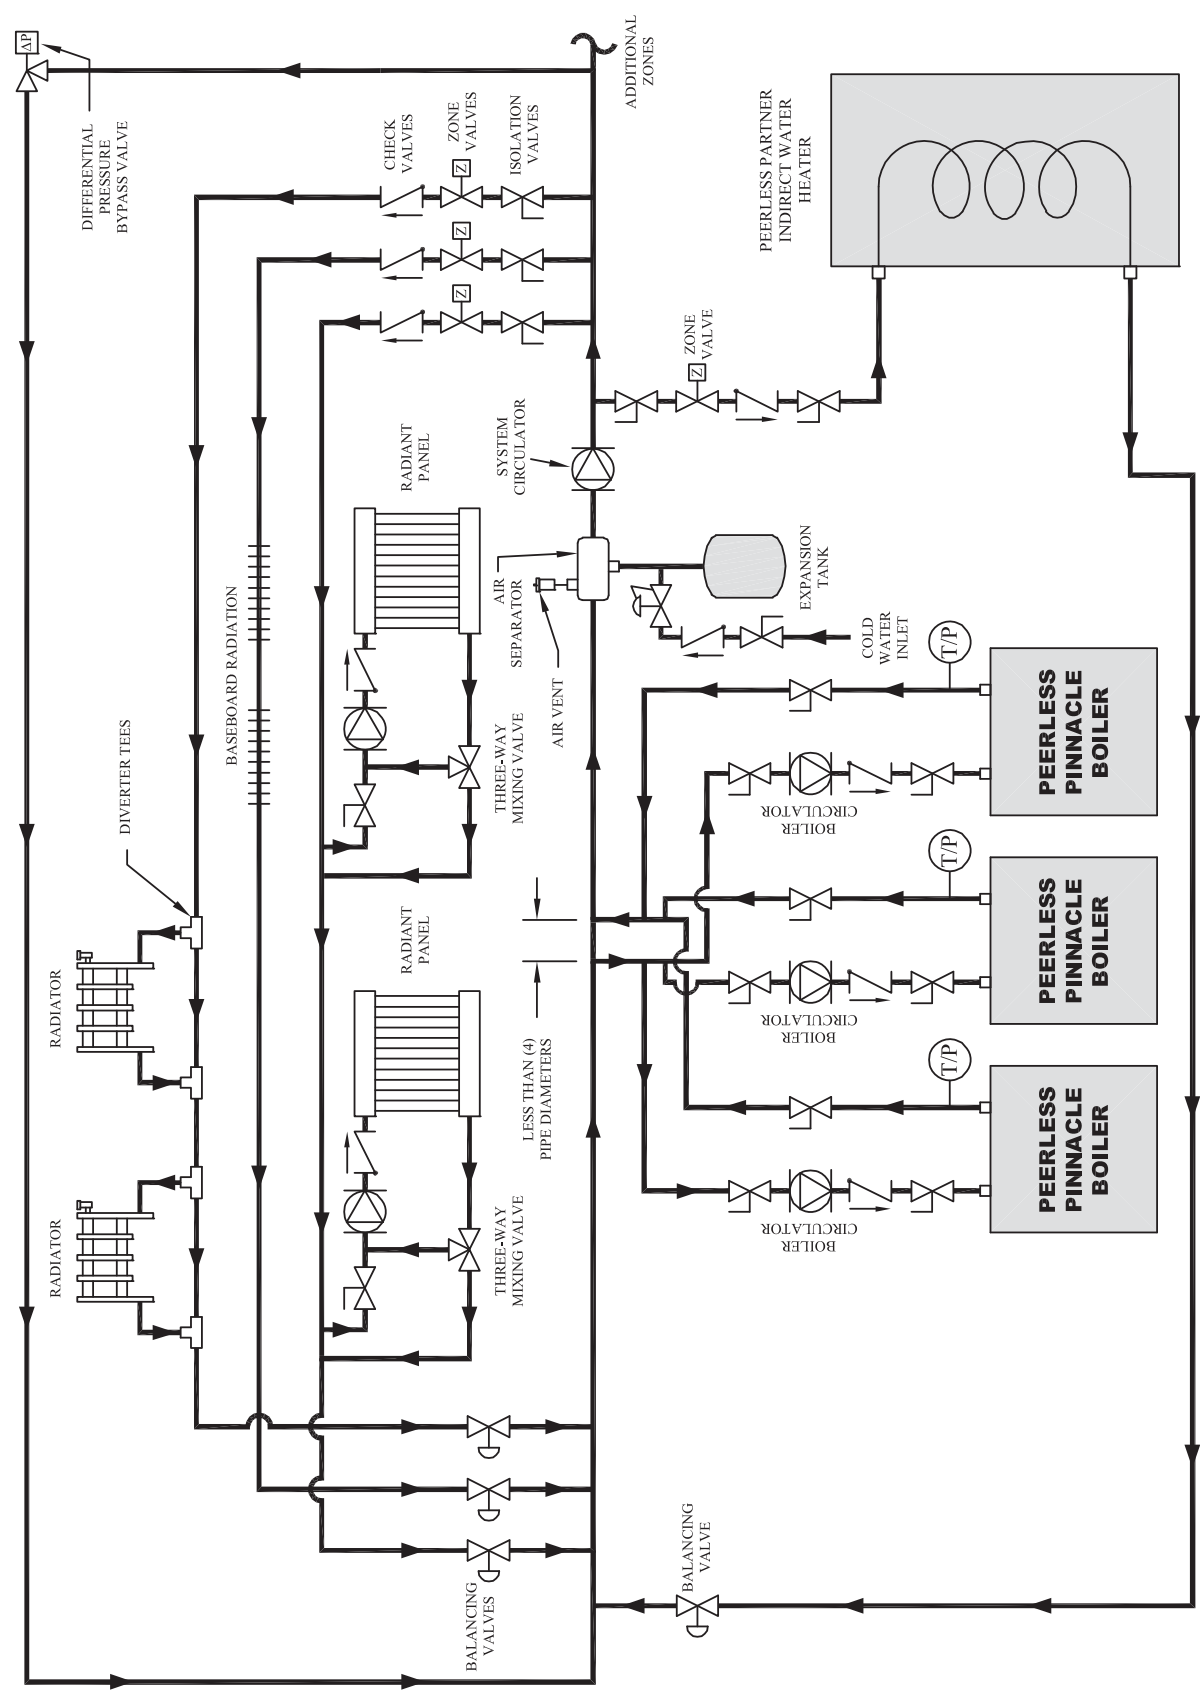


Figure 3.7: Three Boilers, Primary/Secondary with Four Zones (Zone Valves)

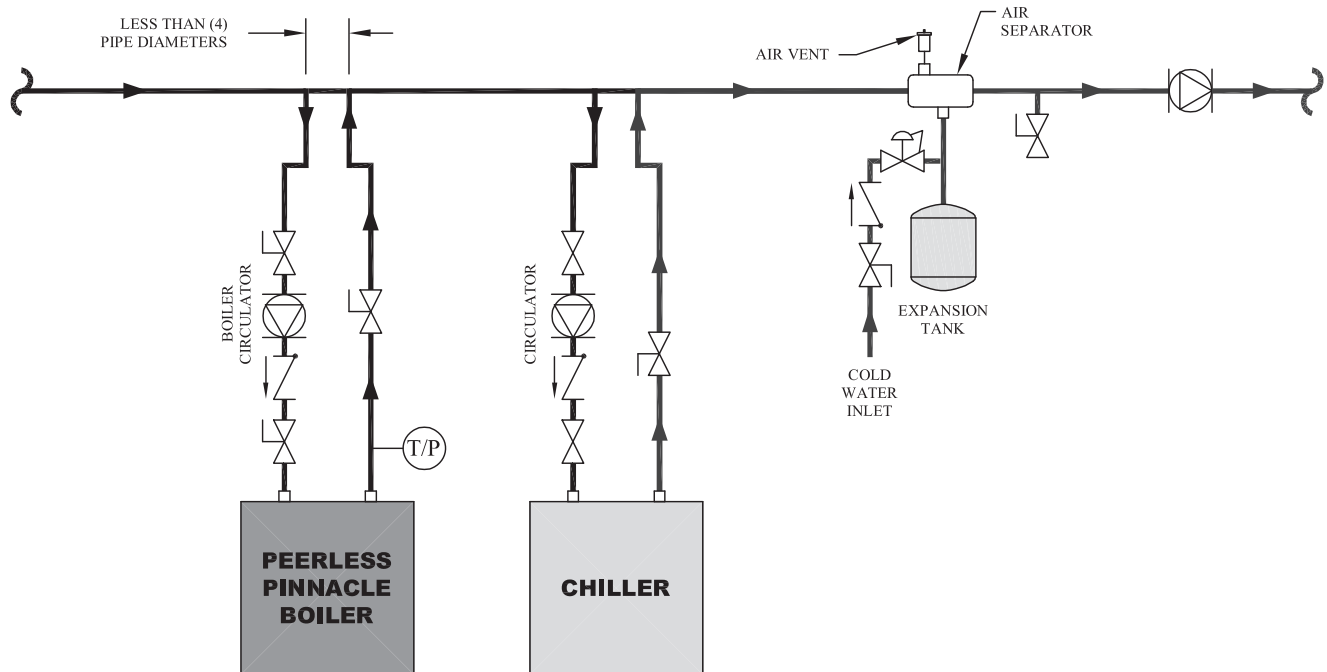


Figure 3.8: Boiler in conjunction with a Chilled Water System

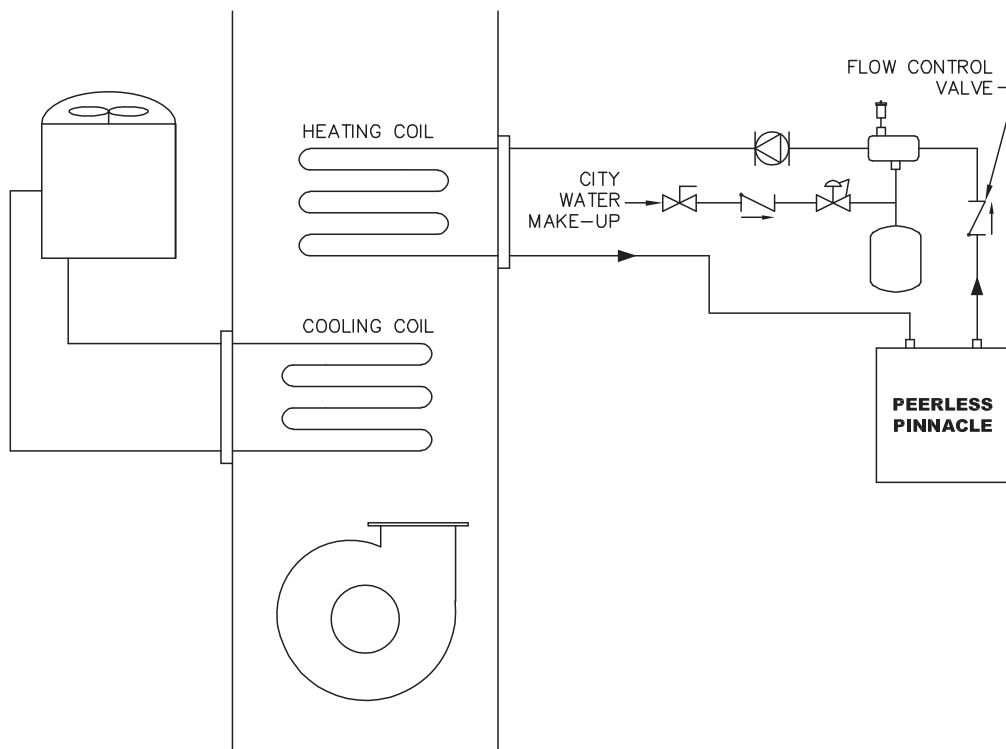


Figure 3.9: Boiler Connected to a Heating Coil in a Forced Air System

4. GAS PIPING

A . GENERAL

1. All fuel piping to the boiler is to be in accordance with local codes. In the absence of local regulations refer to the National Fuel Gas Code, ANSI Z223.1/NFPA 54.
2. Size and install piping to provide a supply of gas sufficient to meet the maximum demand of all appliances supplied by the piping.

B. FUEL LINE SIZING

1. The rate of gas to be provided to the boiler can be determined by the following:

$$\text{Input Rate (ft}^3/\text{hr)} = \frac{\text{Boiler Input Rate (Btu/hr)}}{\text{Gas Heating Value (Btu/ft}^3\text{)}}$$

Obtain the gas heating value from the gas supplier.

2. As an alternative use Table 4.1 which uses typical heating values for natural gas and liquefied petroleum (LP) gas.

Table 4.1: Gas Input Rates

Boiler Model	Gas Input Rate* (ft ³ /hr)	
	Natural Gas	LP Gas
PI-T50	50	20
PI-T80	80	32
PI-80	80	32
PI-140	140	56
PI-199	199	79

*Natural gas input rates are based on 1000 Btu/ft³, LP input rates are based on 2500 Btu/ft³.

3. Table 4.2 shows the maximum flow capacity of several pipe sizes based on 0.3" of pressure drop.
 - a. The values shown are based on a gas specific gravity of 0.60 (Typical for natural gas).
 - b. Multiply the capacities listed by the factors indicated in Table 5.3 for gas with a specific gravity other than 0.60 to obtain the corrected capacity.

Table 4.2: Maximum Capacity of Pipe (CFH) for a Pressure Drop of 0.3" of Water

Pipe Length (Feet)	3/4" NPT Pipe	1" NPT Pipe	1-1/4" NPT Pipe	1-1/2" NPT Pipe
10	278	520	1,050	1,600
20	190	350	730	1,100
30	152	285	590	890
40	130	245	500	760
50	115	215	440	670
60	105	195	400	610

The values are based on a specific gravity of 0.60 (typical for natural gas). See Table 4.3 for capacity correction factors for gases with other specific gravities.

Table 4.3: Maximum Capacity Correction Factors for Specific Gravity other than 0.60

Specific Gravity	0.50	0.55	0.60	0.65	0.70	0.75
Correction Factor	1.10	1.04	1.00	0.96	0.93	0.90
Specific Gravity	0.80	0.85	0.90	1.00	1.10	1.20
Correction Factor	0.87	0.84	0.82	0.78	0.74	0.71
Specific Gravity	1.30	1.40	1.50	1.60	1.70	1.80
Correction Factor	0.68	0.66	0.63	0.61	0.59	0.58

4. The gas piping to the boiler must be a minimum of 3/4" pipe. The boiler is supplied with a 3/4" NPT x 1/2" NPT bell reducer. Do not remove the reducer.
5. Size and install the gas supply piping for no more than 0.5 inches of water pressure drop between the gas regulator and the boiler.

C. GAS SUPPLY PIPING INSTALLATION

1. Do not install any piping directly over or in front of the boiler. Locate the drop pipe adjacent to the boiler.

2. Install a sediment trap as shown in Figure 4.1. Be sure to allow clearance from the floor for removal of the pipe cap.

⚠ WARNING

Use a pipe joint sealing compound that is resistant to liquefied petroleum gas. A non-resistant compound may lose sealing ability in the presence of this gas, resulting in a gas leak. Gas leaks may potentially cause an explosion or fire.

3. Install a ground joint union between the sediment trap and the boiler to allow service of the appliance.
4. Install a service valve as shown in Figure 4.1 to allow the gas supply to be interrupted for service.

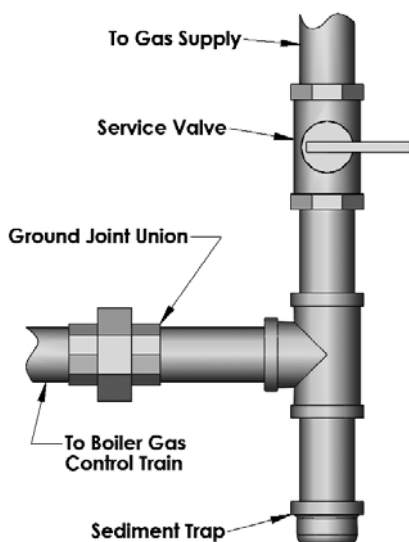


Figure 4.1: Gas Supply Piping – Sediment Trap

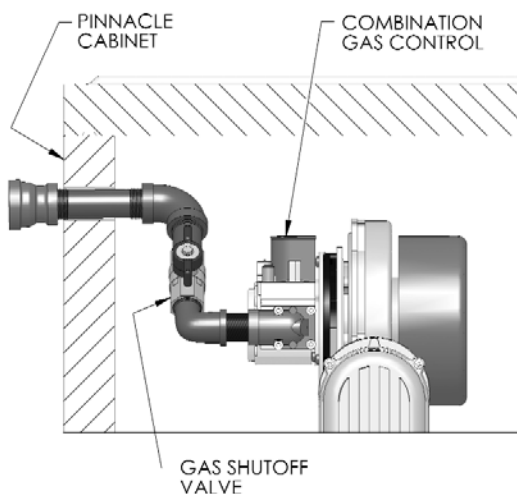


Figure 4.2: PI-80/PI-140/PI-199 Gas Valve Shut Off

5. Maintain a minimum distance of 10 feet between the gas pressure regulator and the boiler.
6. Check all gas piping for leaks prior to placing the boiler in operation. Use an approved gas detector, non-corrosive leak detection fluid, or other leak detection method. If leaks are found, turn off all gas flow and repair as necessary.

⚠ WARNING

When checking for leaks, do not use matches, candles, open flames or other methods that provide an ignition source. This may ignite a gas leak resulting in a fire or explosion.

7. Figure 4.2 and 4.3 are illustrations of the gas shutoff valve for the Pinnacle Boiler. This valve is to be used in addition to the gas service valve shown in Figure 4.1.

D. GAS SUPPLY PIPING - OPERATION

1. The gas line must be properly purged of air to allow boiler to operate. Failure to do so may result in burner ignition problems.
2. Table 4.4 shows the maximum and minimum supply pressure to the boiler.
 - a. Gas pressure below the minimum pressure may result in burner ignition problems.
 - b. Gas pressure above the maximum may result in damage to the gas valve.

⚠ CAUTION

Do not subject the gas valve to more than 1/2 psi (13.5" W.C.) of pressure. Doing so may damage the gas valve.

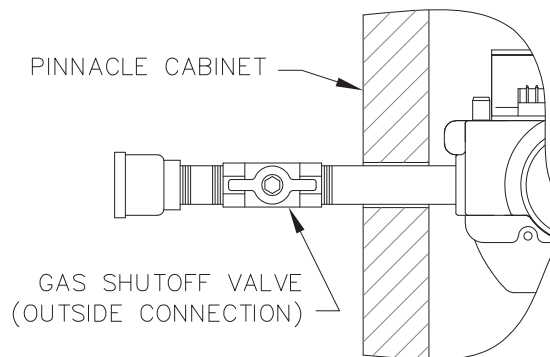


Figure 4.3: PI-T50/PI-T80 Gas Valve Shut Off

Table 4.4: Maximum and Minimum Fuel Pressure

Gas Type	Pressure (inches of water)	
	Minimum	Maximum
Natural	3.7	13.5
LP	3.7	13.5

3. To check the gas supply pressure on the gas valve:
 - a. Turn off the power at the service switch.
 - b. Turn off the gas shutoff valve.
 - c. Using a flat screwdriver, turn the screw inside the inlet pressure tap fitting (see figure 4.4 and 4.5) one turn counterclockwise.
 - d. Attach the manometer tube to the pressure tap fitting.
 - e. Open the gas shutoff valve and start the boiler.
 - f. Read and record the gas pressure while the boiler is firing.
 - g. Turn off the boiler and gas shutoff valve.
 - h. Remove the manometer tube from the pressure tap fitting and turn the screw to close the internal valve.
 - i. Turn on the gas shutoff valve and boiler service switch.
4. All gas piping must be leak tested prior to placing the boiler in operation.
 - a. If the leak test pressure requirement is higher than the maximum inlet pressure noted in Table 4.4, the boiler must be isolated from the gas supply piping system.
 - b. If the gas valve is exposed to pressures exceeding 13.5" of water, the gas valve must be replaced.
5. Install the boiler such that the gas ignition system components are protected from water (dripping, spraying, rain, etc) during operation and service (circulator replacement, condensate trap cleanout, and control replacement, etc).

E. MAIN GAS VALVE - OPERATION

1. Figure 4.4 shows an illustration of the gas valve/venturi assembly for the Pinnacle Boiler.
 - a. The throttle screw on these valves should not be adjusted without a means to measure carbon monoxide (CO) and carbon dioxide (CO₂) emissions.



WARNING


Do not adjust the throttle screw without monitoring the carbon dioxide (CO₂) and carbon monoxide (CO) in the vent pipe. Vent CO emissions above 400 ppm are in excess of most safety standards.

- b. Turning the throttle screw clockwise will decrease the gas flow (decreasing CO₂) and turning it counterclockwise will increase the gas flow (increasing CO₂).
- c. The recommended CO₂ settings are given in Table 4.5. In no case should the boiler be allowed to operate with CO emissions in excess of 150 ppm.

2. Refer to Section 5, Venting for information on obtaining vent samples from this boiler.

Table 4.5: Recommended Vent CO₂ Settings

Gas Type	Firing Rate	Vent CO ₂	Vent CO
Natural	Low	8-1/2% to 9-1/2%	< 50 ppm
	High	8-1/2% to 9-1/2%	< 100 ppm
LP	Low	9-1/2% to 10-1/2%	< 50 ppm
	High	9-1/2% to 10-1/2%	< 100 ppm

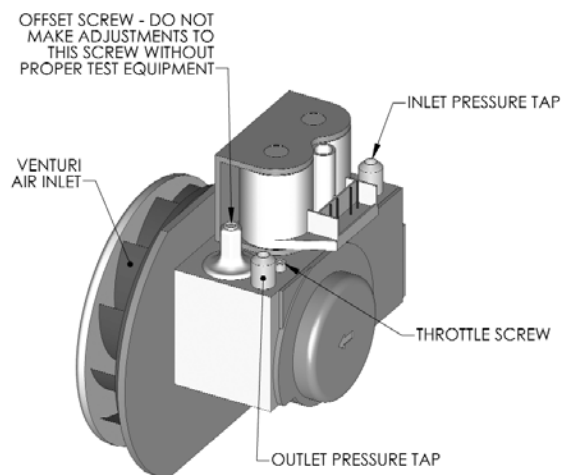**Figure 4.4: Gas Valve/Venturi**

5. VENTING, INTAKE AIR AND CONDENSATE

A. GENERAL

1. Install the boiler venting system in accordance with these instructions and with the National Fuel Gas Code, ANSI Z223.1/NFPA 54, CAN/CGA B149, and/or applicable provisions of local building codes.
2. This boiler is a direct vent appliance and is listed as a Category IV appliance with Underwriters Laboratories, Inc.

WARNING

This vent system will operate with a positive pressure in the pipe. Do not connect vent connectors serving appliances vented by natural draft into any portion of mechanical draft systems operating under positive pressure.

WARNING

Follow these venting instructions carefully. Failure to do so may result in severe personal injury, death, or substantial property damage.

B. APPROVED MATERIALS FOR EXHAUST VENT AND INTAKE AIR PIPE

1. Use only Non Foam Core venting material. The following materials are approved for use as vent pipe for this boiler:
 - a. Non Foam Core PVC (Polyvinyl Chloride) Pipe conforming to ASTM D-1785.
 - b. Non Foam Core CPVC (Chlorinated Polyvinyl Chloride) Pipe conforming to ASTM D-1785.

WARNING

Do not use Foam Core Pipe in any portion of the exhaust piping from this boiler. Use of Foam Core Pipe may result in severe personal injury, death, or substantial property damage.

- c. Non Foam Core ABS (Acrylonitrile-Butadiene-Styrene) Pipe conforming to ASTM D3965.
2. Cellular foam core piping may be used on air intake piping only. Never use cellular foam core material for exhaust piping.

C. EXHAUST VENT / AIR INTAKE PIPE LOCATION

1. Determine exhaust vent location:
 - a. The vent piping for this boiler is approved for zero clearance to combustible construction.

- b. See Figure 5.1 for an illustration of clearances for location of exit terminals of direct-vent venting systems.
 - c. This boiler vent system shall terminate at least 3 feet (0.9 m) above any forced air intake located within 10 ft (3 m). Note: this does not apply to the combustion air intake of a direct-vent appliance.
 - d. Provide a minimum of 1 foot distance from any door, operable window, or gravity intake into any building.
 - e. Provide a minimum of 1 foot clearance from the bottom of the exit terminal above the expected snow accumulation level. Snow removal may be necessary to maintain clearance.
 - f. Provide 4 feet horizontal clearance from electrical meters, gas meters, gas regulators, and relief equipment. In no case shall the exit terminal be above or below the aforementioned equipment unless the 4 foot horizontal distance is maintained.
 - g. Do not locate the exit terminal over public walkways where condensate could drip and/or freeze and create a nuisance or hazard.
 - h. When adjacent to a public walkway, locate exit terminal at least 7 feet above grade.
 - i. Do not locate the exit termination directly under roof overhangs to prevent icicles from forming.
 - j. Provide 3 feet clearance from the inside corner of adjacent walls.

WARNING

Flue gases will condense as they exit the vent termination. This condensate can freeze on exterior building surfaces which may cause discoloration of the surfaces.

2. Determine air intake pipe location.
 - a. Provide 1 foot clearance from the bottom of the air intake pipe and the level of maximum snow accumulation. Snow removal may be necessary to maintain clearances.
 - b. Do not locate air intake pipe in a parking area where machinery may damage the pipe.
 - c. Maximum distance between air intake and exhaust vent is 6 feet (1.8 m). Minimum distance between exhaust vent and air intake on single Pinnacle is 8" (0.2 m) center-to-center. Minimum distance between vents and intakes on multiple Pinnacles is 8" (0.2 m) center-to-center. See Figure 5.2.

Figure 5.1: Location of exit terminals of mechanical draft and direct-vent venting systems.

(Reference: National Fuel Gas Code ANSI Z223.1/NFPA 54 2002).

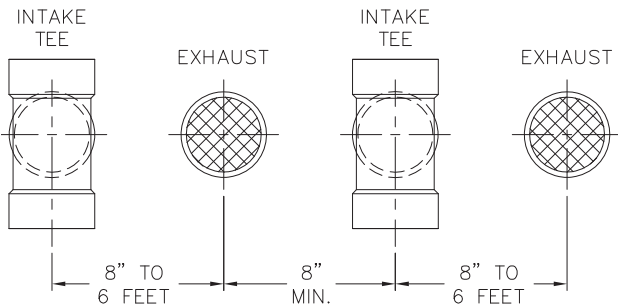
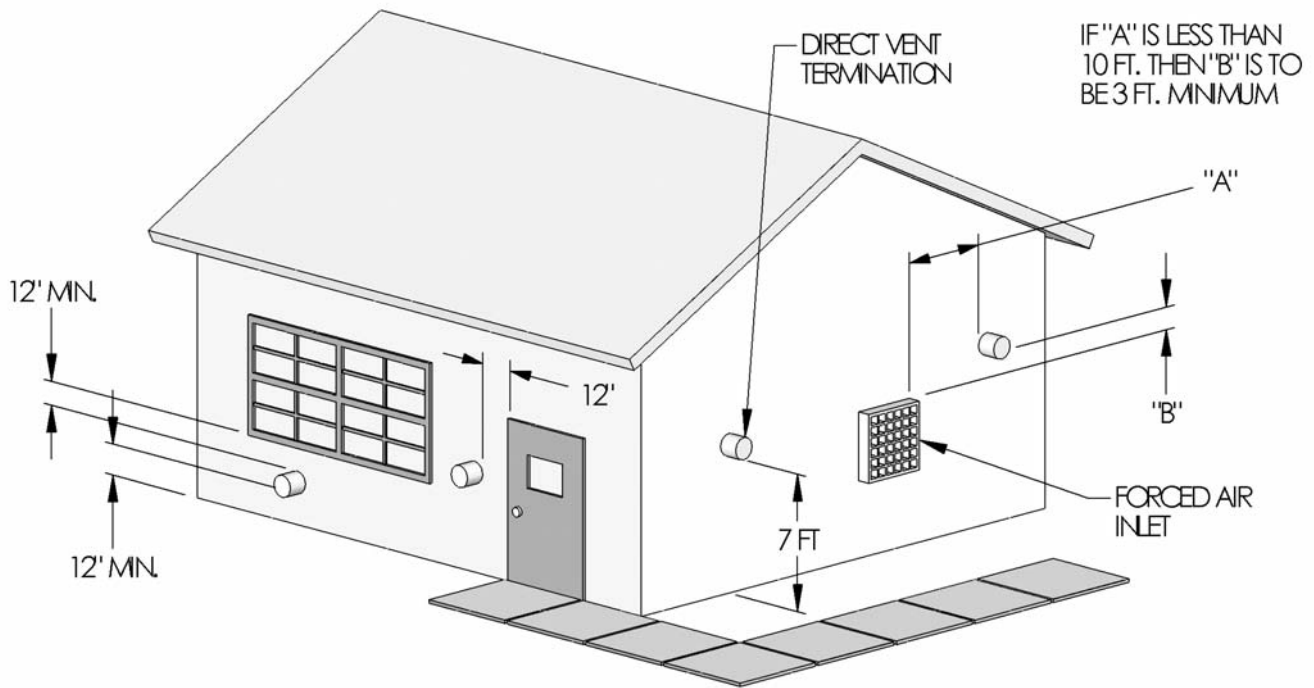


Figure 5.2: Multiple Pinnacle Vent Spacing

D. EXHAUST VENT AND INTAKE AIR PIPE SIZING

1. For the PI-T50 and PI-T80 Boilers the exhaust vent and air intake pipes should be 2" Schedule 40 or 80.
2. For the PI-80, PI-140, PI-199 the exhaust vent and air intake pipes should be 3" Schedule 40 or 80.
3. The total combined equivalent length of exhaust vent and intake air pipe should not exceed 85 feet.
 - a. The equivalent length of elbows, tees, and other fittings are listed in Table 5.1.
 - b. For example: If the exhaust vent has two 90° elbows and 10 feet of PVC pipe we will calculate:

Table 5.1: Fitting Equivalent Length Table

Fitting Description	Equivalent Length		
	2" Vent	3" Vent	4" Vent
Elbow, 90°, Short Radius	5'	5'	3'
Elbow, 90°, Long Radius	4'	4'	2'
Elbow, 45°, Short Radius	3'	3'	1'
Coupling	0'	0'	0'
Air Intake Tee	0'	0'	0'
Stainless Steel Vent Kit	1'	1'	1'
Concentric Vent Kit	3'	3'	3'

Exhaust Vent Pipe Equivalent Length = $(2 \times 5) + 10 = 20$ feet

Further, if the intake air pipe has two 90° elbows, one 45° elbow and 10 feet of PVC pipe, the following calculation applies:

Air Intake Pipe Equivalent Length = $(2 \times 5) + 3 + 10 = 23$ feet

Finally, if a concentric vent kit is used we find:

Total Combined Equivalent Length = $20 + 23 + 3 = 46$ feet

Therefore, the total combined equivalent length is 46 feet which is well below the maximum of 85 feet.

- c. The intake air pipe and the exhaust vent are intended to penetrate the same wall or roof of the building.

- d. Effort should be made to keep a minimum difference in equivalent length between the air intake pipe and the exhaust vent.
4. The minimum combined equivalent length is 16 equivalent feet.
5. The maximum combined equivalent length can be extended by increasing the diameter of the vent pipe. However, the transitions should begin a minimum of 15 equivalent feet from the boiler.
 - a. Transitions should always be made in vertical sections of pipe to prevent the condensate from pooling in the vent pipe.
 - b. Use a 3" x 2" reducing coupling to transition from the PI-T50 and PI-T80 boiler connections to a 3" vent.
 - c. Use a 4" x 3" reducing coupling to transition from the PI-80, PI-140, and PI-199 boiler connections to 4" vent.
 - d. The maximum equivalent length for the increased diameter vent pipes is 125 feet.

Table 5.2: Maximum Equivalent Vent Length for Oversized Vent Pipe

Transition Point (ft from boiler)	TEL of Standard 2" or 3" Vent Pipe (ft)	TEL of Oversized 3" or 4" Vent Pipe (ft)	Maximum TEL of all Vent Pipe (ft)
15	30	95	125
20	40	77-1/2	117-1/2
25	50	60-1/2	110-1/2
30	60	43	103
35	70	26	96
40	80	8-1/2	88-1/2
None	85	0	85

TEL = Total Equivalent Length

- e. If the transition occurs at a distance greater than 15 equivalent feet from the boiler, the maximum equivalent length will be reduced. See Table 5.2. Standard Vent Pipe is 2" and Oversized Vent Pipe is 3" for PI-T50 and PI-T80. Standard Vent Pipe is 3" and Oversized Vent Pipe is 4" for PI-80 through PI-199.

E. EXHAUST VENT AND AIR INTAKE PIPE INSTALLATION

1. On the PI-T50 and PI-T80 the 2" exhaust vent connection is located on the top, right side of the boiler and the air intake is on the top, left side. See Figure 10.1. The air intake connection is intended for a slip fit. No sealant or adhesive is required.
2. On the PI-80, PI-140, and PI-199 Boilers the 3" exhaust vent connection is located on the rear of the boiler and the air intake is higher and toward the left side when the boiler is viewed from the front. See Figure 10.2. The air intake connection is intended for a slip fit. No sealant or adhesive is required.

3. Use only solid PVC, CPVC, or ABS schedule 40 or 80 pipe. FOAM CORE PIPING IS NOT APPROVED.
4. Remove all burrs and debris from joints and fittings.



WARNING

All joints of positive pressure vent systems must be sealed completely to prevent leakage of flue products into the living space.

5. All joints must be properly cleaned, primed, and cemented. Use only cement and primer approved for use with the pipe material. Cement must conform to ASTM D2564 for PVC or CPVC pipe and ASTM D2235 for ABS pipe.
6. Horizontal lengths of exhaust vent must slope back towards the boiler not less than 1/4" per foot to allow condensate to drain from the vent pipe. If the vent pipe must be piped around an obstacle that causes a low point in the pipe, a drain pipe must be connected to allow condensate to drain.
7. All piping must be fully supported. Use pipe hangers at a minimum of 4 foot intervals to prevent sagging of the pipe where condensate may form.
8. Do not use the boiler to support any piping.
9. A screened straight coupling is provided with the boiler for use as an outside exhaust termination.
10. A screened intake air tee is provided with the boiler to be used as an outside intake termination.
11. The following are optional intake air/exhaust vent terminations available from your PB Heat, LLC distributor for use with Pinnacle boilers.

Table 5.3: Vent Termination Kits

Description	Stock Code
2" PVC Concentric Vent Termination Kit	91469
3" PVC Concentric Vent Termination Kit	91403
2" Stainless Steel Vent Termination Kit	91465
3" Stainless Steel Vent Termination Kit	91402
4" Stainless Steel Vent Termination Kit	91401

12. Refer to Figure 5.3 to 5.10 for sidewall venting and Figures 5.11 to 5.14 for vertical venting. Refer to Figure 5.15 for sidewall venting below grade.
13. Seal penetration openings in building structure around vent pipe and intake air pipe.

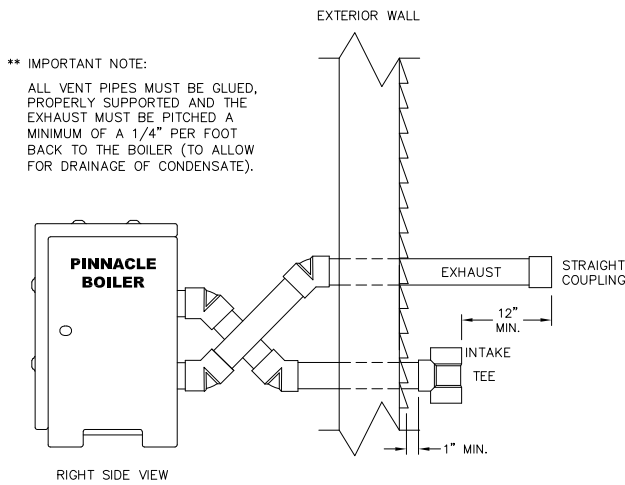


Figure 5.3: PI-80, PI-140, and PI-199 Sidewall Venting with 3" Pipe (Exhaust Termination at Higher Elevation than Air Intake).

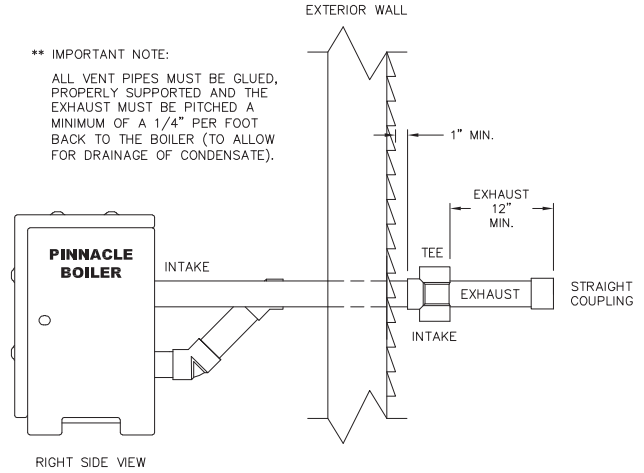


Figure 5.5: PI-80, PI-140, PI-199 Sidewall Venting with 3" Pipe (Air Intake and Exhaust on the same Elevation).

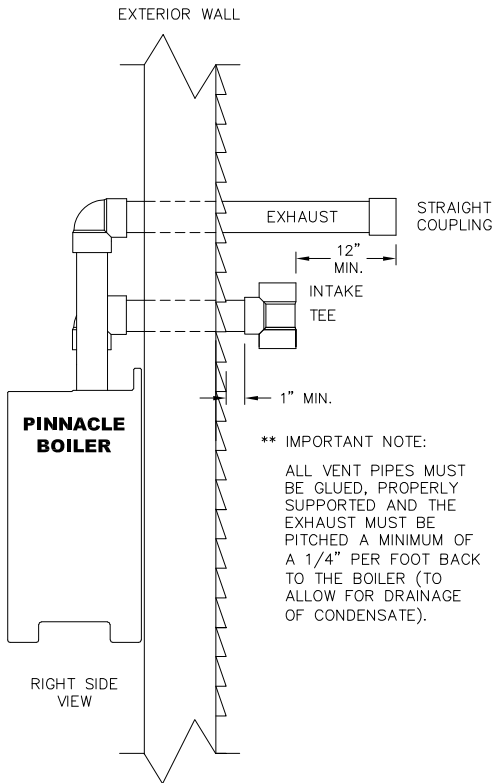


Figure 5.4: PI-T50 & PI-T80 Sidewall Venting with 2" Pipe (Exhaust Termination at Higher Elevation than Air Intake).

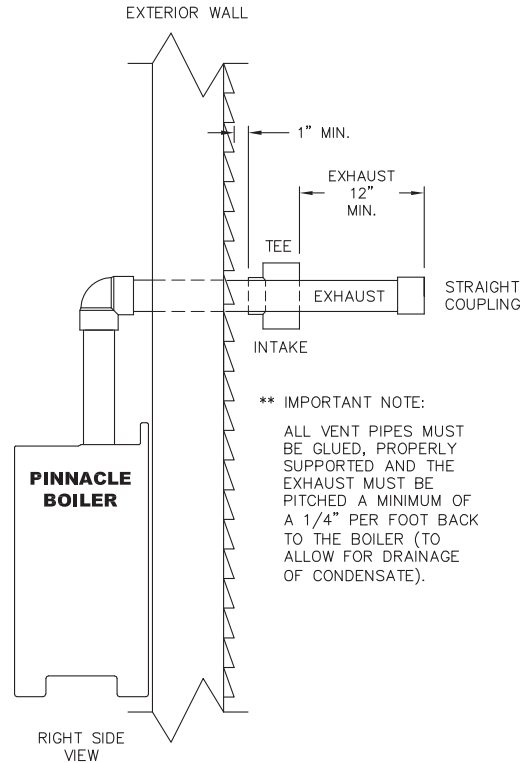


Figure 5.6: PI-T50 & PI-T80 Sidewall Venting with 2" Pipe (Air Intake and Exhaust on the same Elevation).

WARNING

All exhaust vent pipes must be glued, properly supported, and pitched at a minimum of 1/4" per foot back to the boiler. Failure to do so may result in severe personal injury, death, or substantial property damage.

VENTING, INTAKE AIR AND CONDENSATE

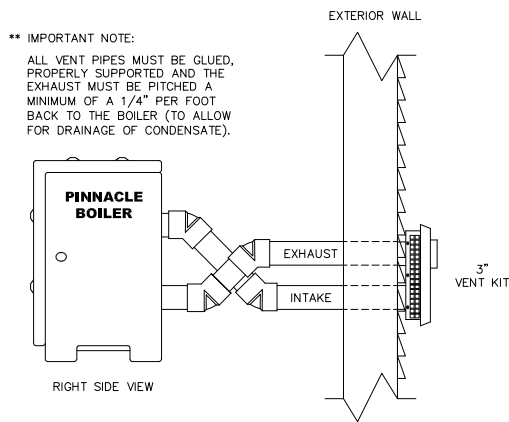


Figure 5.7: PI-80, PI-140, PI-199 Sidewall Venting with 3" Pipe (3" Vent Kit).

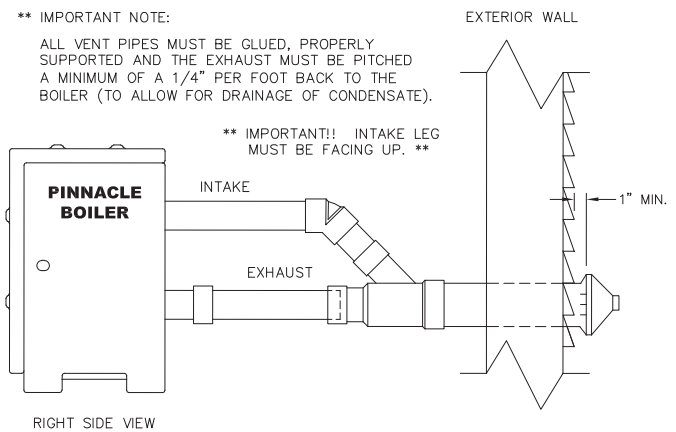


Figure 5.9: PI-80, PI-140, PI-199 Sidewall Venting with 3" Pipe (Concentric Vent Kit).

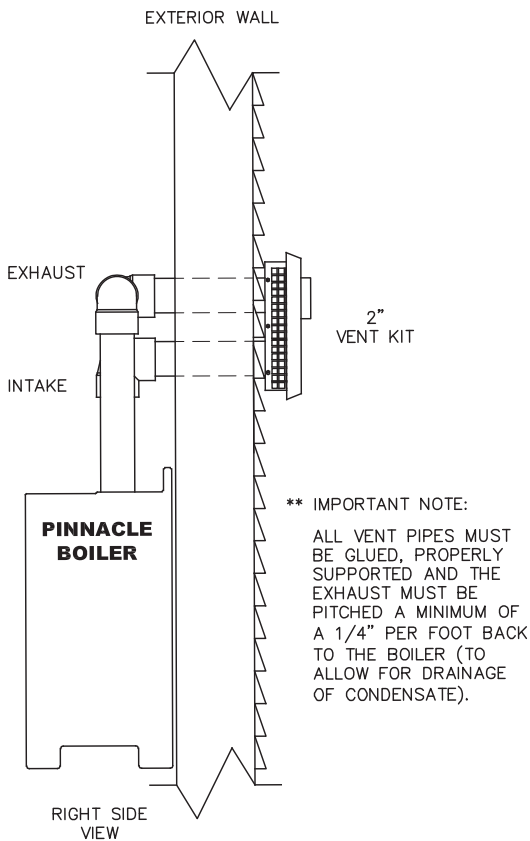


Figure 5.8: PI-T50 & PI-T80 Sidewall Venting with 2" Pipe (2" Vent Kit).

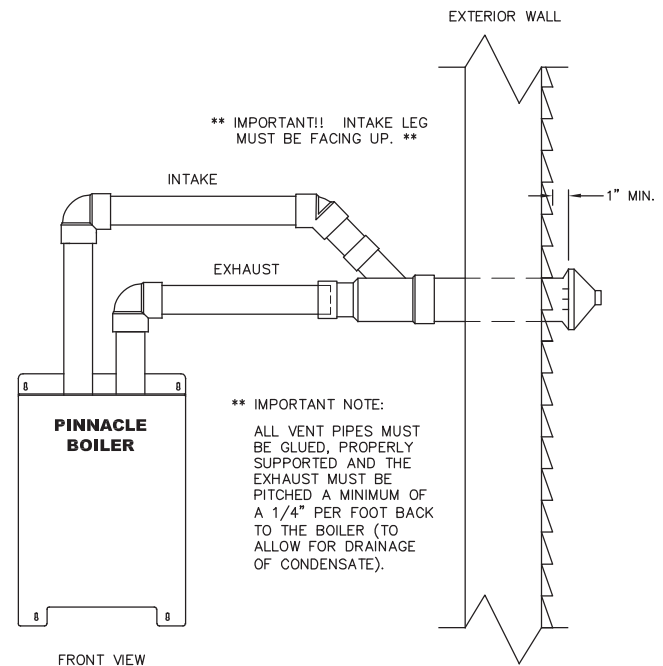


Figure 5.10: PI-T50 & PI-T80 Sidewall Venting with 2" Pipe (Concentric Vent Kit).

WARNING

All exhaust vent pipes must be glued, properly supported, and pitched at a minimum of 1/4" per foot back to the boiler. Failure to do so may result in severe personal injury, death, or substantial property damage.

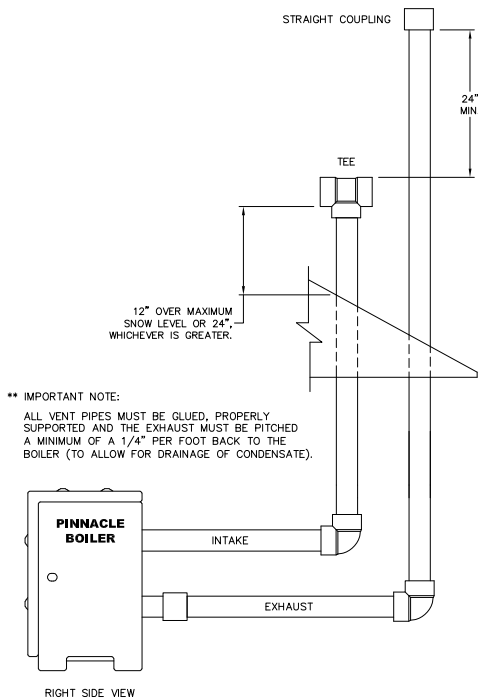


Figure 5.11: PI-80, PI-140, PI-199 Vertical Venting with 3" Pipe.

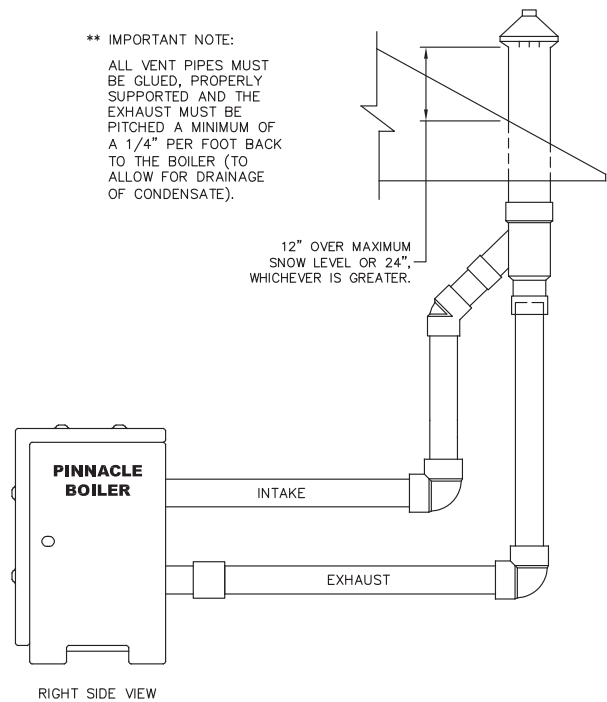


Figure 5.13: PI-80, PI-140, PI-199 Vertical Venting with 3" Pipe (Concentric Vent Kit).

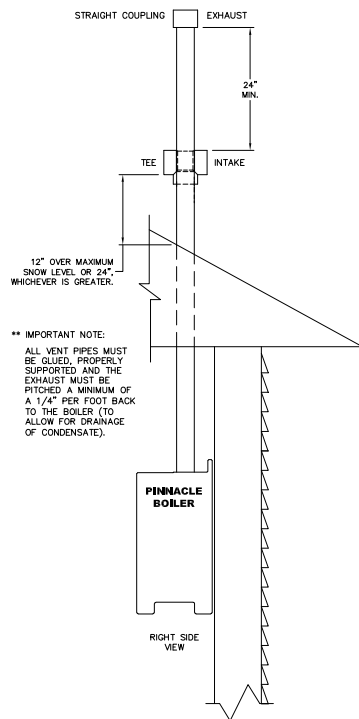


Figure 5.12: PI-T50 & PI-T80 Vertical Venting with 2" Pipe.

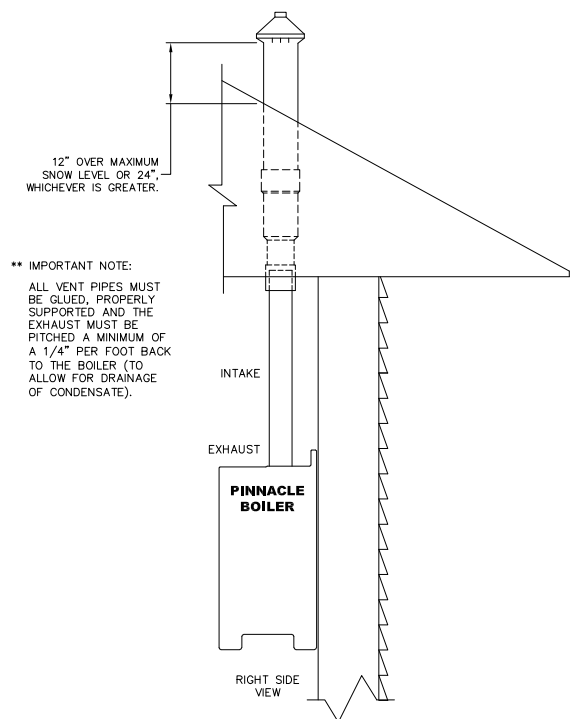


Figure 5.14: PI-T50 & PI-T80 Vertical Venting with 2" Pipe (Concentric Vent Kit).

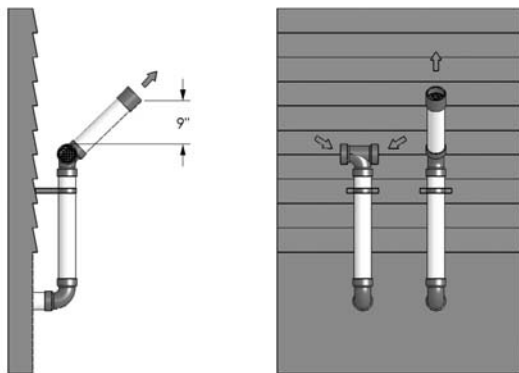


Figure 5.15: Sidewall Venting Below Grade

F. EXHAUST TAPPING FOR VENT SAMPLE

To obtain a combustion sample a hole must be drilled in the exhaust vent pipe just above the first elbow at the outlet of the boiler.

- Drill a 21/64" diameter hole in the vent pipe just above the first elbow.
- Tap the hole with a 1/8" NPT Pipe Tap.
- Take combustion samples through the tapped hole.
- Thread a standard 1/8" NPT Pipe Plug into the hole.



CAUTION

Make sure the condensate drain piping is below the level of the boiler to prevent condensate from filling up the combustion chamber and damaging the boiler.

G. CONDENSATE DRAIN INSTALLATION

- This boiler is a high efficiency unit that produces condensate. The condensate must be drained from the unit.
- The hose under the unit is a condensate trap which prevents products of combustion from exiting the boiler through the condensate drain.
- The black plastic 3/4" NPT fitting at the left side of the boiler is intended for connection to plastic piping. Do not block vent hole at the top of the fitting.
- Slope the condensate drain piping down away from the unit into a floor drain or condensate pump.
Check with local codes or ordinances to determine if the condensate must first be neutralized before running it to a drain.
- Do not route the condensate piping through unheated spaces that may reach freezing temperatures.
- Use only plastic piping for the condensate drain line. Metal pipes will corrode and cause blockage of the condensate drain.

- To allow for proper drainage on large horizontal runs, a second line vent may be required and the required tubing size may increase to 1" I.D.
- A condensate removal pump is required if the boiler is below the drain.

H. BOILER REMOVAL FROM COMMON VENTING SYSTEM

- At the time of removal of an existing boiler from a common venting system, follow these steps with each appliance that remains connected. These steps are to be completed while all components which remain connected to the common venting system are not in operation.
 - Seal any unused openings in the common venting system.
 - Visually inspect the venting system for proper size and horizontal pitch. Verify there is no blockage or restriction, leakage, corrosion, and other deficiencies which could cause an unsafe condition.
 - Where practical, close all building doors and windows, including interior doors between the space in which the appliances that remain connected to the common venting system are located and other areas of the building.
 - Turn on any clothes dryers and any appliance not connected to the common venting system. Turn on any exhaust fans, such as range hoods and bathroom exhaust fans, at their maximum speed. (Do not operate a summer exhaust fan).
 - Close fireplace dampers.
 - Place the appliance being inspected in operation. Follow the lighting instructions and adjust the thermostat so that the appliance operates continuously.
 - Test for spillage at the draft hood relief opening after 5 minutes of main burner operation. Use the flame of a match or candle, or smoke from a cigarette, cigar, or pipe.
 - After it has been determined that each appliance remaining connected to the common venting system properly vents when tested as outlined above, return doors, windows, exhaust fans, fireplace dampers and any other gas-burning appliance to their previous condition of use.
 - Any improper operation of the common venting system should be corrected so that the installation conforms with the *National Fuel Gas Code, ANSI Z223.1/NFPA 54* and/or *CAN/CGA B149*.
 - The common venting system should be resized to approach the minimum size determined by using the appropriate tables located in the *National Fuel Gas Code, ANSI Z223.1/NFPA 54, "Sizing of Category I Venting."*

6. ELECTRICAL

Install all electrical wiring in accordance with the National Electrical Code, ANSI/NFPA 70, and local requirements.

NOTICE

This unit when installed must be electrically grounded in accordance with the requirements of the authority having jurisdiction or, in the absence of such requirements, with the current edition of the National Electrical Code, ANSI/NFPA 70.

A. WIRING

1. Refer to Figure 6.1 for connecting the power supply to the boiler.
2. Connect boiler to a 110 volt, single phase, 60 hertz electrical supply line with a fused disconnect switch. The boiler is fused for a load of 6.3 amperes.
3. The boiler electrical connection is located on the left side of the boiler in the junction box which houses the service switch.

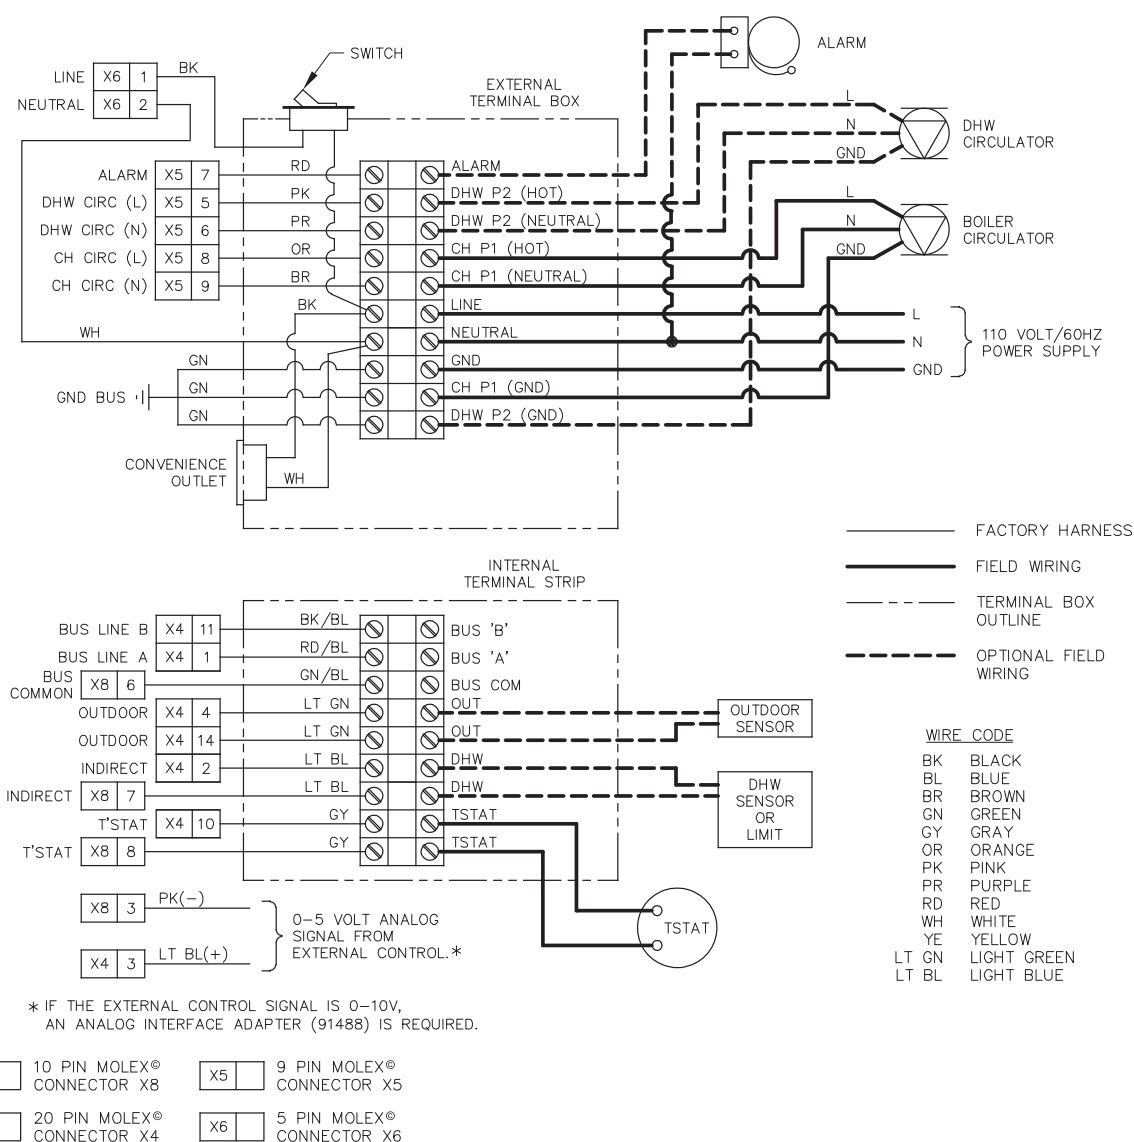


Figure 6.1: Wiring Connections to Boiler Junction Box

4. Make sure to maintain correct polarity on the incoming power supply wires. If polarity is reversed, the boiler control will not sense the main burner flame.
5. Connect the ground wire from the incoming power supply to the green ground screw in the junction box. Also, the boiler ground should be connected to this screw.
6. Figure 6.1 shows connections to boiler circulator.
 - a) The maximum current load for the circulator circuit is 4.0 amperes.
 - b) For loads greater than 4.0 amps, isolate the circulator using a switching relay.
 - c) An example of this wiring using a Honeywell R845A relay is shown in Figure 6.2
7. The thermostat connections are shown in Figure 6.1 or 6.2. The setting for the thermostat anticipator is 0.56 amps.
8. The boiler circulator board is shown in Figure 6.3.
9. Factory wiring of all controls and safety devices are shown in Figure 6.4.

B. SEQUENCE OF OPERATION

1. System Power-Up:
 - a) When power is first applied to the boiler, the control will initially run through a self-diagnostic routine. The interface unit shows the system supply temperature.
 - b) Next, it will power the combustion air fan for a 10 second purge cycle.
 - c) Finally the combustion air shuts down and if there is no call for heat the control board enters a standby mode.
2. Heating Cycle:
 - a) When the thermostat calls for heat (closing the contact between the two gray [TSTAT] wires) and the boiler control senses a supply temperature lower than the set point by more than the differential, the boiler initiates a heating cycle.
 - b) The control then powers the combustion air fan at the speed prescribed for the particular boiler model and performs a 6 second pre-purge of the combustion chamber.
 - c) 0.5 second before the pre-purge is complete power is applied to the spark igniter.

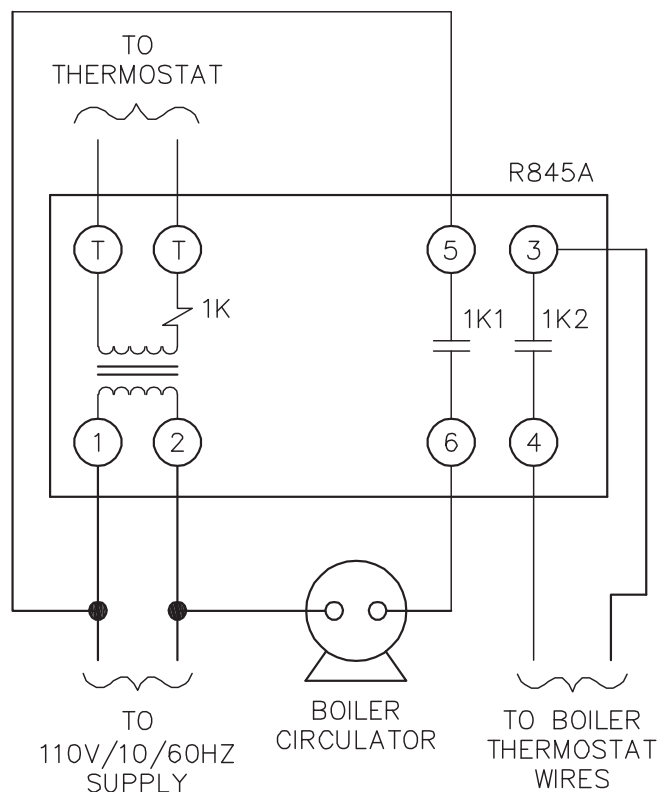


Figure 6.2

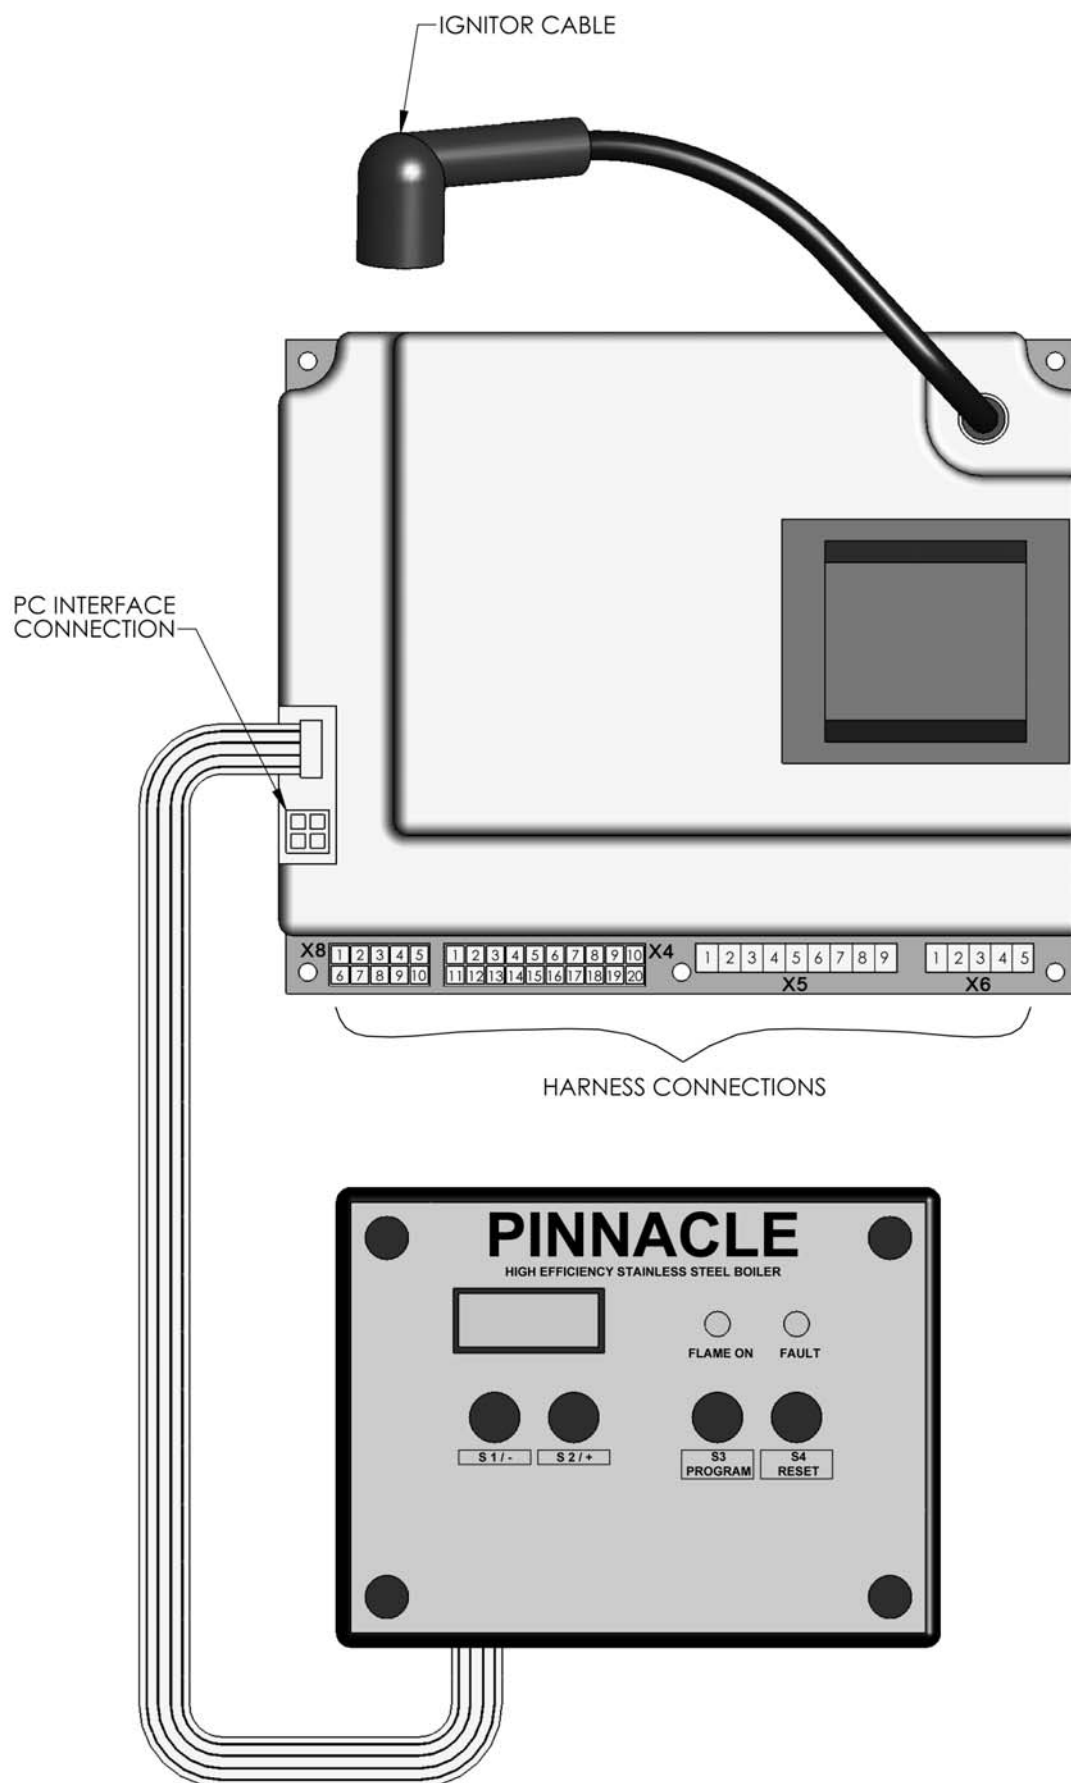


Figure 6.3: P825 Control Board with Molex® Connector & Pin Designations

- d) Once the pre-purge cycle is complete, the fan speed decreases to the programmed ignition speed.
- e) The main gas valve is then energized to allow gas to mix with the combustion air.
- f) If the main flame is not detected in 5 seconds, the gas valve closes and the combustion fan goes into post-purge. Otherwise, the combustion fan stays at the ignition speed for the length of the flame stabilization period. (10 to 25 seconds).
- g) After the flame stabilization period is complete, the combustion air fan ramps down to its low fire setting. Then the boiler will begin to modulate depending on the supply temperature to maintain the set point temperature.
- h) As the supply temperature approaches the set point, the combustion control will reduce the input rate. The supply temperature will continue to climb to about 7°F above the boiler set point before it cycles off.
- i) The differential is applied from this point. For example if the boiler set point is at 180°F with a 10°F differential, the supply temperature will reach 187°F before shutting down. It will not re-start until the supply temperature drops below 177°F.

- j) If an indirect limit is connected between two light blue (DHW) wires, the boiler will run the same as described in 2.a through i except it will use the Indirect (DHW) setpoint.

C. SAFETY INTERLOCKS

1. **Low Water Pressure Limit Switch:** This boiler is intended to operate at pressures exceeding 10 psig. If the water pressure drops to below 10 psig, there is a water pressure limit switch that interrupts boiler operation and displays the message "PRO" on the display module. The combustion air fan completes a post-purge in this event. Once the low water pressure condition is corrected the boiler will reinitiate a heating cycle if a call for heat remains.
2. **High Water Temperature Limit Switch:** The boiler is equipped with a limit switch that will interrupt the heating cycle and execute a post-purge if the water temperature increases to above the limit set point of 210°F.
3. **High Flue Temperature Limit Switch:** The high flue temperature limit switch will interrupt the heating cycle if it senses flue gas temperatures above 210°F.

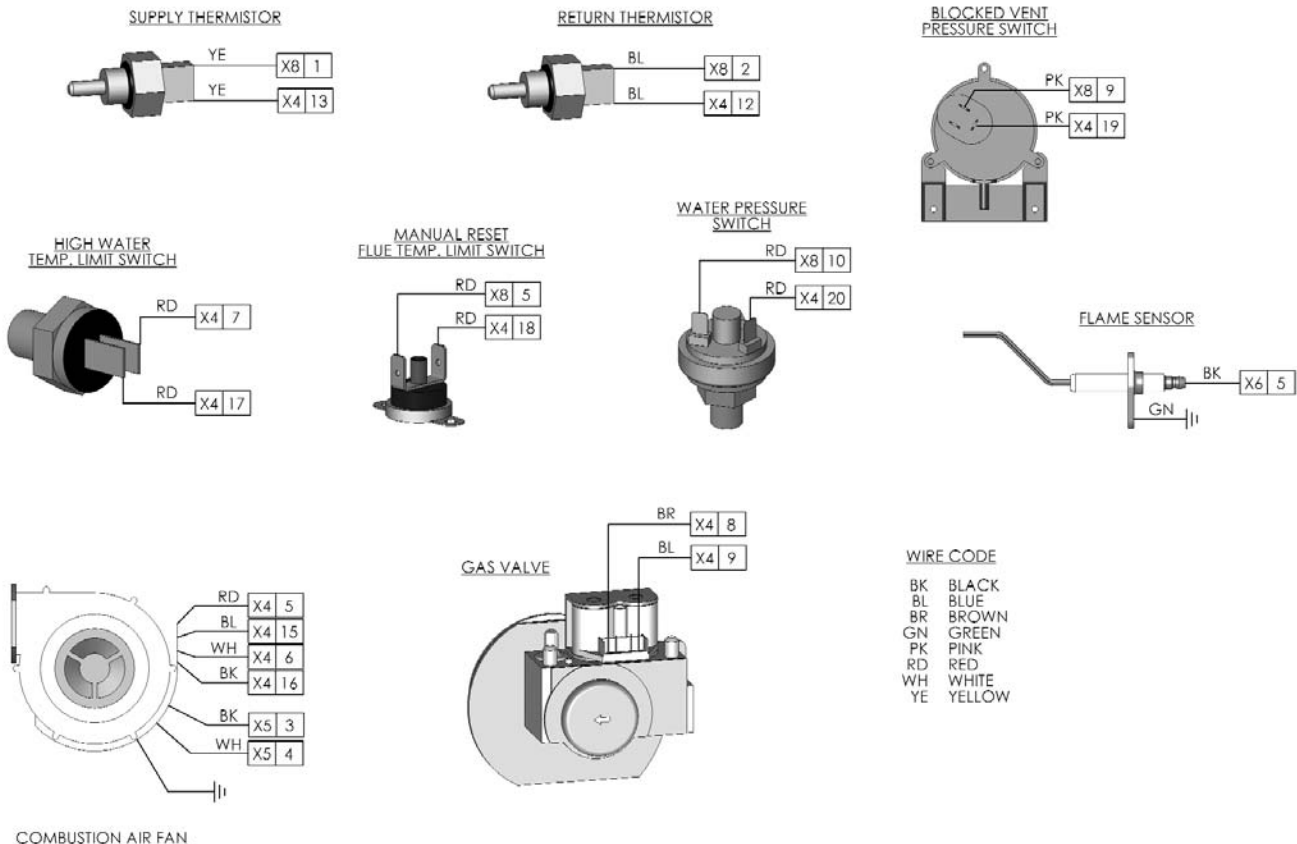


Figure 6.4: Component Wiring

4. **Blocked Vent Pressure Limit Switch:** This switch prevents the boiler from operating if the vent pressure exceeds 1.5 inches water column. This will prevent the boiler from operating if the vent pipe is blocked. The boiler will indicate "FLU" on the display module.

D. CONTROL FUNCTIONS

1. This Pinnacle boiler is equipped with a P825 Control Board. This control board with display module has the following functions:
 - a. Shows the boiler supply (outlet) water temperature on the LED Display as default.
 - b. Allows user to adjust the supply water set point, the set point differential, and change the display mode between Fahrenheit and Celsius.
 - c. Provides Error and Fault Codes on the LED Display.
 - d. Shows the supply and return temperatures, fan speed, flame signal (μA), boiler circulator status, boiler set point, total power on hours, boiler on hours, and the number of cycles.
 - e. Allows manual control of the firing rate using the Service Mode.
2. **Default Display:** Under normal operating conditions the default display shows the temperature of the water supply (boiler outlet) to the system. This may be displayed in Fahrenheit or Celsius according to user preferences.
3. **Program Functions:** By using the S3 "Program" key, the settings shown in Table 6.1 may be programmed.
 - a. To access the menu, stop any calls for heat. Wait for blower to stop. Press and hold the S3 "Program" key on the display module.
 - b. The control will enter the Supply Set Point selection.
 - i. The display will alternately show "C" and then the current set point temperature.
 - ii. The set point may be adjusted by using the S1/- (to decrease) or S2/+ (to increase) keys on the display module.



NOTICE

If outdoor reset is used setpoint should be above Boiler Supply Design Temperature, Parameter 9. See Section E. "Heating Curve".

- c. Pressing the S3 "Program" key again will advance to the next adjustable value, Set Point Differential, and the display will alternate between "Ch" and the programmed value:
 - i. The differential adjustment is the difference between the temperature that the boiler shuts down (high) and the temperature at which it re-starts (low).

Table 6.1: Program Functions

Description	Alternating Display Character	Allowable Range	Default
Supply Set Point	C	50°F to 201°F (10°C to 94°C)	180°F
Set Point Differential	Ch	5°F to 30°F (3°C to 17°C)	30°F
Indirect (DHW) Set Point	dE	104°F to 158°F (40°C to 70°C)	119°F
Not Applicable	dh	N/A	9
Measurement Units	t	C or F	F

- ii. The differential may be set to values between 5°F (3°C) and 30°F (17°C) in 1°F increments.
 - iii. The boiler will always shut down at a temperature 7°F (4°C) above the set point. The differential temperature is then applied to this value.
 - iv. The set point differential may be adjusted by using the S1/- (to decrease) or S2/+ (to increase) keys on the display module.
- d. Pressing the S3 "Program" key again will advance to the next adjustable value, Indirect (DHW) Set Point:
- i. The display will alternate between "dE" and a numerical value.
 - ii. If an optional indirect tank sensor is not installed, this value is not applicable.
 - iii. If an optional indirect tank sensor (91589) is installed, the set point may be adjusted by using the S1/- (to decrease) or S2/+ (to increase) keys on the display module.
- e. Pressing the S3 "Program" key again will advance to the next adjustable value. The display will read "dh" and alternate with numerical value. This value is not applicable to the Pinnacle boiler.
- f. Finally, by pressing the S3 "Program" key again, the display will advance to the Measurement Units selection. The display will alternate between "t" and either "F" or "C" depending on the units selected. This value may be changed by using the S1/- or S2/+ keys on the display module.
- g. Pressing the S3 "Program" key once more will exit the program mode and again display the supply temperature.

4. **Error Codes:** The LED Display will display error codes if the boiler is in a temporary fault condition. Table 8.1 shows Error Codes and descriptions. In some cases, if the temporary fault is not corrected within 60 seconds the controller will go into a Fault Code.
5. **Fault Codes:** A Fault Code indicates the controller is locked-out. Press the S4 "Reset" key to resume operation after repairing the problem. Table 8.2 shows Fault Codes for this control.
6. **Status Menu:** The status menu, as shown in Table 6.2, allows the installer to display the current boiler supply (outlet) temperature, return (intake temperature), fan speed, flame signal (μ A), boiler circulator status, boiler set point, total power on hours, boiler on hours, and the number of cycles.
 - a. To access this menu press and hold the S4 "Reset" key on the display module for 3 seconds.
 - b. The display will alternate between "d1" and the value of the supply temperature.
 - c. To scroll through the other status codes, simply press S4 "Reset" key again.
 - d. To exit this menu, press the S3 "Program" key.
7. **Service Mode:** The Pinnacle boiler can be operated in Service Mode to allow the installer to manually set the fan speed/input rate of the boiler.
 - a. To enter service mode, press and hold the S2/+ key and the S3 "Program" key simultaneously.
 - b. The display will alternately display "SER" and the fan speed in RPMs \div 10. As default, the fan speed will start at the ignition fan speed (this value is listed in Section 10, Dimensions and Ratings, for each boiler size).
 - c. The fan speed can be adjusted by using the S1/- key (to decrease speed) or S2/+ key (to increase speed) on the display module.
 - d. The fan speed will stay in this mode for 10 minutes or until the boiler reaches 7 degrees above the set point temperature.
 - e. To exit the Service Mode, press the S1/- and S2/+ keys simultaneously.
8. **Installer Menu:** The Pinnacle boiler can be programmed to be controlled by an external analog input controlling set point temperature or fan speed. In addition, it can be programmed for a 6 minute step modulation sequence.
 - a. To enter the installer menu, stop any calls for heat. Wait for blower to stop. Press and hold the S3 "Program" key and S4 "Reset" key simultaneously for 3 seconds. The display will show a blinking "000."
 - b. Use the S1/- and S2/+ keys to change the display to read 825. Press and hold the S3 "Program" key to enter the installer menu. The display will alternate between 1, which represents the Parameter Number, and either 0 or 1, which represents the Function setting.


Table 6.2: Status Menu

Status Code	Description
d1	Supply (Outlet) Temperature
d2	Return (Intake) Temperature
d3	DHW (Indirect) Demand Status (0 = Open, 1 = Demand) [The DHW (Indirect) Temperature will be displayed if the sensor is attached*]
d4	Not Applicable
d5	Outdoor Temperature**
d6	Fan Speed (rpm \div 10) [ex. 200 = 2000 rpm]
d7	Ionization Current (Flame Signal)
d8	Central Heating Circulator Status (0 = Off, 1 = On)*
d9	DHW (Indirect) Circulator Status (0 = Off, 1 = On)*
d10	Bus Comm Status (co = connected, no = not connected)
d11	Central Heating Set Point
d12	Power On Time (Hrs \div 1000) [ex. 0.1 = 100 hrs]
d13	Central Heat On Time (Hrs \div 1000)
d14	DHW (Indirect) On Time (Hrs \div 1000)
d15	Successful Ignition Attempts (Attempts \div 1000) [ex. 0.1 = 100 attempts]

*Optional DHW (Indirect) Tank Sensor (91589) Required

**Only when Outdoor Sensor (91587) is connected

7. **Service Mode:** The Pinnacle boiler can be operated in Service Mode to allow the installer to manually set the fan speed/input rate of the boiler.

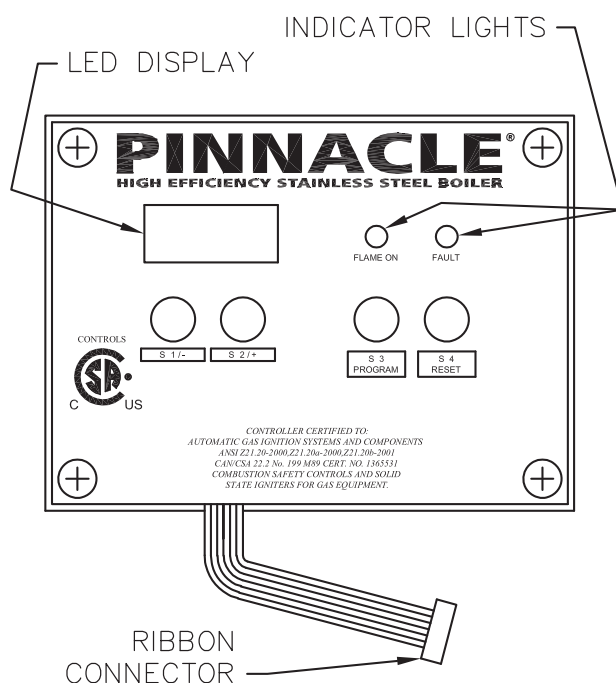**Figure 6.5: Display Module**

- c. Table 6.3 shows the Parameter numbers and Functions. Press S3 "Program" to advance through the parameters and use the S1/- and S2/+ keys to change the function values. **Do not change to external input without external input device installed! Do not change Parameters 1, 2, 4 or 20!**
- d. To exit the Installer Menu, press and hold the S4 "Reset" key for 3 seconds.

E. HEATING CURVE

1. Parameters 8, 9, 10 and 11 in the Installer Menu (Table 6.3) define the heating curve for outdoor reset operation. This is applicable only if the outdoor sensor is installed. When this sensor is installed the control will automatically recognize it and begin outdoor reset operation.
2. Parameters 8 and 9 define the design point of the heating curve. The factory defaults are set such that if the outdoor temperature is 5°F or below, the boiler target temperature will be 180°F.
3. Parameters 10 and 11 define the "mild weather" reference point of the heating curve. The factory defaults will drop the boiler supply target temperature to 95°F when the outdoor temperature reaches 68°F. If the outdoor temperature increases beyond 68°F the boiler supply target temperature will continue to drop based on the slope of the heating curve.
4. When the outdoor temperature is above the outdoor design temperature and below the mild weather outdoor reference temperature, the boiler target temperature will vary according to a straight line between the design point and the mild weather reference point. For example, if the outdoor temperature is at 32°F the boiler target temperature will be 144°F.
5. Figure 6.6 shows a graph of the heating curve with the default design and mild weather reference point. It also illustrates how the boiler target temperature varies according to outdoor temperature.
6. The heating curve operates only if an outdoor sensor is connected to the boiler. If the outdoor sensor is disconnected, the boiler will revert to standard setpoint operation.



NOTICE

The outdoor sensor may need to be temporarily disconnected in order to start up or service the boiler during mild weather.

7. Parameter 12 defines the minimum boiler supply target temperature.
 - If this temperature is above the mild weather boiler reference temperature, the boiler will continue to target this temperature even if the outdoor temperature exceeds the corresponding value. This may be used for kick space heaters or unit heaters that require a specified minimum water temperature to operate.

- If this temperature is below the mild weather boiler reference temperature, the boiler will continue to target lower temperatures as the outdoor temperature increases by following the slope of the heating curve.
8. Parameter 14 defines the maximum amount of time the DHW (Indirect) Circulator will take priority over the Boiler Circulator. If there is a continuous call for both indirect and space heating, the DHW and Boiler Circulators will alternate, each running for the maximum amount of time or until the call for heat ends.

Table 6.3: Installer Menu

Parameter No.	Function	Range	Default Value	Programmed Setting
1	Unavailable	N/A	de	No Change Allowed
2	Unavailable	N/A	149°F	No Change Allowed
3	Domestic Hot Water Temperature Setpoint (Available only if indirect tank sensor is installed)	95°F to 160°F (35°C to 71°C)	125°F	
4	Unavailable	N/A	36°F	No Change Allowed
5	Domestic Hot Water Temperature Differential (Available only if indirect tank sensor is installed)	1°F to 18°F (1/2°C to 10°C)	7°F	
6	Indirect Circulator Post Purge Time	0 to 60 minutes	0 minutes	
7	Warm Weather Shutdown Temperature	41°F to 122°F (5°C to 50°C)	68°F	
8	Outdoor Design Temperature	-49°F to 32°F (-45°C to 0°C)	5°F	
9	Boiler Supply Design Temperature	77°F to 201°F (25°C to 94°C)	180°F	
10	Mild Weather Outdoor Reference Temperature	32°F to 95°F (0°C to 35°C)	68°F	
11	Mild Weather Boiler Reference Temperature	32°F to 180°F (0°C to 82°C)	95°F	
12	Minimum Boiler Supply Target Temperature	32°F to 180°F (0°C to 82°C)	68°F	
13	Central Heating Circulator Post Purge Time	0 to 10 minutes	0 minutes	
14	Indirect Maximum Run Time	0 to 60 minutes	30 minutes	
15	Bus Address [0 Zone Master, 1-8 Cascade Slave] (Not Available)	0-8	0	
16	Internal/External Control Parameter: 0 = Internal Control; 1 = External Control	0-1	0	
17	External Input Type: 0 = Temperature; 1 = Modulation %	0-1	0	
18	Step Modulation: 0 = Disabled; 1 = Enabled	0-1	0	
19	Boiler Setpoint for Indirect Call for Heat	119°F to 180°F (48°C to 82°C)	180°F	
20	Unavailable	N/A	1	

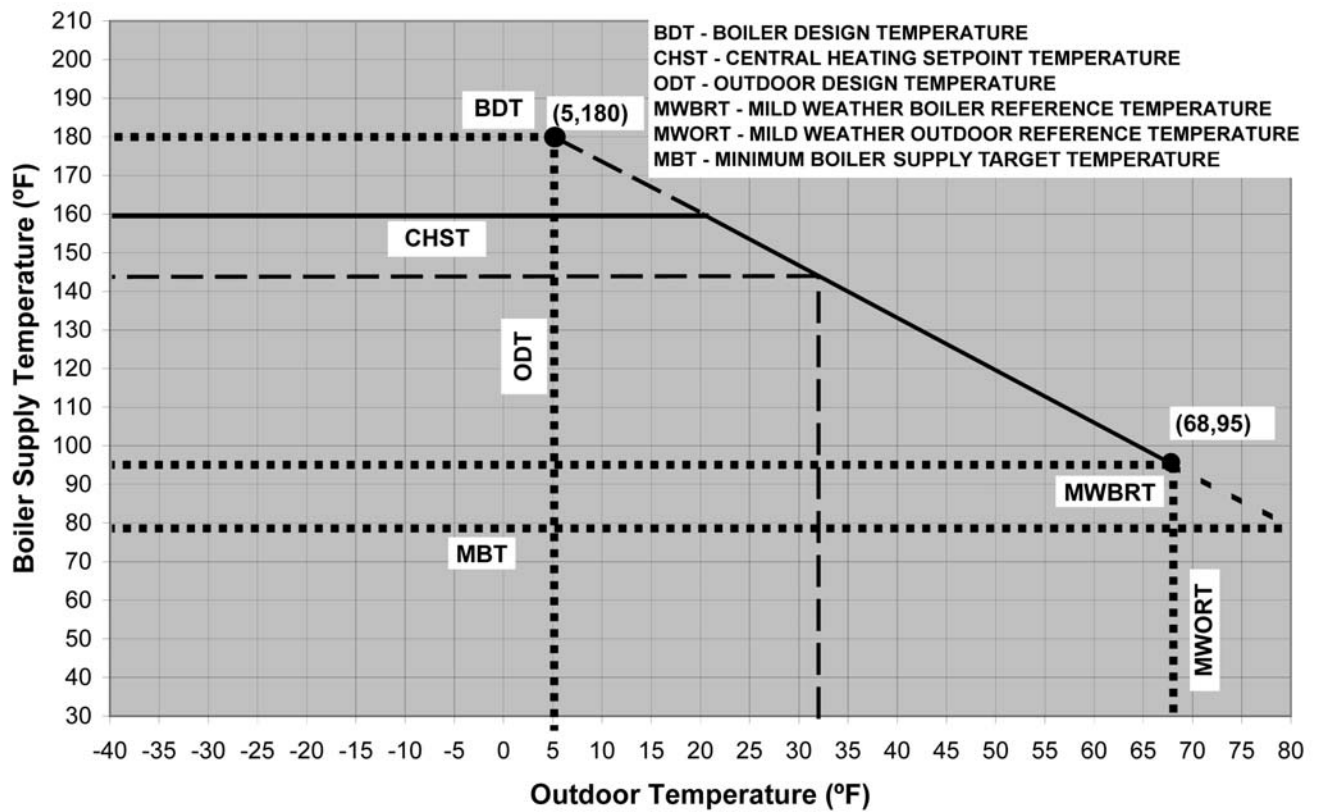


Figure 6.6: Central Heating Curve (Factory Defaults)

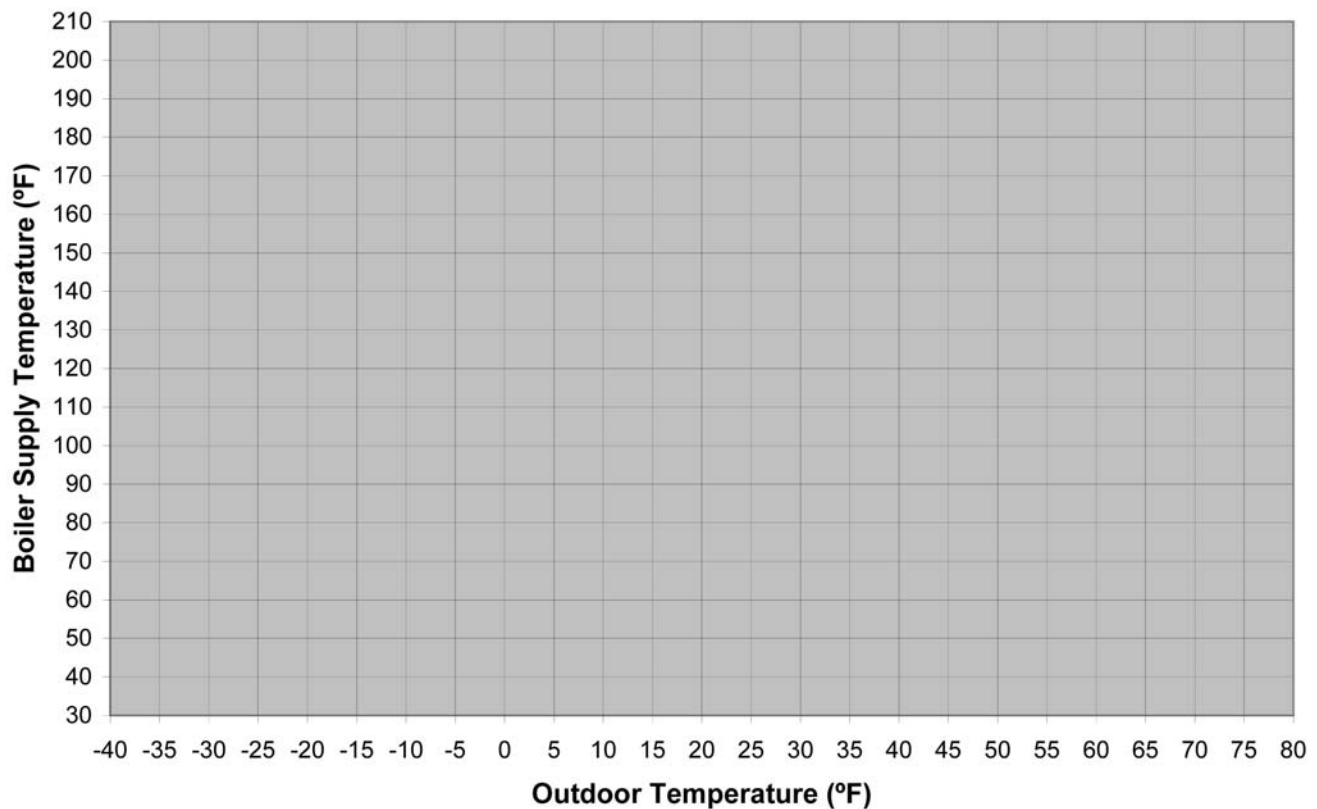


Figure 6.7: Central Heating Curve (Installer Settings)

7. START-UP PROCEDURES

A. COMPLETING THE INSTALLATION

1. Confirm that all water, gas and electricity are turned off.
2. Verify that water piping, venting, gas piping and electrical wiring and components are installed properly and where applicable in accordance with manufacturers' instructions. Be sure that the boiler is installed in accordance with this manual and good engineering practice.
3. Fill the boiler and system with water, making certain to vent all air from each high point in the system. Open each vent in the system until all air is released and water begins to be discharged, and then close the vent.
4. The pressure reducing valve on the fill line will typically allow the system to be filled and pressurized to 12 PSI. Consult the manufacturer's instructions for operation of the valve and expansion tank.
5. Check joints and fittings throughout the system and repair as required.
6. Connect a manometer at or near the service valve to the boiler.
7. Confirm that the gas supply pressure to the boiler is between the minimum and maximum values for the gas being used. These values can be found in Table 4.4 of Section 4.
8. If a supply pressure check is required, isolate the boiler and gas valve before performing the pressure test. If the supply pressure is too high or too low, contact the fuel gas supplier.
9. Turn on electricity and gas to the boiler. Check to see if the LED display is lit. The combustion air fan will begin a 5 second purge cycle and then the control will go into Standby Mode.
10. Refer to Section 6, Paragraph D, "Control Functions," for set point and differential settings. To set the heating curve and advanced functions refer to Section 6, Paragraph E, "Heating Curve."
11. Light the boiler by following the Lighting/Operating instructions in this section. The initial ignition may fail several times before the gas piping is completely purged of air.
12. Use the sequence of operation description and Figure 6.1, Wiring Connections to Boiler Junction Box, to follow light off and shutdown sequences and to assist in diagnosing problems. If the boiler does not function properly, consult Section 8, Troubleshooting.
13. Refer to subsection 7.C for instructions on setting up the boiler.

 
B. LIGHTING AND OPERATING PROCEDURES


FOR YOUR SAFETY READ BEFORE OPERATING

WARNING: If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury, or loss of life.

 
- A. This appliance does not have a pilot. It is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand.
 - B. BEFORE OPERATING smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.
- WHAT TO DO IF YOU DO SMELL GAS**
- Do not try to light any appliance.
 - Do not touch any electric switch; do not use any phone in your building.
 - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
 - If you cannot reach your gas supplier, call the fire department.
- C. Use only your hand to turn the gas shut off valve. Never use tools. If the handle will not turn by hand, don't try to repair it, call a qualified service technician. Force or attempted repair may result in a fire or explosion.
 - D. Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.

OPERATING INSTRUCTIONS

1. STOP! Read the safety information above.
2. Set the thermostat to lowest setting.
3. Turn off all electric power to the appliance.
4. This appliance is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand.
5. Remove Front Cover.
6. Turn gas shutoff valve clockwise  to "OFF". Handle will be perpendicular to pipe, do not force.
7. Wait five (5) minutes to clear out any gas. Then smell for gas, including near the floor. If you smell gas, STOP! Follow "B" in the safety information above on this label. If you don't smell gas, go to the next step.
8. Open the gas shutoff valve. Handle will be in line with the pipe.
9. Install Front Cover.
10. Turn on all electric power to appliance.
11. Set thermostat to desired setting.
12. If the appliance will not operate, follow the instructions "To Turn Off Gas To Appliance" and call your service technician or gas supplier.

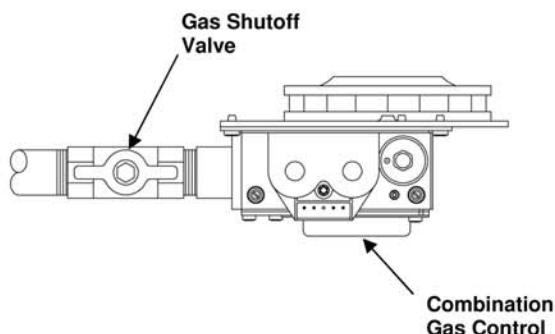

TO TURN OFF GAS TO APPLIANCE

1. Set the thermostat to lowest setting.
2. Turn off all electric power to the appliance if service is to be performed.
3. Remove Front Cover.
4. Turn the gas shutoff valve clockwise  "OFF". Handle will be perpendicular to pipe, do not force.
5. Install Front Cover.

GB WND 9472 REV 0

Figure 7.1: Lighting and Operating Instructions

C. CHECK-OUT PROCEDURE

After Starting the boiler, be certain that all controls are working properly and that combustion is properly set up.

1. Check to be sure that the boiler will shut down when the supply water temperature reaches the control setpoint.
 - a) Note the boiler set point setting in the program menu (Table 6.1) or in the status menu, code d11 (Table 6.2).
 - b) Manually set the boiler to its highest input by entering Service Mode (refer to Section 6.D.7) and pressing the S2/+ key until the display values no longer increase.
 - c) Monitor the boiler temperature on the temperature gauge (field mounted in the boiler supply piping).
 - d) The boiler should shut down at 7°F above the boiler setpoint. If it does not shut down, contact your PB Heat Representative. (Note that depending on the outdoor reset curve, the boiler may shutdown before the Supply Setpoint is met).
2. Check the combustion readings in the boiler vent pipe.
 - a) Drill and tap a 1/8" NPT threaded hole in the boiler vent pipe within 12 inches (305 mm) of the boiler vent connection. (21/64" drill and 1/8" NPT pipe tap are recommended). This is to be used as a combustion test port for the combustion analyzer. See Figure 7.2.



Figure 7.2

- b) Place the probe of a combustion analyzer with carbon dioxide (CO₂) and carbon monoxide (CO) reading capability (Testo Model 325-M or equivalent) into the combustion test port. See Figure 7.3.



Figure 7.3

- c) Manually set the boiler to its highest input by entering Service Mode (refer to Section 6.D.7) and pressing the S2/+ key until the display values no longer increase.
 - i. Verify that the fan speed indicated matches the high fire fan speed in Table 10.2.
 - ii. Verify that the CO and CO₂ emissions are within the parameters specified in Table 4.5.
 - d) Manually set the boiler to its lowest input by pressing the S1/- key until the display values no longer decrease.
 - i. Verify that the fan speed matches the low fire fan speed in Table 10.2.
 - ii. Verify that the CO and CO₂ emissions are within the parameters specified in Table 4.5.
- e) If the values in either of these instances falls outside of the parameters set forth in Table 4.5, turn off the unit and contact your PB Heat representative.

START-UP PROCEDURES

- f) To exit Service Mode, press the S1/- and S2/+ keys simultaneously and hold them until the display shows the outlet temperature.
- g) After removing the analyzer probe from the vent pipe, insert a stainless steel pipe plug into the test port.



Figure 7.4

- h) Record combustion readings on the "Startup Combustion Record" Sheet in Appendix A. Record all requested information for ease of follow-up and troubleshooting.
3. To check operation of the ignition system safety shutoff features:
- a) Turn off gas supply.
 - b) Set thermostat or controller above room temperature to call for heat.
 - c) The boiler should perform 3 attempts at ignition before going into lock-out.
 - d) Turn gas supply on.
 - e) Reset by pushing S4 "Reset" key.
 - f) Observe boiler operation through one complete cycle.
- 4. Turn off the automatic fill to the boiler and drain some water to drop the system pressure below 10 psig. Verify that the display module reads "PRO" after 5 seconds and does not allow the boiler to operate. Close the boiler drain and turn on the automatic fill valve.
 - 5. Low Water Cut-Off (if used) - Consult the manufacturer's instructions for the low water cut-off operational check procedure.
 - 6. Check the system to assure that there are no leaks or overfilling problems which may cause excessive make up water to be added. Make up water may cause liming in the boiler and corrosion in ferrous system parts.
 - 7. Check the expansion tank and automatic fill valve (if used) to confirm that they are operating correctly. If either of these components causes high pressure in the system, the boiler relief valve will weep or open, allowing fresh water to enter the system.
 - 8. Check the condensate drain hose (and pump if installed) and make sure all condensate is being removed from heat exchanger.
 - 9. Review operation with end-user.
 - 10. Complete the Warranty Card and submit it to PB Heat.
 - 11. Hang the Installation, Operation, and Maintenance Manual in an accessible position near the boiler.

8. TROUBLESHOOTING

A. BOILER ERROR

1. When an error condition occurs the controller will display an error code on the display module.
2. These error codes and several suggested corrective actions are included in Table 8.1.
3. In the case of E00, E13, and E14 this error, if uncorrected, will go into a fault condition as described in Paragraph B.

B. BOILER FAULT

1. When a fault condition occurs the controller will illuminate the red "fault" indication light and display a fault code in the format "F###" on the display module.
2. Note the fault code and refer to Table 8.2 for an explanation of the fault code along with several suggestions for corrective actions.
3. Press the reset key to clear the fault and resume operation. Be sure to observe the operation of the unit to prevent a recurrence of the fault.

WARNING

When servicing or replacing any components of this boiler be certain that:

- The gas is off.
- All electrical power is disconnected

DANGER

When servicing or replacing components that are in direct contact with the boiler water, be certain that:

- There is no pressure in the boiler. (Pull the release on the relief valve. Do not depend on the pressure gauge reading).
- The boiler water is not hot
- The electrical power is off

WARNING

Do not use this appliance if any part has been under water. Improper or dangerous operation may result. Contact a qualified service technician immediately to inspect the boiler and to repair or replace any part of the boiler which has been under water.

CAUTION

This appliance has wire function labels on all internal wiring. Observe the position of each wire before removing it. Wiring errors may cause improper and dangerous operation. Verify proper operation after servicing.

CAUTION

If overheating occurs or the gas supply fails to shut off, do not turn off electrical power to the circulating pump. This may aggravate the problem and increase the likelihood of boiler damage. Instead, shut off the gas supply to the boiler at the gas service valve.

Table 8.1: P825 Control Board Error Codes

Code	Description	Duration	Corrective Action
E00	High Limit Exceeded	50 Sec.	<ol style="list-style-type: none"> 1. Check circulation pump operation. 2. Assure that there is adequate flow through the boiler by accessing the status menu and assuring that there is less than a 50°F rise from the return thermistor to the supply thermistor. 3. Replace switch if faulty.
E03	Installer Menu: Parameter 1 is not set to "de"	Until Corrected	<ol style="list-style-type: none"> 1. Open Installer Menu. See 6. D. 8. 2. Change Parameter 1 to "de." 3. Close Installer Menu.
E13	Combustion Fan Speed Low. The boiler combustion air fan speed less than 70% of expected.	60 Sec.	<ol style="list-style-type: none"> 1. Check the combustion air fan wiring. 2. Replace the combustion air fan. 3. Replace the control board.
E14	Combustion Fan Speed High. The boiler combustion air fan speed is more than 130% of expected.	60 Sec.	<ol style="list-style-type: none"> 1. Check the combustion air fan wiring. 2. Replace the combustion air fan. 3. Replace the control board.
PRO	Water Pressure Switch Open	Until Corrected	<ol style="list-style-type: none"> 1. Assure that the system pressure is above 10 psig. 2. Check for leaks in the system piping. 3. Check the switch operation by applying a jumper. (If the switch is not functioning properly replace it.)
FLu	Blocked Vent Pressure Switch Open	Until Corrected	<ol style="list-style-type: none"> 1. Assure that the vent is not blocked. 2. Check the switch operation by applying a jumper. (If the switch is not functioning properly replace it.)

Table 8.2: P825 Control Board Fault Codes

Fault Code	Description	Corrective Action
F00	High Limit Exceeded.	<ol style="list-style-type: none"> 1. Check circulation pump operation. 2. Assure that there is adequate flow through the boiler by accessing the status menu and confirming that there is less than a 50°F rise from the return thermistor to the supply thermistor. 3. If gray thermostat wires are being used, disconnect them and jump them together. If F00 code can be reset check thermostat circuit for short circuit or stray voltage. 4. Check supply temperature reading on LED display. Replace High Limit Switch if supply temperature is below 210°F. 5. Temporarily jump out Water Pressure Switch. If F00 code can be reset check wiring harness and connections. If wiring harness is okay replace Water Pressure Switch.
F01	Vent Temperature Limit Exceeded.	<ol style="list-style-type: none"> 1. Push the red reset button on the switch. 2. Check the flue temperature during operation using a combustion analyzer. 3. Replace the switch if faulty.
F02	Interrupted or Shorted Supply (Outlet) Thermistor.	<ol style="list-style-type: none"> 1. Check the electrical connection to the thermistor on the outlet manifold. 2. Replace thermistor if necessary.
F03	Interrupted or Shorted Return (Intake) Thermistor.	<ol style="list-style-type: none"> 1. Check the electrical connection to the thermistor on the intake manifold. 2. Replace thermistor if necessary.
F05	Supply (Outlet) Temperature exceeded 230°F	<ol style="list-style-type: none"> 1. Check circulation pump operation. 2. Assure that there is adequate flow through the boiler by accessing the status menu and confirming that there is less than a 50°F rise from the return thermistor to the supply thermistor.
F06	Return (Intake) Temperature exceeded 230°F	<ol style="list-style-type: none"> 1. Check circulation pump operation. 2. Assure that there is adequate flow through the boiler by accessing the status menu and confirming that there is less than a 50°F rise from the return thermistor to the supply thermistor.
F09	No flame detected – The boiler will make three attempts at ignition before the control goes into this lockout condition.	<ol style="list-style-type: none"> 1. Watch the igniter through the observation window provided. 2. If there is no spark, check the spark electrode for the proper 1/4" gap. 3. Remove any corrosion from the spark electrode. 4. If there is a spark but no flame, check the gas supply to the boiler. 5. If there is a flame, check the flame sensor.
F10	Loss of Flame Signal – The boiler will relight 4 times before the control goes into this lockout condition.	<ol style="list-style-type: none"> 1. Check the gas pressure to the gas valve while the unit is in operation. 2. Assure that the flame is stable when lit. 3. Check to see if the green light on the display module is out while the boiler is running. 4. If the green light doesn't come on or goes off during operation check the flame signal on the status menu. 5. If the signal reads less than 1 microampere, clean the flame sensor. 6. If the sensor continues to read low, replace it.
F11	False Flame Signal – The boiler will lock out if it senses a flame signal when there should be none present.	<ol style="list-style-type: none"> 1. Turn the gas off to the unit at the service valve. 2. If the flame signal is still present replace the flame rod. 3. If the flame signal is not present after turning off the gas supply, check the gas valve electrical connection. 4. If there is no power to the gas valve, remove the valve and check for obstruction in the valve seat or replace the gas valve. 5. Turn the gas on at the service valve after corrective action is taken.
F13	Combustion Fan Speed Low – The boiler will lock out if it senses that the fan speed is less than 70% of expected for more than 60 seconds.	<ol style="list-style-type: none"> 1. Check the combustion air fan wiring. 2. Replace the combustion air fan. 3. Replace the control board.
F14	Combustion Fan Speed High – The boiler will lock out if the fan speed is more than 130% of expected for more than 60 seconds.	<ol style="list-style-type: none"> 1. Check the combustion air fan wiring. 2. Replace the combustion air fan. 3. Replace the control board.
F18	Gas Valve Error	<ol style="list-style-type: none"> 1. Make sure the connector is correctly connected to the gas valve. 2. Check the electrical wiring from the valve to the control board. 3. Replace the gas valve. 4. Replace control board.
F30	Watchdog	Call factory for further assistance.
F31	Parameter Memory	Call factory for further assistance.
F32	Parameter Memory Write Error	Call factory for further assistance.
F33	Programming Error	Call factory for further assistance.
NC	Neutral Fault – Boiler locks out if it senses a voltage drop or power feedback on the neutral wire.	<ol style="list-style-type: none"> 1. Check for adequate supply voltage. 2. Check for power feedback on the neutral wire.

9. MAINTENANCE

WARNING

Product Safety Information Refractory Ceramic Fiber Product

This appliance contains materials made from refractory ceramic fibers (RCF). Airborne RCF, when inhaled, have been classified by the International Agency for Research on Cancer (IARC), as a possible carcinogen to humans. After the RCF materials have been exposed to temperatures above 1800°F (980°C), they can change into crystalline silica, which has been classified by the IARC as carcinogenic to humans. If particles become airborne during service or repair, inhalation of these particles may be hazardous to your health.

Avoid Breathing Fiber Particulates and Dust

Suppliers of RCF recommend the following precautions be taken when handling these materials:

Precautionary Measures:

Provide adequate ventilation.

Wear a NIOSH/MSHA approved respirator.

Wear long sleeved, loose fitting clothing and gloves to prevent skin contact.

Wear eye goggles.

Minimize airborne dust prior to handling and removal by water misting the material and avoiding unnecessary disturbance of materials.

Wash work clothes separately from others. Rinse washer thoroughly after use.

Discard RCF materials by sealing in an airtight plastic bag.

First Aid Procedures:

Inhalation: If breathing difficulty or irritation occurs, move to a location with fresh clean air. Seek immediate medical attention if symptoms persist.

Skin Contact: Wash affected area gently with a mild soap and warm water. Seek immediate medical attention if irritation persists.

Eye Contact: Flush eyes with water for 15 minutes while holding eyelids apart. Do not rub eyes. Seek immediate medical attention if irritation persists.

Ingestion: Drink 1 to 2 glasses of water. Do not induce vomiting. Seek immediate medical attention.

A. GENERAL (WITH BOILER IN USE)

General boiler observation can be performed by the owner. If any potential problems are found, a qualified installer or service technician/agency must be notified.

1. Remove any combustible materials, gasoline and other flammable liquids and substances that generate flammable vapors from the area where the boiler is contained.
2. Observe general boiler conditions (unusual noises, vibrations, etc.)
3. Observe operating temperature and pressure on the combination gauge located in the supply piping on the left side of the boiler. Boiler pressure should never be higher than 5 psi below the rating shown on the safety relief valve (25 psig maximum for a 30 psig rating). Boiler temperature should never be higher than 240° F.
4. Check for water leaks in boiler and system piping.
5. Smell around the appliance area for gas. If you smell gas, follow the procedure listed in the Lighting Operating Instructions to shut down appliance in Section 7, Start-Up Procedure Part B.

B. WEEKLY (WITH BOILER IN USE)

1. Flush float-type low-water cut-off (if used) to remove sediment from the float bowl as stated in the manufacturer's instructions.

C. ANNUALLY (BEFORE START OF HEATING SEASON)

CAUTION

The following annual inspection must be performed by a qualified service technician.

1. Check boiler room floor drains for proper functioning.
2. Check function of the safety relief valve by performing the following test:
 - a. Check valve piping to determine that it is properly installed and supported.
 - b. Check boiler operating temperature and pressure.
 - c. Lift the try lever on the safety relief valve to the full open position and hold it for at least five seconds or until clean water is discharged.
 - d. Release the try lever and allow the valve to close. If the valve leaks, operate the lever two or three times to clear the valve seat of foreign matter. It may take some time to determine if the valve has shut completely.

- e. If the valve continues to leak, it must be replaced before the boiler is returned to operation.
 - f. Check that operating pressure and temperature have returned to normal.
 - g. Check again to confirm that valve has closed completely and is not leaking.
3. Test low-water cut-off (if used) as described by the manufacturer.
 4. Test limit as described in Section 7, Part C, "Check-Out Procedure".
 5. Test function of ignition system safety shut-off features as described in Section 7, Part C, "Check-Out Procedure".

DANGER

When servicing or replacing components, be absolutely certain that the following conditions are met:

- Water, gas and electricity are off.
- The boiler is at room temperature.
- There is no pressure in the boiler.

6. Remove the top/front jacket panel and inspect for any foreign debris that may have entered through air intake vent.
7. Inspect burner for deterioration. Replace if necessary.
8. With boiler in operation check that condensate is dripping from condensate tubing. Check for any restriction in condensate drain line.

D. CONDENSATE CLEANING INSTRUCTIONS

1. Turn the thermostat down or off so the Pinnacle will not cycle and then follow the steps below.
 - a. Close manual gas shutoff valve.
 - b. Disconnect the condensate tubing from the outside connection (not from the Pinnacle) so flow can be observed.
 - c. Block the air flow in the exhaust by temporarily plugging the exhaust from the outside vent.
 - d. Remove boiler service switch plate. Disconnect two gray thermostat wires from thermostat circuit and jump them together. (Refer to Control Wiring Schematic, Figure 6.1.) This will cause the fan to run at 100% which will then blow out any sediment that has accumulated in the condensate line. (This process should only take a few minutes.)
 - e. The unit should now be ready to re-start.

2. Before re-starting the Pinnacle follow the steps below:
 - a. Reconnect the gray wires and unblock the vent. **(IMPORTANT: MAKE SURE EXHAUST VENT IS NO LONGER BLOCKED!)**
 - b. Open the manual gas shutoff valve and reset the thermostats.
 - c. Observe the boiler function to make sure you see a condensate flow.
 - d. If you do not observe a condensate flow, repeat the above procedure.
3. If the problem is not corrected at this point, it is possible that there is a material deposit problem. Follow the Coil Cleaning Instructions (Subsection 9E) below to dissolve deposits and clean the heat exchanger.
3. Use the nylon or brass brush (do not use steel) and scrub coils to remove any buildup, then vacuum the debris from the coils.
4. Spray coils with clear water, making sure to confine the spray to the area being cleaned (try to avoid wetting the back ceramic wall of the unit). Flush the combustion chamber with fresh water. At this point, the Pinnacle should be ready to power back up.
5. Reinstall the burner plate assembly using the following steps:
 - a. Inspect the inside of the heat exchanger for dirt and debris.
 - b. Install the burner plate assembly and replace the six 10 mm nuts.
 - c. Reconnect the wire leads to the spark igniter, flame sensor and gas valve. (Be sure that the spark igniter is connected to the lead with the large insulated connection boot.) Reconnect two Molex plugs on blower motor.
 - d. Replace the four screws for the 1/2" NPT connector on the gas valve. Turn the gas supply on. **(IMPORTANT: CHECK FOR GAS LEAKS USING A SOAP SOLUTION.)**
 - e. Reset thermostats. **(IMPORTANT: BE SURE THAT THE VENT CONNECTION IS NOT BLOCKED.)**

DANGER

It is extremely important to make sure the exhaust vent is not longer blocked. Failure to do so may result in personal injury or death.

E. COMBUSTION CHAMBER COIL CLEANING INSTRUCTIONS

Before beginning this procedure, you must have on hand the following items:

- a nylon or brass brush (not steel)
- "Rydlime" (recommended for best results) (available online www.rydlime.com) or "CLR" (available at most hardware stores)

1. Shut the boiler down and access the heat exchanger using the following steps:
 - a. Close the manual gas shutoff valve and wait for the unit to be cool to the touch.
 - b. Disconnect the condensate piping from the outside connections (not from the Pinnacle side) so the flow can be observed.
 - c. Remove four screws on the 1/2" NPT connector at the gas valve intake and disconnect the gas valve electrical connector.
 - d. Remove the six 10 mm nuts from the burner plate assembly. Disconnect wire leads to the spark igniter and flame sensor. Disconnect two Molex plugs from blower motor.
 - e. Pull the entire burner plate towards you to access the heat exchanger coils.
2. Using a spray bottle filled with the recommended product "Rydlime" or "CLR", spray liberally on the coils, making sure the solution penetrates and funnels down through the condensate hose. If the condensate hose is blocked, let the chemical penetrate for at least 15 minutes or until it drains.

DANGER

It is extremely important that you check for leaks when reconnecting the gas valve and make sure the exhaust vent is no longer blocked. Failure to do so may result in severe personal injury or death.

- f. Turn the power to the Pinnacle on. Observe the display module to assure proper operation.
- g. Initiate a call for heat** and observe the condensate flow.
- h. Reconnect the condensate piping to the drain connection.

****NOTE: When firing the boiler the first few times you may experience some fluttering of the gas burner that may result in a flame lockout. This is normal and will require you to recycle the unit until this clears up. This is caused by water still present in the combustion chamber.**

6. Inspect exhaust vent and air intake vents for proper support and joint integrity. Repair as necessary. Refer to Section 5, VENTING.

WARNING

Leaks in the vent system will cause products of combustion to enter structure (vent system operates under positive pressure).

7. Inspect exhaust vent and air intake vent terminations for obstructions.

10. BOILER DIMENSIONS & RATINGS

A. BOILER DIMENSIONS

- Figure 10.1 shows the dimensions of the PI-T50 and PI-T80.

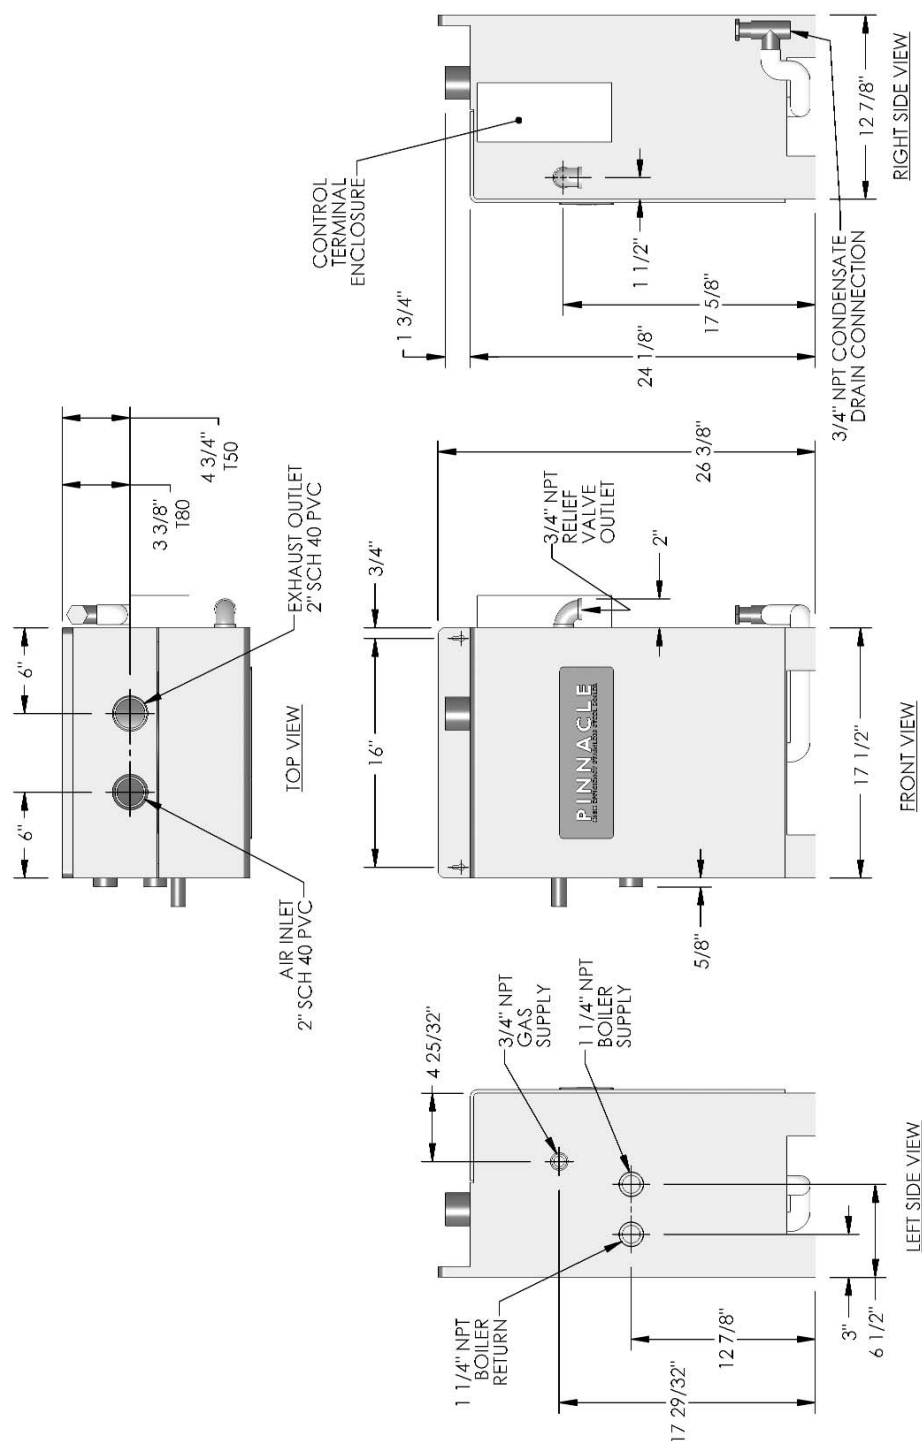


Figure 10.1: PI-T50/PI-T80 Dimensions

2. Figure 10.2 shows the dimensions of the PI-80, PI-140 and PI-199.

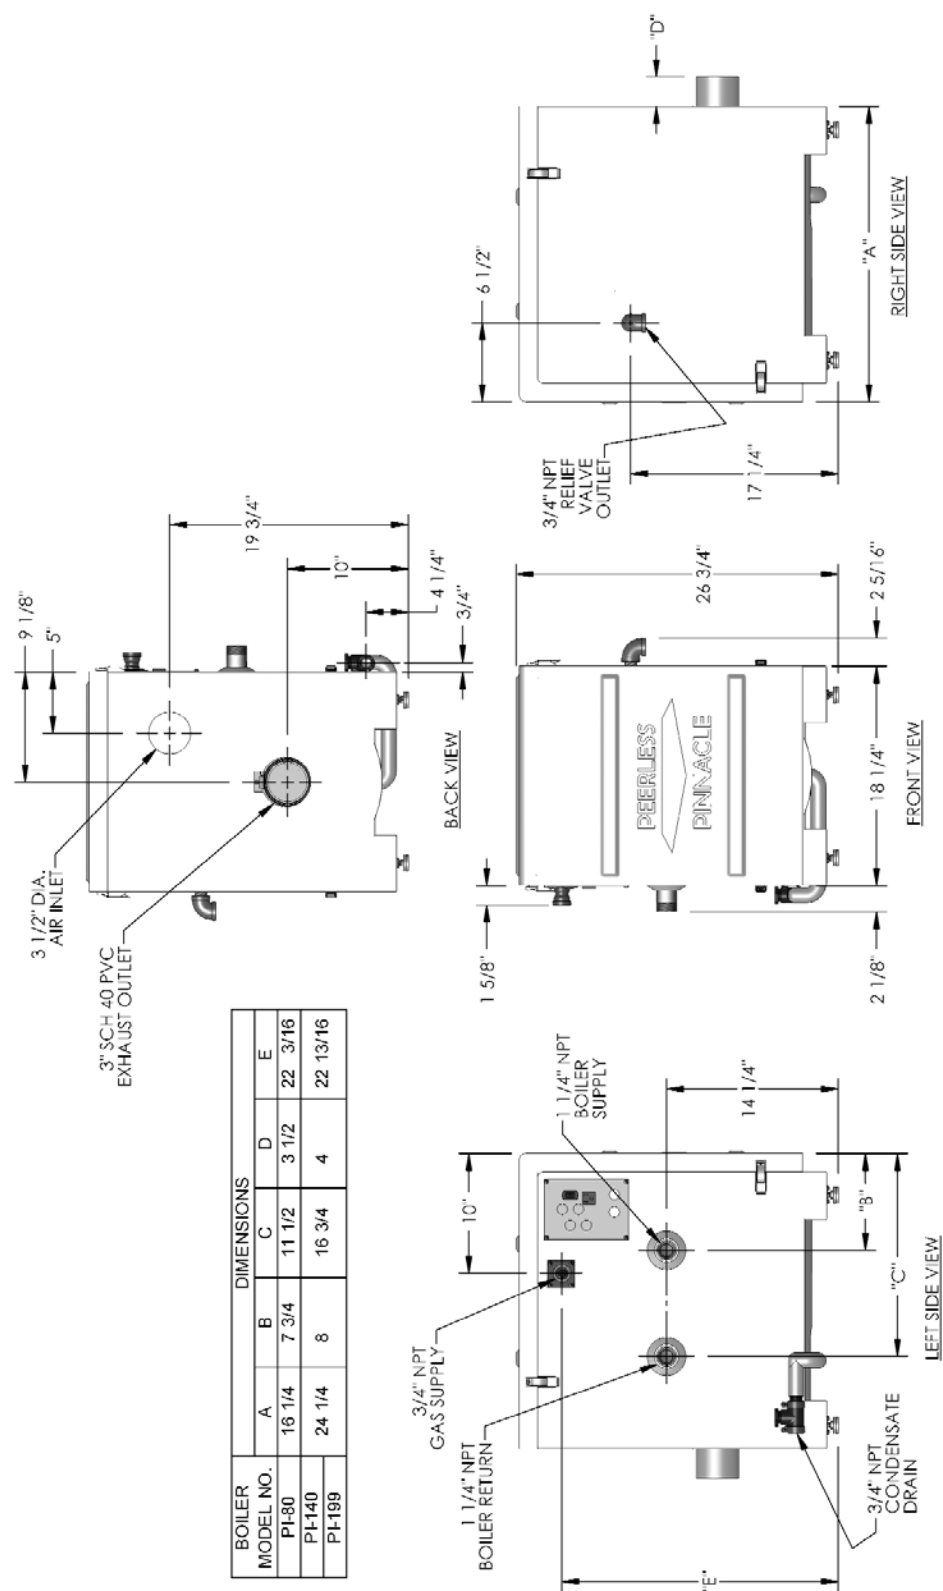



Figure 10.2: PI-80/PI-140/PI-199 Dimensions

BOILER DIMENSIONS & RATINGS

Table 10.1: Boiler Ratings

 Boiler Model	Input, MBH		Heating Capacity³, MBH	Net I=B=R Ratings Water^{1,2}, MBH	AFUE³, %	Shipping Weight, lbs
	Min	Max				
PI-T50	18	50	46	40	95.1	58
PI-T80	19	80	74	64	95.1	58
PI-80	27	80	74	64	95.1	75
PI-140	46	140	129	112	95.1	101
PI-199	66	199	183	159	95.1	111

1. Net I=B=R ratings are based on an allowance of 1.15.
2. Consult factory before selecting a boiler for installations having unusual piping and pickup requirements, such as intermittent system operation, extensive piping systems, etc.
3. Heating Capacity and Annual Fuel Utilization Efficiency (AFUE) ratings are based on U.S. Government Testing. Before purchasing this appliance, read important information about its estimated annual energy consumption or energy efficiency rating that is available from you retailer.

Table 10.2: Combustion Air Fan Speed

Boiler Model	Fan Speed – RPM		
	High Fire	Ignition	Low Fire
PI-T50	3200	3000	1250
PI-T80	4700	3000	1200
PI-80	4300	2765	1600
PI-140	3850	2765	1400
PI-199	5350	2765	1550

Note: These values are subject to change without notice.

Table 10.3: Connection Sizes

Boiler Model	Supply & Return Conn. (NPT)	Relief Valve Outlet (NPT)	Gas Supply Conn. (NPT)	Air Intake & Vent Conn. (Sch 40 PVC)	Condensate Drain Pipe (NPT)
PI-T50	1-1/4"	3/4"	3/4"	2"	3/4"
PI-T80	1-1/4"	3/4"	3/4"	2"	3/4"
PI-80	1-1/4"	3/4"	3/4"	3"	3/4"
PI-140	1-1/4"	3/4"	3/4"	3"	3/4"
PI-199	1-1/4"	3/4"	3/4"	3"	3/4"



This page intentionally left blank.

11. REPAIR PARTS

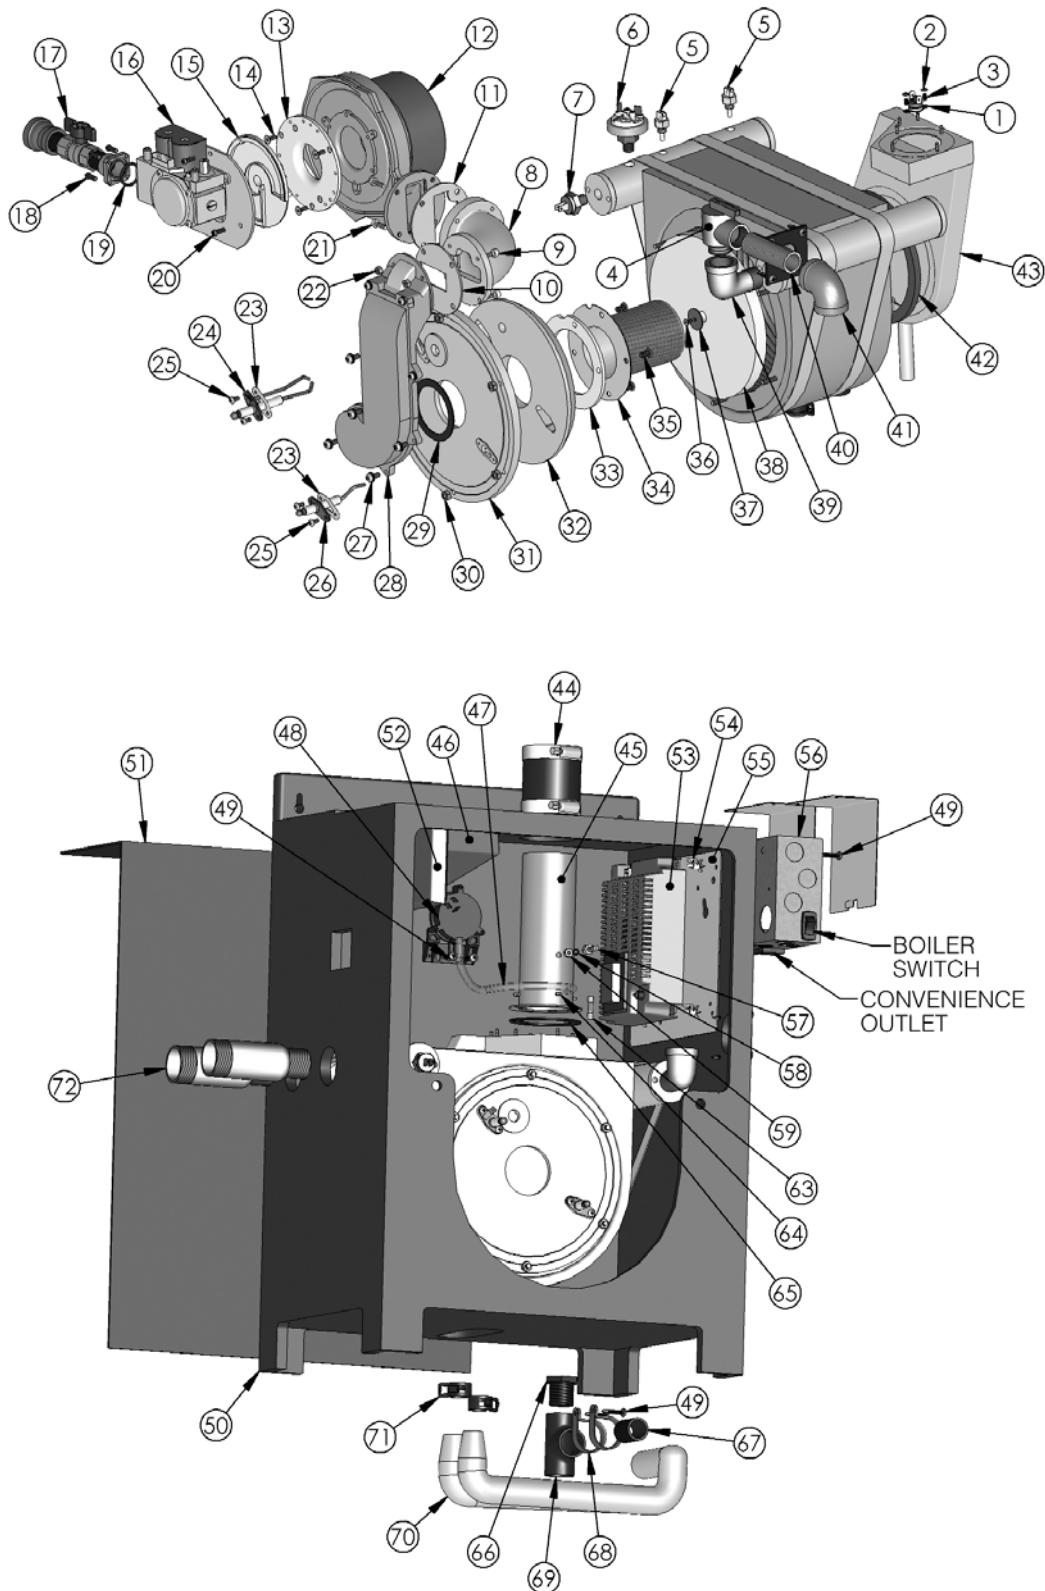


Figure 11.1: PI-T50 and PI-T80 Parts Identification

Table 11.1: PI-T50 and PI-T80 Part Numbers

Item No.	Description	Stock Code
1	Flue Limit Switch	91429
2	Retainer Clip	N/A
3	1/8 ID Tube - Black PVC	N/A
4	Relief Valve	91430
5	Temperature Sensor	91435
6	Water Pressure Limit Switch	91530
7	Water Temperature Limit Switch	91410
8	Pre-Mix Elbow	N/A
9	Screw M5 x 25mm Skt Hd Cap 4mm	N/A
10	Gasket, Pre-Mix Channel Intake	91442
11	Gasket, Blower Outlet	91500
12	Combustion Blower - PI-80	91546
13	Gas Valve Adapter Plate	91545
14	Screw M5 x 12mm Phil Flat Hd	N/A
15	Swirl Plate - PI-T50	91592
	Swirl Plate - PI-T80	91542
16	Gas Valve Combination - PI-T50	91478
	Gas Valve Combination - PI-T80	91479
17	Gas Piping Assembly	N/A
18	Screw M5 x 12mm Skt Hd Cap 4mm	N/A
19	O-Ring	N/A
20	Screw M4 x 18mm Phil Rd Hd - PI-T50	N/A
	Screw M4 x 19mm Phil Rd Hd - PI-T80	N/A
21	Screw M4 x 20mm Skt Hd Cap 4mm	N/A
22	Nut Hex M5	N/A
23	Gasket, Sensor/Ignitor	91491
24	Ignition Electrode - PI-T50	91467
	Ignition Electrode - PI-T80	91411
25	Screw M4-070 x 8mm Phil Rd Hd	N/A
26	Flame Sensor	91412
27	Screw M5 x 22mm Torx T25	N/A
28	Pre-Mix Channel	91604
29	Gasket, Pre-Mix Channel Outlet	91600
30	Nut Hex M6	N/A
31	Burner Door	91601
32	Burner Door Refractory	N/A
33	Gasket, Burner	91440
34	Burner - PI-T50	91472
	Burner - PI-T80	91407

Item No.	Description	Stock Code
35	Screw M6 x 10mm Phil Rd Hd Stainless	N/A
36	Screw M4 x 8mm Skt Flt Hd Stainless	N/A
37	Washer Fender M4 Flat	N/A
38	Target Wall Ceramic	91432
39	3/4 NPT Brass Street Elbow 90°	N/A
40	3/4 NPT Brass Nipple - 3" Lg	N/A
41	3/4 NPT Brass Elbow 90°	N/A
42	Gasket, Flue Collector	91594
43	Flue Collector	91593
44	Flue Adapter	91595
45	Exhaust Manifold Tube	91596
46	Air Intake Baffle	91599
47	Tubing 3/16" ID PVC	N/A
48	Blocked Vent Pressure Limit Switch	91498
49	Screw #8 x 1/2" Phil Rd Hd	N/A
50	Jacket - ABS Plastic	N/A
51	Cover - ABS Plastic	N/A
52	Display Module	N/A
53	P825 Control Board w/ Fuse PI-T50	91564
	P825 Control Board w/ Fuse PI-T80	91565
54	Mounting Clip - Control Board	N/A
55	Mounting Panel - Control Board	N/A
56	Terminal Box	N/A
57	Hose Barb Stainless 1/4 IDT x 10-32	N/A
58	O-Ring 007	N/A
59	Nut Hex 10-32 Stainless	N/A
60	Low Voltage Wiring Harness (Not Shown)	91577
61	9 Pin Wiring Harness (Not Shown)	91580
62	5 Pin Wiring Harness (Not Shown)	91579
63	Spare Fuse	N/A
64	Nut Hex Lock M3	N/A
65	Gasket, Exhaust Tube	91598
66	3/4 NPT Vent Plug, Hex Head PVC	N/A
67	3/4 NPT Nipple, Sch 80	N/A
68	Cable Clamp	N/A
69	3/4 NPT Tee, Sch 40 PVC	N/A
70	Condensate Hose	91518
71	Spring Clamp	N/A
72	Reducing Nipple Brass 1-1/4 NPT x 1 NPT	91499

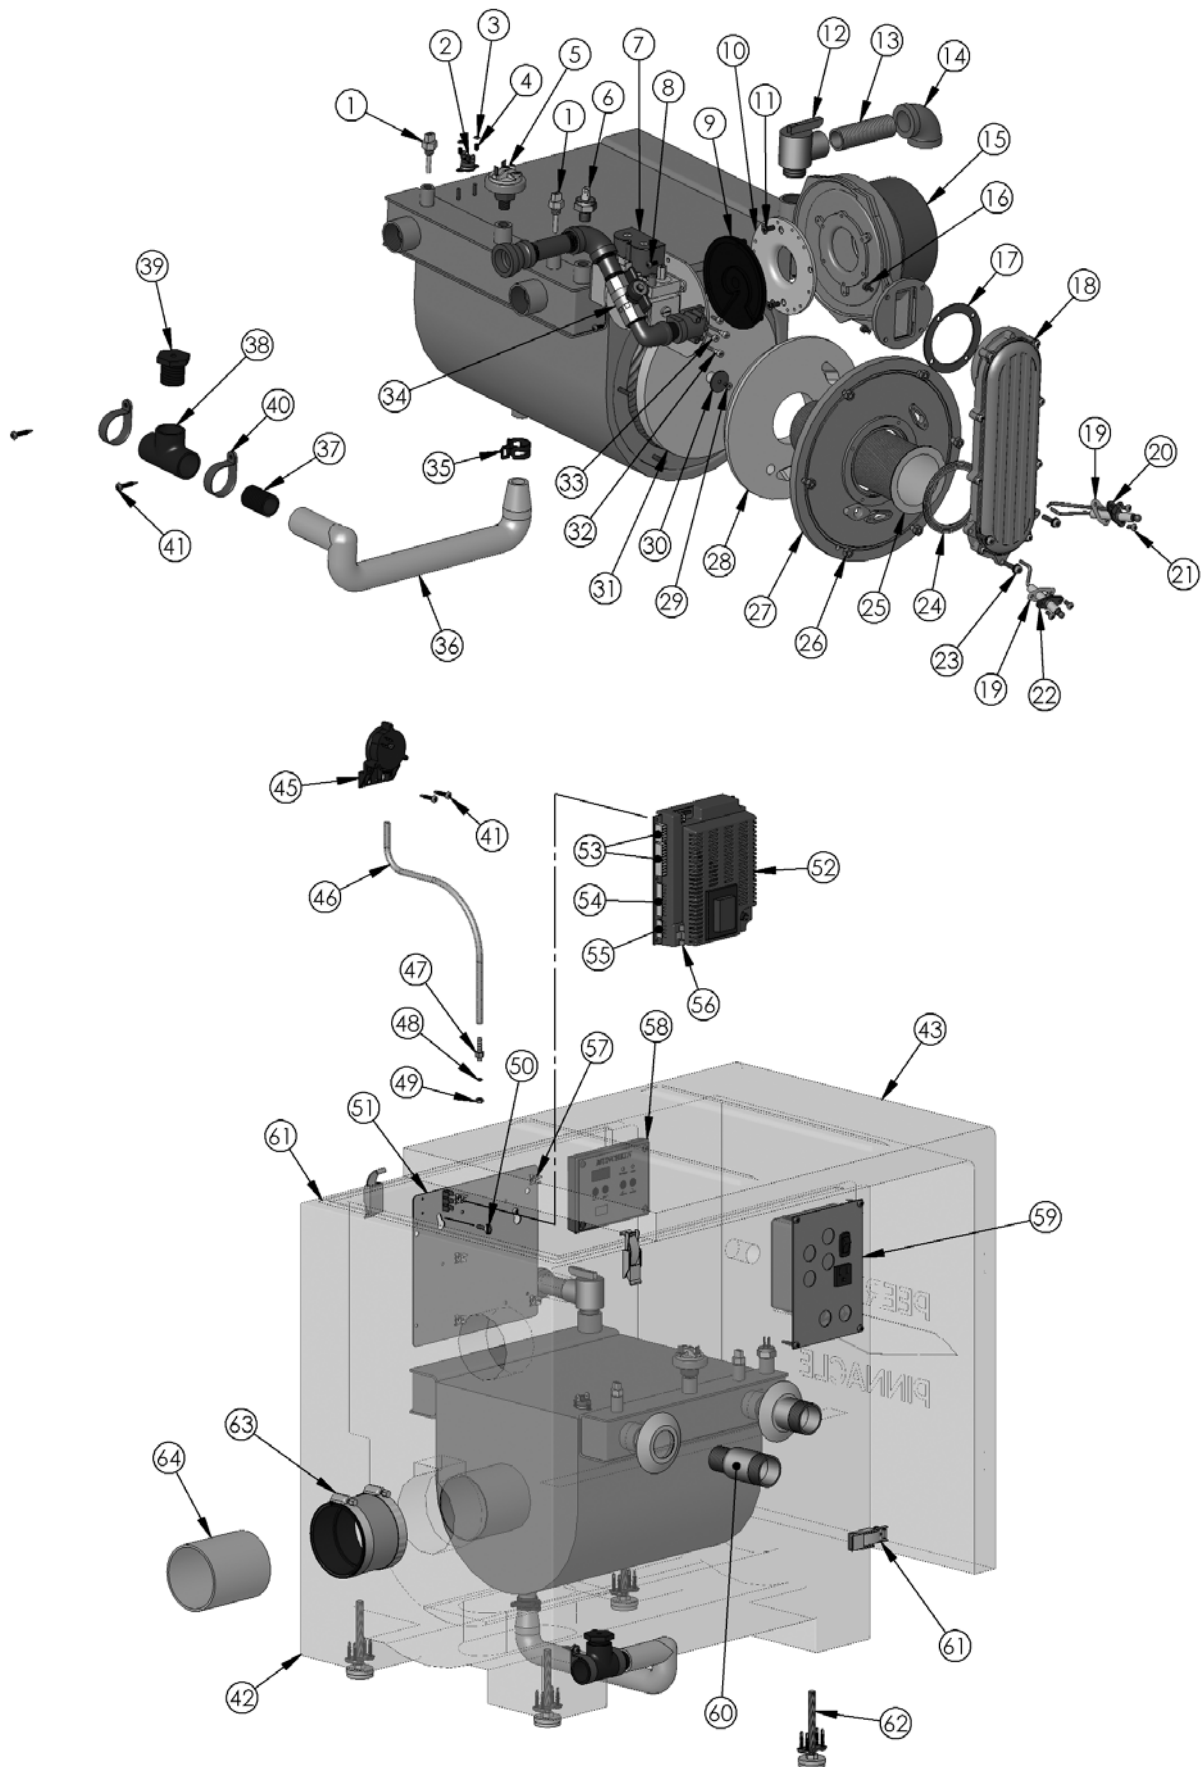


Figure 11.2: PI-80 / PI-140 / PI-199 Parts Identification

Table 11.2: PI-80 / PI-140 / PI-199 Part Numbers

Item No.	Description	Stock Code	Item No.	Description	Stock Code
1	Temperature Sensor	91532	30	Washer M4 Flat	N/A
2	Flue Limit Switch	91429	31	Target Wall Ceramic	91432
3	Retainer Clip (Flue Limit)	N/A	32	Screw M4 x 30mm Skt Hd Cap 4mm	N/A
4	1/8 ID Tube - Black PVC	N/A	33	Screw M4 x 12mm Skt Hd Cap 4mm	N/A
5	Water Pressure Limit Switch	91609	34	Gas Piping Assembly	N/A
6	Water Temperature Limit Switch	91410	35	Spring Clamp	N/A
7	Gas Valve Combination - PI-80	91538	36	Condensate Hose	91576
	Gas Valve Combination - PI-140	91539	37	Nipple - 3/4 NPT x Close Black PVC	N/A
	Gas Valve Combination - PI-199	91540	38	Tee - 3/4 NPT Black PVC	N/A
8	Screw M4 x 12mm Phil Rd Hd	N/A	39	Vent Plug - 3/4 NPT Black PVC	N/A
9	Swirl Plate - PI-80	91542	40	Clamp - Condensate Tee	N/A
	Swirl Plate - PI-140/PI-199	91543	41	Screw #8 X 1/2" Self Tapping Phil Rd Hd	N/A
10	Gas Valve Adapter Plate	91545	42	Jacket - ABS Plastic	N/A
11	Screw M5 x 12mm Phil Flat Hd	N/A	43	Cover - ABS Plastic	N/A
12	Relief Valve	91430	45	Blocked Vent Pressure Limit Switch	91498
13	Nipple - 3/4 NPT x 3	N/A	46	Tubing 3/16" ID PVC	91508
14	Elbow - Brass 3/4 NPT	N/A	47	Hose Barb S.S. 1/4 IDT x 10-32	N/A
15	Combustion Blower - PI-80	91546	48	O-Ring 007	N/A
	Combustion Blower - PI-140	91424	49	Nut Hex 10-32 S.S.	N/A
	Combustion Blower - PI-199	91425	50	Screw 1/4-20 X 3/4" Phil Rd Hd	N/A
16	Screw M5 x 14mm Skt Hd Cap 4mm	N/A	51	Mounting Panel - Control Board	N/A
17	Gasket - Blower Outlet	91547	52	P825 Control Board w/ Fuse - PI-80	91566
18	Premix Channel - PI-80	91548		P825 Control Board w/ Fuse - PI-140	91567
	Premix Channel - PI-140/PI-199	91549		P825 Control Board w/ Fuse - PI-199	91549
19	Gasket - Flame Sensor / Ignitor	91491	53	Low Voltage Wiring Harness (Not Shown)	91577
20	Electrode Spark	91550	54	9 Pin Wiring Harness (Not Shown)	91580
21	Screw M4-070 x 8mm Phil Rd Hd	N/A	55	5 Pin Wiring Harness (Not Shown)	91579
22	Flame Sensor	91551	56	Spare Fuse	N/A
23	Screw M5 x 22mm Torx T25	N/A	57	Clips - Control Board	N/A
24	Gasket - Burner Intake	91552	58	Display Module	91461
25	Burner Element - PI-80	91553	59	Terminal Box	91603
	Burner Element - PI-140	91554	60	Reducing Nipple Brass 1 1/4 NPT x 1 NPT	91499
	Burner Element - PI-199	91555	61	Latch & Gasket Assembly - PI-80	91582
26	Nut Hex M6	N/A		Latch & Gasket Assembly - PI-140 & PI-199	91583
27	Burner Door	91557	62	Leveling Foot	91561
28	Refractory Burner Door	91558	63	Exhaust Coupling	N/A
29	Screw M4 x 8mm Flat Skt Hd 2.5mm	N/A	64	Exhaust Stub - 3" Sch 40 PVC	N/A

APPENDIX A. STARTUP COMBUSTION RECORD

Peerless® Pinnacle® Startup Combustion Record

Contact:			
Company Name:			
Address:			
Phone Number:			
Fax Number:			
Email Address:			
Jobsite Data			
Job Name:			
Jobsite Address:			
Boiler Data			
Boiler Model:		Boiler Serial No.:	
Manufacture Date:		Startup Date:	
Gas Pressure			
Intake Gas Pressure (in. w.c.):		Intake Gas Pressure Drop at Startup:	
High Fire Outlet Gas Pressure (in. w.c.):		Low Fire Outlet Gas Pressure (in. w.c.):	
Combustion Readings			
Flame Signal High Fire (μ A):		Flame Signal Low Fire (μ A):	
CO ₂ High Fire (%):		CO ₂ Low Fire (%):	
CO High Fire (ppm):		CO Low Fire (ppm):	
Fan Speed High Fire:		Fan Speed Low Fire:	
Excess Air High Fire (%):		Excess Air Low Fire (%):	
Exhaust Temperature High Fire (°F):		Exhaust Temperature Low Fire (°F):	
System Information			
Water Pressure:		Condensate Line Size:	
Vent Length (Total Equivalent Feet):		Vent Diameter:	

Peerless® Pinnacle®

Stainless Steel Gas Boilers Rev 2

Installation, Operation & Maintenance Manual

TO THE INSTALLER:

This manual is the property of the owner and must be affixed near the boiler for future reference.

TO THE OWNER:

This boiler should be inspected annually by a Qualified Service Agency.



ASME

CONTROLS



Mixed Sources
Product group from well-managed
forests and recycled wood or fibre

Cert no. SCS-COC-001363
www.fsc.org
© 1996 Forest Stewardship Council



PB HEAT, LLC

131 S. CHURCH STREET • BALLY, PA 19503

PeerlessBoilers.com